# **CONFIGURATION**

### **MAIN PAGE**

On this menu, the user can overview system operations.



The menus can be changed on the right side of the window.

Icons color meaning		
<b>∡</b> Gray	This condition doesn't have to be met because it's disabled	
■ Grayed out	This condition is enabled, but it can't be met right now	
¥Yellow	This condition must be met and is waiting for the person to do it	
<b>∡</b> Green	Everything is okay, you're clear to enter	
■ Orange	From now on you can enter only with L2 allowance	
<b>x</b> Red	Something is wrong, you must not enter	

Status overview			
×	,	It shows occupied status and remaining count to the limit of people	
×	Disinfector status	It shows if person had applied a disinfector	
×	Allowance status	It shows if person has a fever and if he wears a facemask	
×	Card reader	It shows if the use of entry card is needed and the user's level of access	
×	Confirmation status	It shows if the receptionist had left you in and the person's level of access	
×	Enter status	It shows if person should enter or exit	



This is the gate status overview.

G	Gate status overview		
1	Door sensors	It TOF sensor detects person, the entrance arrow light (right) turns on for the people coming in, or the exit arrow light (left) turns on for the people going out	
2	Semaphore status	If both red and green light are turned on, the entrance conditions must be met (card, face sensor, disinfector,), if the green light is turned on you can enter, if the red light is turn on you can't enter. If the semaphore beeper is turned on along with a red light, the person must exit the building immediately. Beeper can be disabled on the System setup menu or it can be set that it resets when the person exits the building	
3	Gate status	It shows if gates are closed or open. Smart Gate system works with all kind of gates: normal, revolving door, sliding door, airport metal detector	
4	Presence status	It shows if the presence sensor has been triggered	

Last update:	2020/06	1/24 11.37

5	Thermo and mask camera status	It shows if person has a fever and if he wears a face mask. It can be set, in the System setup menu, on permission mode, which means the doors are closed and they open if you pass the temperature and mask condition (among the others). Or it can be set on prevention mode, which means the doors are open, but they close if you don't pass that condition		
6	Disinfector status	It shows if a person applied disinfector		
7	Code reader	It shows the status of access		
C	Configuration			
Set count		Set count for total number of people counted in space		
Confirm L1		If the condition for L1 access are met, the button will become enabled		
Confirm L2		If the condition for L2 access are met, the button will become enabled		
Reset alarm		Resets alarm		
Gate auto/gate opened		Switches between gates opening automatically with security measures or opening manually. When they can be opened manually it usually means it's because of emergency and everyone must leave the building immediately		

## **ACCESS SETTINGS**

On this menu, the code and access status can be added.



Configuration		
Edit code Manually input new user's code, alternatively you can scan it with the card scanner		
Туре	Set user level of access, which are L1 for normal users, L2 for VIPs and UL unlimited access (employees)	
Code list	All the users are saved here, choose user to edit it's code and type, holds up to 100 users	
Search	Checks the code list for desired code, which is inputted in the edit code section. The code number and type are then returned	
Save	Saves the created edit code	
Clear	Clears the edit code and type	
Delete	Deletes the code from the code list	

### **SYSTEM SETUP**

When the system is connected and turned on, the technician sets these settings.



Configuration		
Limit 1	This is the limit for normal access, everyone can enter. After this limit is reached, only VIPs and employees can enter (no more L1 access)	
Limit 2	This is the limit for VIP access, L2 and UL can enter. After this limit is reached, only employees can enter (UL access only)	
Counting type	Choose if the counting of people is with digital IO or communication	
Presence time-out	Set how long the presence sensor is active after detecting someone	

Entry gate time-o	out	Set how long the entry doors are open after the TOF sensor has detected someone
		Set how long the exit doors are open after the TOF sensor has detected someone
		Sets duration time of the alarm
Alarm heener		Enable or disable alarm beeper
Reset alarm on e	xit	Enable or disable the reset of alarm on exit
allowance cond	litio	t have to be met if everything is enabled: disinfection and n must be met and then just one of other two conditions means either reader or confirmation condition
Disinfection		Sets if disinfection is necessary for user's level of access, sets time-out that triggers after check
Allowance		Sets if face mask and temperature check is necessary for user's level of access, sets time-out that triggers after check
Reader		Sets if scanning card on the reader is necessary for user's level of access, sets time-out that triggers after check
Confirmation		Sets if receptionist confirmation is necessary for user's level of access, sets time-out that triggers after check
Allowance type		If set on permission, door opens when user is clear to enter after ok allowance check, if set on prevention, door closes when users fails allowance check
Internet access	5	·
Enable push to server		Enable connection to the cloud server (allow controller to send periodical push message to server) every 30 seconds
Test		Send push message instantly
Reset		Reset number of sent messages
Push timer		Shows countdown after which the push message will be sent
Messages		Number of all sent messages and number of successfully sent messages
Roundtrip		Time it takes the message to get to server and the response to come back
The code which employee has on a card or qr code. When the mast code is scanned, red an green light will start flashing. If the master code is scanned, then normal cards are scanned and master code is scanned again, all the normal cards will be added to the code list (if they aren't already on it) and they will be granted L2 access. If mas code is scanned and then scanned again, all the entries on code list be deleted		le is scanned, red an green light will start flashing. If the master le is scanned, then normal cards are scanned and master code is nned again, all the normal cards will be added to the code list (if y aren't already on it) and they will be granted L2 access. If master le is scanned and then scanned again, all the entries on code list will deleted
sent to oth		canned code is not on the code list for that device, a query will be it to other devices in the system. If it gets the response from other vice, that the code is on it's list, access is granted
Process LAN code query	Enable to process code query and send back answer	
LAN query timeout		query timeout. If the device that sent query doesn't get answer in time, it refuses access
Autodetect	todetect It searches for other controllers in the network and opens a menu with found controllers. If the other controller is chosen, you manage this one	
Parameters coi	nfig	uration
Init parameters	_	parameters to the ones saved in permanent memory
· ·		

<sup>-</sup> http://wiki.hiq-universe.com/

Save parameters Save set configuration to the permanent memory			
Read narameters	Read parameters from the permanent memory and write them to work parameters		
ricad parameters	parameters		

### **DISPLAY SETTINGS**




Paramet	ers configu	ıration for alphanumeric display	
Line 1			
Presence		Set text that will be displayed on first line when proximity detector detects someone	
Advertisir	ng 01-09	Set text that will be displayed when proximity detector isn't detecting anybody	
Advertisir	ng text time	Set timer at which the advertising text changes	
Line 2			
Counters		Displays number of people with L1 and with L2 access in the building	
Line 3			
Enter		Set the text that will be displayed when person is allowed to enter	
Disinfect		Set the text that will be displayed when person has to disinfect hands	
Camera		Set the text that will be displayed when person has to look at the camera	
Confirm		Set the text that will be displayed when waiting for confirmation to enter	
Code		Set the text that will be displayed when person has to scan the code	
Occupied		Set the text that will be displayed as long as the limit of people inside is reached	
Fever		Set the text that will be displayed if fever is detected	
Exit		Set the text that will be displayed if the person has to exit the building	
Paramet	ers configu	uration for graphic display	
Caption			
Full	Set text tha	at will be displayed if the place is full	
Level 2	Set text that will be displayed when the limit of people for L1 access is reached and only people with L2 access are allowed to enter		
Level 1	Set text that will be displayed if no limit of people is reached		
Alarm	Set text that will be displayed if alarm is triggered		
Warning	Set text that will be displayed if warning is triggered		
Text			
Enter	Set the text that will be displayed when person is allowed to enter		
Disinfect	Set the text that will be displayed when person has to disinfect hands		
Camera	Set the text	t that will be displayed when person has to look at the camera	
Confirm	Set the text	t that will be displayed when waiting for confirmation to enter	
Code	Set the text that will be displayed when person has to scan the code		


Occupied	Set the text that will be displayed as long as the limit of people inside is reached
Fever	Set the text that will be displayed if fever is detected
Exit	Set the text that will be displayed if the person has to exit the building

#### **CONFIGURATION EXAMPLES FOR DIFFERENT USES**


This configuration is useful when for instance you have two entrances. One is for normal access, doors are open and everyone can enter without having to met any conditions. But the other is for VIPs only. Swiping L2 card or receptionist's confirmation is required to enter.

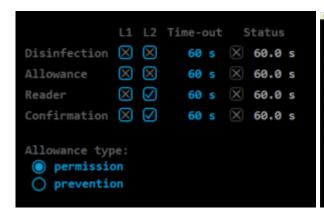




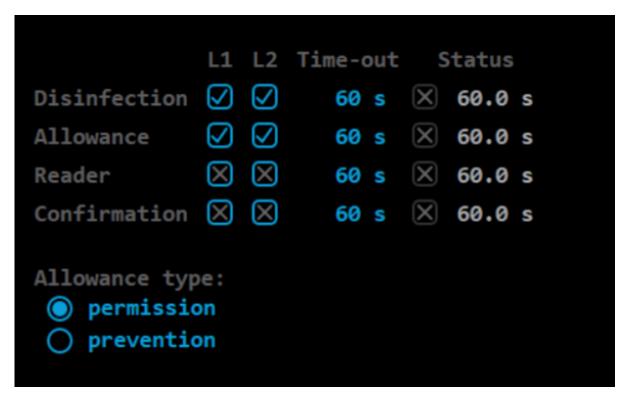




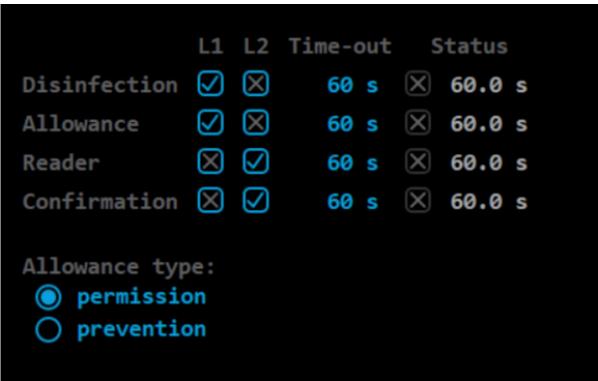


http://wiki.hiq-universe.com/ Printed on 2025/07/06 15:43

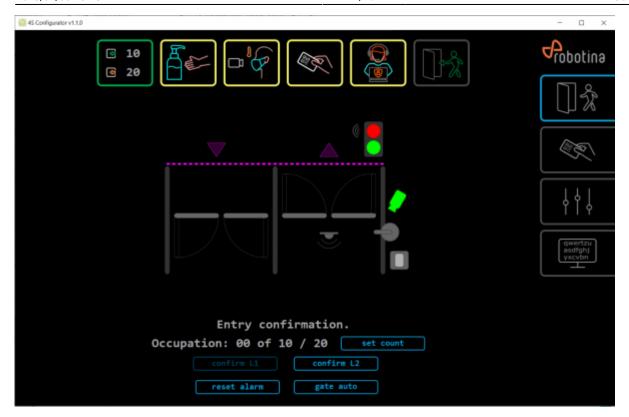

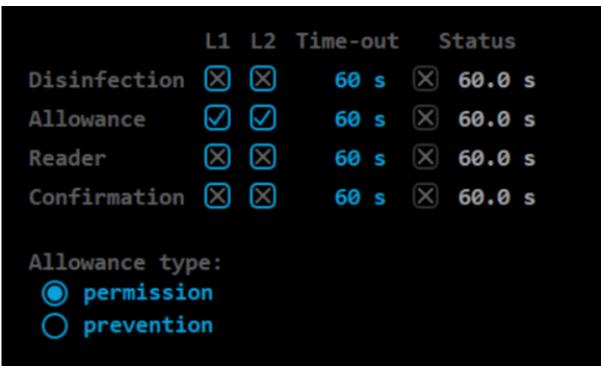



Last update: 2020/06/24 11:37

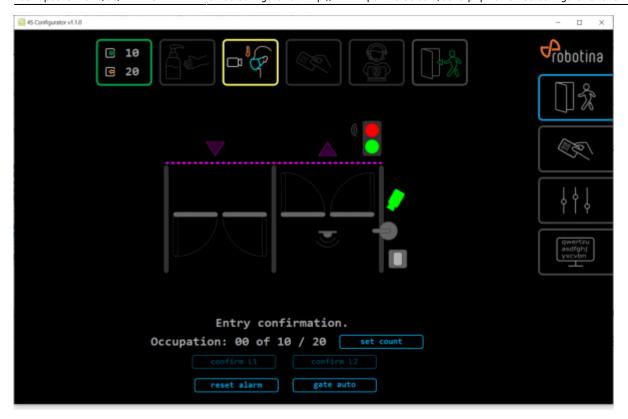




http://wiki.hiq-universe.com/ Printed on 2025/07/06 15:43

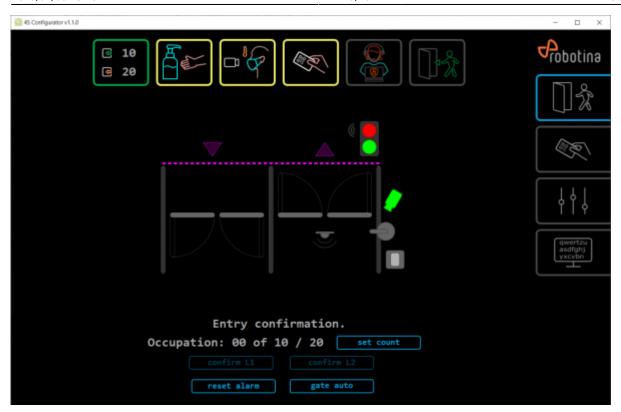

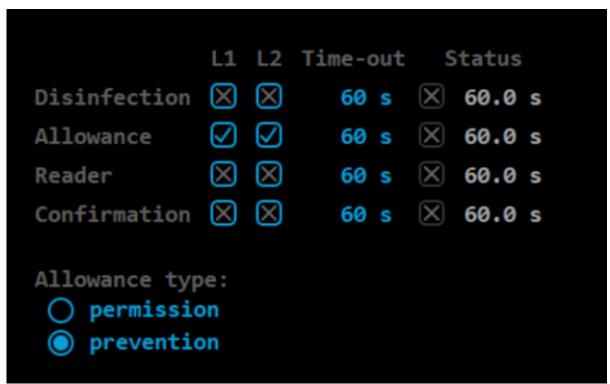

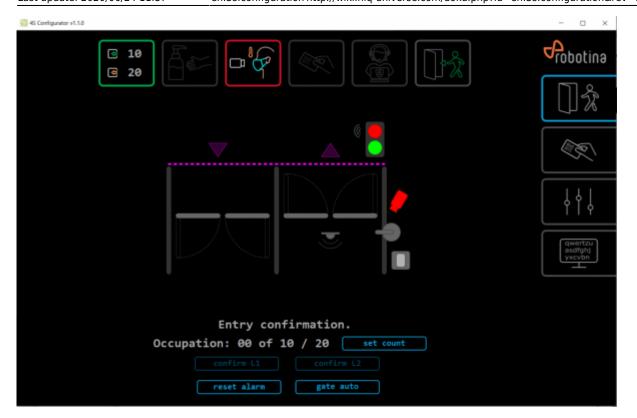

From:

http://wiki.hiq-universe.com/ -

Permanent link:

http://wiki.hiq-universe.com/doku.php?id=en:3s:configuration&rev=1592998667

Last update: 2020/06/24 11:37

