

# FUNCTION

When the person enters the building and stands before the safe gate, presence sensor is triggered. Alphanumeric display, which until now was showing advertising text on first line, will change that line to text that is showed at detected presence. Then you must complete required conditions in order with configuration and depending on your level of access. Firstly you

From:

<http://wiki.hiq-universe.com/> -

Permanent link:

<http://wiki.hiq-universe.com/doku.php?id=en:3s:function&rev=1592814617>

Last update: **2020/06/22 08:30**

