

HIQ Access configurator

Codes management

Edit code	Edited code, click to enter new code
Type	Edited code type, click to select desired type
Access points AP-ID	Access points rights for edited codes (0=no access, 255=unlimited passages, 1..245= limited passages count, decrements with every passage grant).
Active on	Active time for edited code, use arrows to increment/decrement values, click on value to directly enter value or use buttons [now] or [clear]. Enter all 0 for no expire.
Expire on	Expire time for edited code, use arrows to increment/decrement values, click on value to directly enter value or use buttons [now] or [clear]. Enter all 0 for no expire.
[now]	Set actual date / time for expire.
[clr]	Clear expire (code newer expire).
[search]	Search for edited code in code list.
[save]	Save edited code to list.
[clear]	Clear all edited code fields.
[delete]	Delete edited code from list.
Code list	Controller codes list. Click on code to edit it.

HIQ Access configurator v2.0.0

Edit code: #00: 0009963026 Type: 1: Guest

Access point AP-ID:

	0	1	2	3	4	5	6	7	8	9
_0	255	000	000	000	000	000	000	000	000	000
_1	000	000	000	000	000	000	000	000	000	000
_2	000	000	000	000	000	000	000	000	000	000
_3	000	000	000	000	000	000	000	000	000	000
_4	000	000	000	000	000	000	000	000	000	000
_5	000	000	000	000	000	000	000	000	000	000
_6	000	000	000	000	000	000	000	000	000	000
_7	000	000	000	000	000	000	000	000	000	000
_8	000	000	000	000	000	000	000	000	000	000
_9	000	000	000	000	000	000	000	000	000	000

Active on: 00: 00: 00: 00: 00 [now] [clr]

Expire on: 00: 00: 00: 00: 00 [now] [clr]

[search] [save] [clear] [delete]

Code list:

#00: T1 0009963026	#20: T0 0000000000	#40: T0 0000000000	#60: T0 0000000000	#80: T0 0000000000
#01: T1 0009776818	#21: T0 0000000000	#41: T0 0000000000	#61: T0 0000000000	#81: T0 0000000000
#02: T1 0009508038	#22: T0 0000000000	#42: T0 0000000000	#62: T0 0000000000	#82: T0 0000000000
#03: T0 0000000000	#23: T0 0000000000	#43: T0 0000000000	#63: T0 0000000000	#83: T0 0000000000
#04: T0 0000000000	#24: T0 0000000000	#44: T0 0000000000	#64: T0 0000000000	#84: T0 0000000000
#05: T0 0000000000	#25: T0 0000000000	#45: T0 0000000000	#65: T0 0000000000	#85: T0 0000000000
#06: T0 0000000000	#26: T0 0000000000	#46: T0 0000000000	#66: T0 0000000000	#86: T0 0000000000
#07: T0 0000000000	#27: T0 0000000000	#47: T0 0000000000	#67: T0 0000000000	#87: T0 0000000000
#08: T0 0000000000	#28: T0 0000000000	#48: T0 0000000000	#68: T0 0000000000	#88: T0 0000000000
#09: T0 0000000000	#29: T0 0000000000	#49: T0 0000000000	#69: T0 0000000000	#89: T0 0000000000
#10: T0 0000000000	#30: T0 0000000000	#50: T0 0000000000	#70: T0 0000000000	#90: T0 0000000000
#11: T0 0000000000	#31: T0 0000000000	#51: T0 0000000000	#71: T0 0000000000	#91: T0 0000000000
#12: T0 0000000000	#32: T0 0000000000	#52: T0 0000000000	#72: T0 0000000000	#92: T0 0000000000
#13: T0 0000000000	#33: T0 0000000000	#53: T0 0000000000	#73: T0 0000000000	#93: T0 0000000000
#14: T0 0000000000	#34: T0 0000000000	#54: T0 0000000000	#74: T0 0000000000	#94: T0 0000000000
#15: T0 0000000000	#35: T0 0000000000	#55: T0 0000000000	#75: T0 0000000000	#95: T0 0000000000
#16: T0 0000000000	#36: T0 0000000000	#56: T0 0000000000	#76: T0 0000000000	#96: T0 0000000000
#17: T0 0000000000	#37: T0 0000000000	#57: T0 0000000000	#77: T0 0000000000	#97: T0 0000000000
#18: T0 0000000000	#38: T0 0000000000	#58: T0 0000000000	#78: T0 0000000000	#98: T0 0000000000
#19: T0 0000000000	#39: T0 0000000000	#59: T0 0000000000	#79: T0 0000000000	#99: T0 0000000000

Access events list

date	event date
time	event time
event	event code
event data	event data

HIQ Access configurator v1.2.0

Access events list:

date	time	event	event data
yyyymmdd	hhmmss.ddd		
#00	20201022	125056.000	001000 0000000001
#01	00000000	000000.000	000000 0000000000
#02	00000000	000000.000	000000 0000000000
#03	00000000	000000.000	000000 0000000000
#04	00000000	000000.000	000000 0000000000
#05	00000000	000000.000	000000 0000000000
#06	00000000	000000.000	000000 0000000000
#07	00000000	000000.000	000000 0000000000
#08	00000000	000000.000	000000 0000000000
#09	00000000	000000.000	000000 0000000000
#10	00000000	000000.000	000000 0000000000
#11	00000000	000000.000	000000 0000000000
#12	00000000	000000.000	000000 0000000000
#13	00000000	000000.000	000000 0000000000
#14	00000000	000000.000	000000 0000000000
#15	00000000	000000.000	000000 0000000000
#16	00000000	000000.000	000000 0000000000
#17	00000000	000000.000	000000 0000000000
#18	00000000	000000.000	000000 0000000000
#19	00000000	000000.000	000000 0000000000

LEGEND:

event	event_data	description
001000	reset_counter	Controller reset ri
0040ri	0	Master delete code for access point ri
0041ri	0	Master all code for access point ri
0042ri	code	Master add code for access point ri
0050ri	code	Local access grant for access point ri
0051ri	code	Remote access grant for access point ri
0052ri	code	Access not grant for access point ri
006000	code	Local code deletion (Configurator)
006100	code	Add / change code locally (Configurator)
007000	code	Remote code deletion (HIQ Universe)
007100	code	Remote code addition (HIQ Universe)
007200	code	Remote code modification (HIQ Universe)

Access settings

Code readers settings	
Code	Code read by reader, click for manual entry
R-ID	Reader ID; link reader to access point ("show" or lock)
Type	Access point type (- / Master ADD / Master All), click to toggle
State	State of access point.
Access points settings	
AP-ID	Access point ID; link to code rights
Show: R-ID	Link to reader ID; link to the reader for signaling the access point
Show: OUT	Show output (click to toggle)
Show: Tout	Show time-out
Lock: R-ID	Link to reader ID; link to the reader for unlocking the access point
Lock: OUT	Lock output (click to toggle)

Lock: Tout	Lock time-out
General settings	
Master code	Master code for auxiliary code management
[Parameters init]	Click to initialize all parameters to factory defaults
[Parameters save]	Click to save all parameters to permanent memory
[Parameters read]	Click to read all parameters from permanent memory
Access HW modules	Detected modules are displayed unmasked.
[Autodetect]	Press to find HIQ Access controller in local network.

HIQ Access configurator v2.0.0

robotina

	Code	R-ID	Type	State	AP-ID	R-ID	Show	Tout	Lock	R-ID	OUT	Tout
R 0	0000000000	0	-	Idle	AP 0	0	-1	5 s	0	2 s		
R 1	0000000000	1	-	Idle	AP 1	1	-1	5 s	1	2 s		
R 2	0000000000	2	-	Idle	AP 2	2	-1	5 s	2	2 s		
R 3	0000000000	3	-	Idle	AP 3	3	-1	5 s	3	2 s		
R 4	0000000000	4	-	Idle	AP 4	4	-1	5 s	4	2 s		
R 5	0000000000	5	-	Idle	AP 5	5	-1	5 s	5	2 s		
R 6	0000000000	6	-	Idle	AP 6	6	-1	5 s	6	2 s		
R 7	0000000000	7	-	Idle	AP 7	7	-1	5 s	7	2 s		
R 8	0000000000	8	-	Idle	AP 8	8	-1	5 s	8	2 s		
R 9	0000000000	9	-	Idle	AP 9	9	-1	5 s	9	2 s		

Master code: -100030586

Parameters init Parameters save Parameters read

MC CR0 CR1 CR2 CR3 CR4

c30586 500 501 502 503 504

Autodetect

From:

<https://wiki.hiq-universe.com/> -

Permanent link:

<https://wiki.hiq-universe.com/doku.php?id=en:access-iq:configurator>

Last update: 2021/04/20 07:37

