

HIQ Access @ Home configurator

The configurator is simplified and adapted for home use:

- 10 access codes (unlimited validity),
- 2 access points (unlimited passage count).

Access codes	Access codes list. Click on check-box to toggle access right.
[add]	Click to add new access code.
[del]	Deletes access code.
Master code	Click to enter new master code.
Lock icon	Access point lock status. Click to toggle.
Timeout	Lock timeout.
[Parameters init]	Click to reset parameters to factory defaults.
[Parameters save]	Click to save parameters to permanent memory.
[Parameters read]	Click to read parameters from permanent memory.
Access events list	Last 20 access events.
[Autodetect]	Click to find access controller in local network.
Modules icons	Modules without error are not masked.

HIQ Access @ Home configurator v1.0.2

Access codes

Code	Access point 1	Access point 2	Action
Code 01: 0009606698	☒	☐	add del
Code 02: 0009591577	☒	☒	del
Code 03: 0009531918	☒	☒	del
Code 04: 0000000000	☐	☐	del
Code 05: 0000000000	☐	☐	del
Code 06: 0000000000	☐	☐	del
Code 07: 0000000000	☐	☐	del
Code 08: 0000000000	☐	☐	del
Code 09: 0000000000	☐	☐	del
Code 10: 0000000000	☐	☐	del

Master code: 0009568339

Access events list:

#	date yyyymmdd	time hhmmss.ddd	code	reader	event
#00	20200407	154052.864	0009606698	102	access not allowed
#01	20200407	153734.915	0009606698	001	access not allowed
#02	20200407	145150.653	0009606698	001	access not allowed
#03	20200407	145147.047	0009568339	001	master - allow all
#04	20200407	145140.702	0009606698	001	access grant local
#05	20200407	145134.627	0009576779	001	access grant local
#06	20200407	145130.648	0009568339	001	master - allow all
#07	20200407	145124.700	0009602165	001	access not allowed
#08	20200407	145121.797	0009576779	001	access not allowed
#09	20200407	145115.194	0009531918	001	access grant local
#10	20200407	145113.170	0009606698	001	access not allowed
#11	20200407	145103.772	0009591577	001	access grant local
#12	20200406	121730.413	0009591577	001	access grant local
#13	20200406	121719.657	0009591577	000	access grant local
#14	20200406	121718.486	0009591577	001	access grant local
#15	20200406	121713.971	0009591577	000	access grant local
#16	20200406	121707.025	0009591577	001	access grant local
#17	20200406	121653.561	0009591577	999	app. - save code
#18	20200406	121652.972	0009591577	999	app. - save code
#19	20200406	121455.046	0009531918	999	app. - save code

Lock Timeout: Access point 1 ☐ 5 s Access point 2 ☐ 5 s

Parameters init Parameters save Parameters read

Autodetect MC CR0 c30013 500

robotina

From:

<https://wiki.hiq-universe.com/> -

Permanent link:

https://wiki.hiq-universe.com/doku.php?id=en:access-iq:home_configurator

Last update: **2021/04/08 09:13**

