

# HIQ Access @ Home configurator

The configurator is simplified and adapted for home use:

- 10 access codes (unlimited validity),
- 2 access points (unlimited passage count).

<b>Access codes</b>	Access codes list. Click on check-box to toggle access right.
[ add ]	Click to add new access code.
[ del ]	Deletes access code.
<b>Master code</b>	Click to enter new master code.
<b>Lock icon</b>	Access point lock status. Click to toggle.
<b>Timeout</b>	Lock timeout.
[ Parameters init ]	Click to reset parameters to factory defaults.
[ Parameters save ]	Click to save parameters to permanent memory.
[ Parameters read ]	Click to read parameters from permanent memory.
<b>Access events list</b>	Last 20 access events.
[ Autodetect ]	Click to find access controller in local network.
<b>Modules icons</b>	Modules without error are not masked.

The screenshot shows the HIQ Access @ Home configurator v1.0.2 software window. The interface is divided into several sections:

- Access codes:** A table with columns for Access point 1 (checkboxes) and Access point 2 (checkboxes). It includes an "add" button and a "del" button. Below the table, it says "Master code: 0009568339".
- Access events list:** A table with columns: date (yyyyymmdd), time (hhmmss.ddd), code, reader, and event. The data shows various access logs from 20200407 to 20200406.
- Configuration:** At the bottom, there are settings for Access point 1 and Access point 2, including Lock (checkboxes), Timeout (5 s), and buttons for Parameters init, Parameters save, and Parameters read. There is also an Autodetect button and module status indicators for MC (c30013) and CR0 (500).

From:

<http://wiki.hiq-home.com/> -



Permanent link:

[http://wiki.hiq-home.com/doku.php?id=en:access-iq:home\\_configurator](http://wiki.hiq-home.com/doku.php?id=en:access-iq:home_configurator)

Last update: **2021/04/08 09:13**