

# HEMS G2 Methods & Resources

<a href="#">Wiring</a>	HEMS G2 wiring principles
<a href="#">Commissioning</a>	HEMS G2 commissioning

## SAFETY INSTRUCTION

**Before start with installation, assembly, disassembly, inspection, or any other operation read safety instructions. They contain general safety information for devices approved by Robotina d.o.o..**



**DANGER!**

**Disregard manufacturer's safety instructions could result in material damage, injury or even death.**



**DANGER!**

**During operation is device under load!**



**WARNING!**

**Before installation, disassembly, inspection, or any other operation, make sure that the device is disconnected from the power supply and that with your doing you don't endanger yourself or others.**



**WARNING!**

**Don't try to open the device. Any interference or change may impact device's properties and significantly affect safety.**



**WARNING!**

**Before connecting device to the power supply, assure that all wires are connected in accordance with the manufacturer's instructions.**

Before continue with installation read the manufacturer's installation requirements:

- Installation and electrical connection of the equipment described in this manual must be carried out by qualified or authorized personnel.
- The device must be installed inside the electric box where cannot endanger people or environment.
- During the operation device must not be exposed to humidity, dust, mold or other weather phenomena.
- All connected wires must comply with manufacturer's specifications.
- For installation use only verified electrical-installations tools.

- Around the device has to be assured sufficient ventilation space.
- The manufacturer does not undertake any liability for material or personal damage resulting from use or handling which is not in accordance with the manufacturer's safety instructions.

From:  
<http://wiki.hiq-universe.com/> -

Permanent link:  
[http://wiki.hiq-universe.com/doku.php?id=en:hems:methods\\_resources&rev=1539083348](http://wiki.hiq-universe.com/doku.php?id=en:hems:methods_resources&rev=1539083348)

Last update: **2018/10/09 11:09**

