

# HEMS v1.2.0 HW selection table

## KIT

| name                        | description                             | code         | status    | mounting                |
|-----------------------------|---|--------------|-----------|-------------------------|
| <a href="#">HEMS set 1P</a> | HEMS starter kit, single phase          | HEMS-1P-D-02 | available | Cabinet; DIN rail 6+1 M |
| <a href="#">HEMS set 1P</a> | HEMS starter kit, EnOcean, single phase | HEMS-1P-D-01 | available | Cabinet; DIN rail 6+1 M |
| <a href="#">HEMS set 3P</a> | HEMS starter kit, three phase           | HEMS-3P-D-02 | available | Cabinet; DIN rail 6+4 M |
| <a href="#">HEMS set 3P</a> | HEMS starter kit, EnOcean, three phase  | HEMS-3P-D-01 | available | Cabinet; DIN rail 6+4 M |

## HIQ controllers & linkers

Nothing found

## Accessories

| name   | description                       | code          | status    | mounting          |
|--|-----------------------------------|---------------|-----------|-------------------|
| <a href="#">Temperature sensor</a>               | Steel tube housing IP 67, 5m wire | ES-B-IQ       | available |                   |
| <a href="#">Temperature sensor</a>               | white housing, terminals          | ES-W-OW-WHITE | available | In-field; on wall |
| <a href="#">Temperature sensor</a>               | ivory housing, terminals          | ES-W-OW-IVORY | available | In-field; on wall |
| <a href="#">Temperature and Humidity Sensor</a>  | Temperature and Humidity Sensor   | RB-100-TH     | available | wall              |
| <a href="#">Wireless Modbus-to-Modbus bridge</a> | Wireless Modbus-to-Modbus bridge  | WM-1          | available | Cabinet, in-field |
| <a href="#">Wireless Modbus Relay</a>            | Wireless Modbus Relay             | WR-1          | available | Cabinet, in-field |

## Power sensors

| name  | description                        | code       | status    | mounting              |
|---|------------------------------------|------------|-----------|-----------------------|
| <a href="#">Single phase power-sensor</a>     | 1-phase power sensor, DIN rail     | PM1-E-D    | available | Cabinet, DIN rail 1M  |
| <a href="#">Single phase power-sensor, CT</a> | 1-phase power sensor, DIN rail, CT | PM1-E-D-CT | available | Cabinet; DIN rail 1 M |

| name   | description                                     | code       | status    | mounting              |
|--|---|------------|-----------|-----------------------|
| <a href="#">Three phase power-sensor</a>     | 3-phase power sensor, DIN rail                  | PM3-I-D    | available | Cabinet; DIN rail 3 M |
| <a href="#">Three phase power sensor</a>     | 3-phase power sensor, DIN rail                  | PM3-E-D    | available | Cabinet, DIN rail 4M  |
| <a href="#">Three phase power sensor, CT</a> | 3-phase power sensor, DIN rail, CT              | PM3-E-D-CT | available | Cabinet; DIN rail 4 M |
| <a href="#">1-ph current transformer</a>     | 1-phase split core current transformer, 50A     | CT-1-E-50  | available | on wire               |
| <a href="#">3-ph current transformer</a>     | 3-phase split core current transformer, 50-400A | CT-3-E-XX  | available | on wire               |

## EnOcean

| name  | description                                       | code      | status    | mounting               |
|---|---|-----------|-----------|------------------------|
| <a href="#">Smart plug</a>                      | EnOcean wireless smart plug with metering, Schuko | SCM-WE-F  | available | In-field; power outlet |
| <a href="#">Micro smart plug</a>                | EnOcean wireless micro smart plug, Schuco         | SMM-WE-F  | available | In-field; power outlet |
| <a href="#">Temperature sensor</a>              | EnOcean wireless temperature sensoren             | TS-WE-W1  | request   | In-field; on wall      |
| <a href="#">Temperature and humidity sensor</a> | EnOcean wireless temperature and humidity sensor  | TSH-WE-W1 | request   | In-field; on wall      |
| <a href="#">Relay Switch</a>                    | EnOcean wireless relay switch, 1 channel          | RS1-WE-F1 | request   | In-field; flush box    |
| <a href="#">Relay Switch</a>                    | EnOcean wireless relay switch, 2 channels         | RS2-WE-F2 | request   | In-field; flush box    |

From:  
<http://wiki.hiq-universe.com/> -

Permanent link:  
[http://wiki.hiq-universe.com/doku.php?id=en:hems\\_v1\\_2\\_0:hardware&rev=1632214321](http://wiki.hiq-universe.com/doku.php?id=en:hems_v1_2_0:hardware&rev=1632214321)

Last update: **2021/09/21 08:52**

