

# HEMS v1.2.0 HW selection table

## KIT

name	description	code	status	mounting
<a href="#">HEMS set 1P</a>	HEMS starter kit, single phase	HEMS-1P-D-02	available	Cabinet; DIN rail 6+1 M
<a href="#">HEMS set 1P</a>	HEMS starter kit, Enocan, single phase	HEMS-1P-D-01	available	Cabinet; DIN rail 6+1 M
<a href="#">HEMS set 3P</a>	HEMS starter kit, three phase	HEMS-3P-D-02	available	Cabinet; DIN rail 6+4 M
<a href="#">HEMS set 3P</a>	HEMS starter kit, Enocan, three phase	HEMS-3P-D-01	available	Cabinet; DIN rail 6+4 M

## HIQ controllers & linkers

Nothing found

## Accessories

name	description	code	status	mounting
<a href="#">Temperature sensor</a>	Steel tube housing IP 67, 5m wire	ES-B-IQ	available	
<a href="#">Temperature sensor</a>	white housing, terminals	ES-W-OW-WHITE	available	In-field; on wall
<a href="#">Temperature sensor</a>	ivory housing, terminals	ES-W-OW-IVORY	available	In-field; on wall
<a href="#">Temperature and Humidity Sensor</a>	Temperature and Humidity Sensor	RB-100-TH	available	wall
<a href="#">Wireless Modbus-to-Modbus bridge</a>	Wireless Modbus-to-Modbus bridge	WM-1	available	Cabinet, in-field
<a href="#">Wireless Modbus Relay</a>	Wireless Modbus Relay	WR-1	available	Cabinet, in-field

## Power sensors

name	description	code	status	mounting
<a href="#">Single phase power-sensor</a>	1-phase power sensor, DIN rail	PM1-E-D	available	Cabinet, DIN rail 1M
<a href="#">Single phase power-sensor, CT</a>	1-phase power sensor, DIN rail, CT	PM1-E-D-CT	available	Cabinet; DIN rail 1 M

name	description	code	status	mounting
<a href="#">Three phase power-sensor</a>	3-phase power sensor, DIN rail	PM3-I-D	available	Cabinet; DIN rail 3 M
<a href="#">Three phase power sensor</a>	3-phase power sensor, DIN rail	PM3-E-D	available	Cabinet, DIN rail 4M
<a href="#">Three phase power sensor, CT</a>	3-phase power sensor, DIN rail, CT	PM3-E-D-CT	available	Cabinet; DIN rail 4 M
<a href="#">1-ph current transformer</a>	1-phase split core current transformer, 50A	CT-1-E-50	available	on wire
<a href="#">3-ph current transformer</a>	3-phase split core current transformer, 50-400A	CT-3-E-XX	available	on wire

## EnOcean

name	description	code	status	mounting
<a href="#">Smart plug</a>	Enocean wireless smart plug with metering, Schuko	SCM-WE-F	available	In-field; power outlet
<a href="#">Micro smart plug</a>	Enocean wireless micro smart plug, Schuco	SMM-WE-F	available	In-field; power outlet
<a href="#">Temperature sensor</a>	Enocean wireless temperature sensoren	TS-WE-W1	request	In-field; on wall
<a href="#">Temperature and humidity sensor</a>	Enocean wireless temperature and humidity sensor	TSH-WE-W1	request	In-field; on wall
<a href="#">Relay Switch</a>	Enocean wireless relay switch, 1 channel	RS1-WE-F1	request	In-field; flush box
<a href="#">Relay Switch</a>	Enocean wireless relay switch, 2 channels	RS2-WE-F2	request	In-field; flush box

From:  
<https://wiki.hiq-universe.com/> -

Permanent link:  
[https://wiki.hiq-universe.com/doku.php?id=en:hems\\_v1\\_2\\_0:hardware&rev=1632214321](https://wiki.hiq-universe.com/doku.php?id=en:hems_v1_2_0:hardware&rev=1632214321)

Last update: **2021/09/21 08:52**

