

Firmware update

CyBroBinLoader software

- Download latest CyBroBinLoader.exe from www.cybrotech.com
- Run CybroBinLoader.exe
- In case Windows OS is blocking execution, click on more info and run anyway

	<p>CyBroBinLoader-v3.0.3.exe</p> <p>Update Cybro kernel and plc program. Also able to set alias, model, baudrate, IP address, Modbus id, and dump controller memory. Works in local network, internet connection is not supported.</p>	<p>766.50 KB 2021-07-17</p>	 
---	---	-----------------------------	--


Firmware upload


- Download latest HEMS firmware from: en:hems_v1_2_0:download

</WRAP>

Installation and mounting

-  Carefully open WM-1 module and configure serial communication with jumpers. (Default configuration is 9600bps, 8N1 with normal timeout)
-  Place WM-1 module at least 10cm from other objects. Installation is not recommended inside metal cabinets.
- Connect RS485 terminals to WM-1 RS485 terminals
 - A - A
 - B - B
 - C - GND
- Connect to 230V power supply
- Configure radio pairing

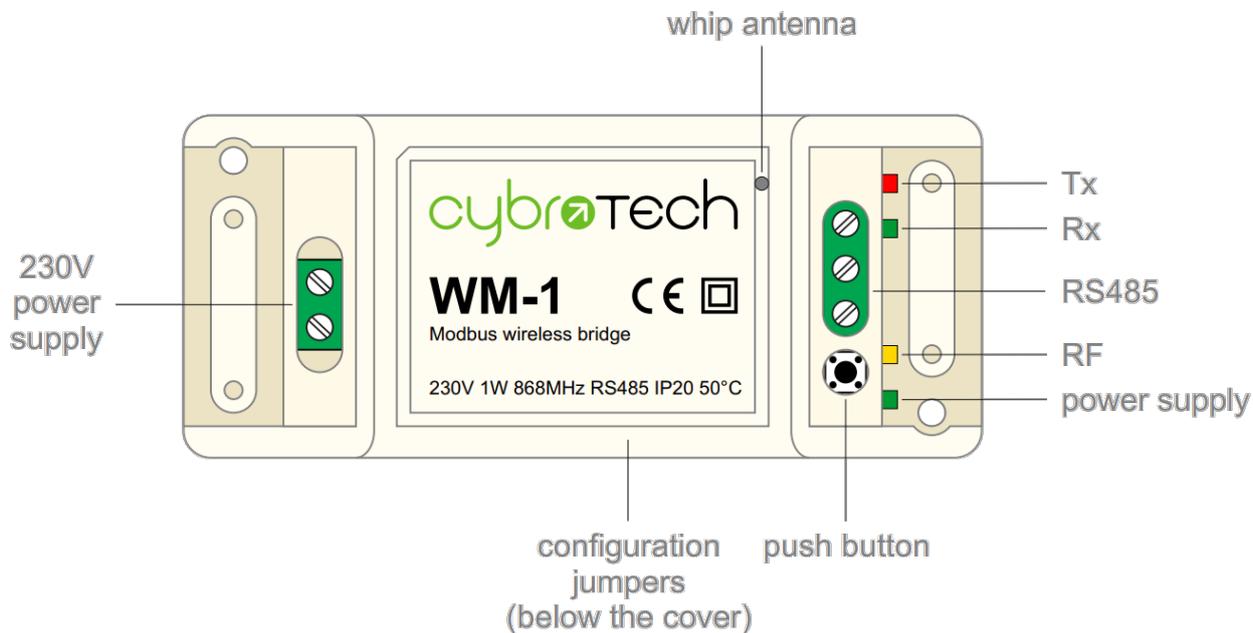

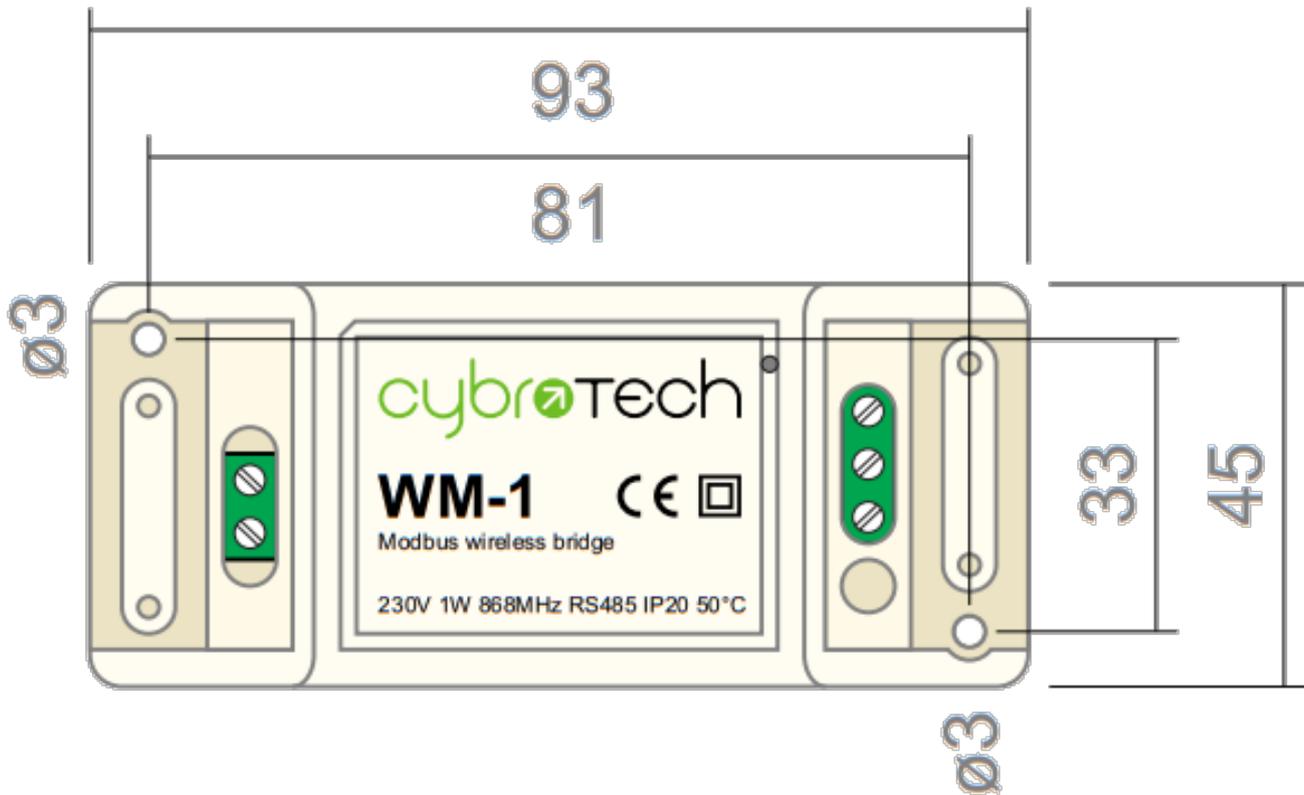

From: <http://wiki.hiq-universe.com/> -

Permanent link: http://wiki.hiq-universe.com/doku.php?id=en:hems_v1_2_0:methods_resources:firmwareupdate&rev=1635407813

Last update: 2021/10/28 07:56

