

Manual HC-IQ detect

Run HIQ Configurator and in "System" page check for which HC-IQ is configured.




Above example is for HC-IQ with serial number 1000.

Find your HC-IQ serial number (sticker on top of HC-IQ - 15789 in following example).



Find and open in your preferred text editor "CyBroMiniScada.xml" HIQ Configurator configuration file. It is usually in "C:\Program Files (x86)\HIQ Configurator\" folder.

Replace all occurrences of c[old_S/N] with c[new_S/N] (c1000 with c15789 for our example).

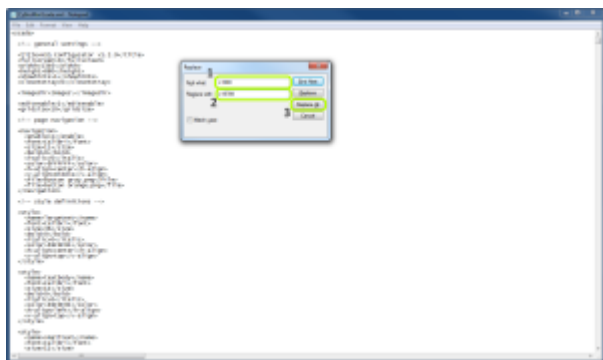

Last
update:
2018/10/05 13:06 en:hiq_home:applications:configurator:manual_detect https://wiki.hiq-universe.com/doku.php?id=en:hiq_home:applications:configurator:manual_detect

From:
<https://wiki.hiq-universe.com/> -

Permanent link:
https://wiki.hiq-universe.com/doku.php?id=en:hiq_home:applications:configurator:manual_detect

Last update: **2018/10/05 13:06**

