
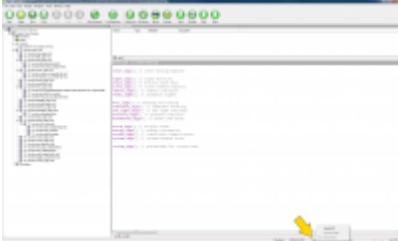 
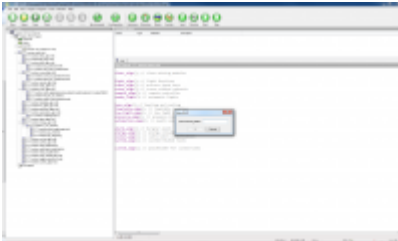 

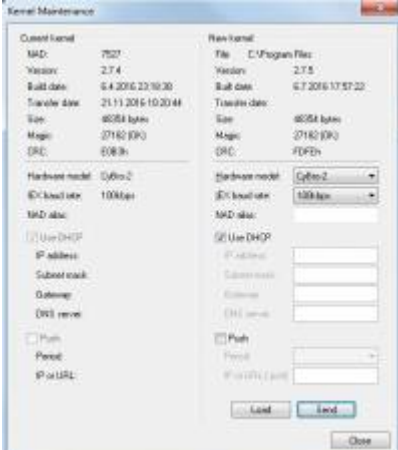 
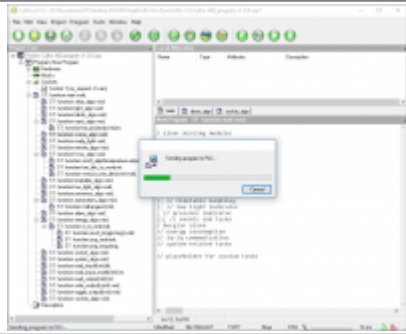 
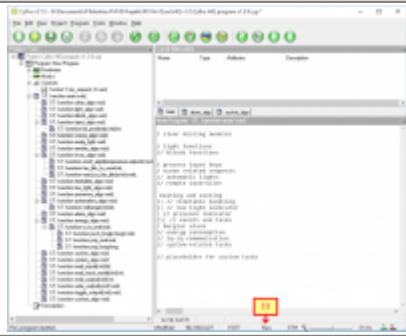 



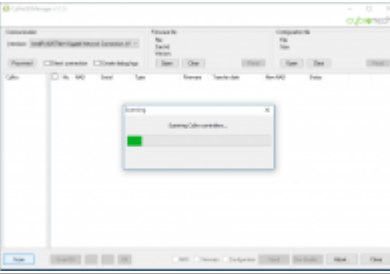


# Firmware

## HC-IQ FW update

|  |  |   |                           |  |
|--|--|---|---------------------------|--|
| <p>Download and save CyPro IDE</p>                                       |  | <p>CyPro or <a href="#">CyPro.zip</a> (v2.8.0) or <a href="#">cypro-v3.0.7.exe</a> (v3.0.7 - Cybro-3 / MC version)</p>                                    | <p>Run and install it</p> |  |
| <p>Download and open project</p>   |  | <p><a href="#">hc-iq.cyp</a> (v1.2.9a) or <a href="#">hc-iq-v1214.cyp</a> (v1.2.14) or <a href="#">hc-iq-v603.cyp</a> (v6.0.3 - Cybro-3 / MC version)</p> |                           |  |
| <p>Find Home Controller NAD (sticker on top of HC)</p>                   |  |   |                           |  |
| <p>Select Home Controller</p>  |  |    |                           |  |
| <p>Enter NAD</p>   | <p>right click on NAD</p>  |   |                           |  |
| <p>If HC does not have the latest Kernel you have to send a new one.</p> | <p>Tools → Kernel maintenance...</p>   |   |                           |  |
| <p>Send kernel to HC-IQ.</p>   | <p>Select [Send] and then [Close]</p>  |   |                           |  |

|                   |                           |  |  |  |
|-------------------|---------------------------|--|--|--|
| Send Program      | Program → Send [F9]       |  |  |  |
| Start PLC program | Program → Start PLC [F11] |  |  |  |

### HIQ-DC FW update

|  |            |  |
|--|------------|--|
| Download and unzip CybroIEXManager                         |            | <a href="#">CyBrolexManager</a>  |
| Download and unzip Device Controller FWs                   |            | <a href="#">firmware.zip</a>   |
| Start CybroIEXManager.exe                                  |            |  |
| Scan for Home controller                                   | [Scan]     |  |
| Select Home Controller (NAD number - sticker on top of HC) |            |  |
| Scan for connected IEX Device Controllers                  | [Scan IEX] |  |

|   |               |  |
|---|---------------|--|
| <p>For each connected device type open HIQ-DC FW.</p> <p>There can be several hardware versions. Hardware version is marked on the device or on the PCB board. Check <a href="#">firmware compatibility</a>. Versions not listed there are not compatible and should not be used.</p> | <p>[Open]</p> |  |
| <p>Send Firmware to HIQ-DC</p>  | <p>[Send]</p> |  |

 
## HIQ applications

Windows:


[HIQ Configurator](#).

(Some antivirus programs or company firewalls does not allow the downloading of \*.exe files. You can download [file in .zip package](#) or you can disable the antivirus program.)

Apple:

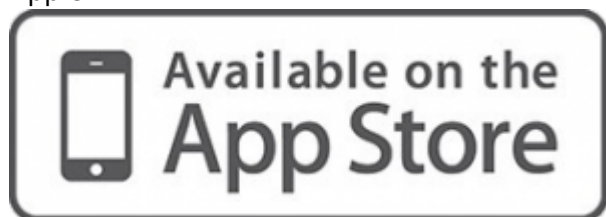

Android:

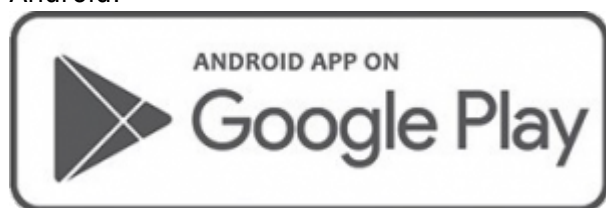 

## [hiq\\_manual.pdf](#)

From:  
<http://wiki.hiq-universe.com/> -

Permanent link:  
[http://wiki.hiq-universe.com/doku.php?id=en:hiq\\_home:methods:commissioning:firmware&rev=1562753971](http://wiki.hiq-universe.com/doku.php?id=en:hiq_home:methods:commissioning:firmware&rev=1562753971)

Last update: **2019/07/10 10:19**

