
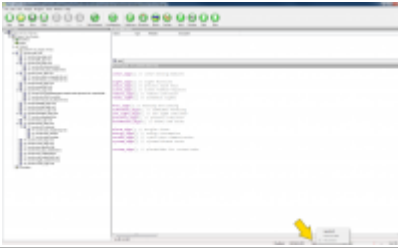 
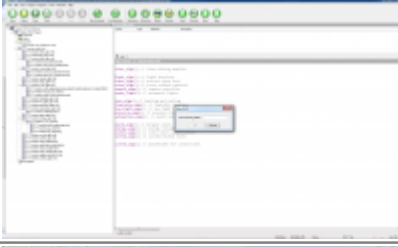 

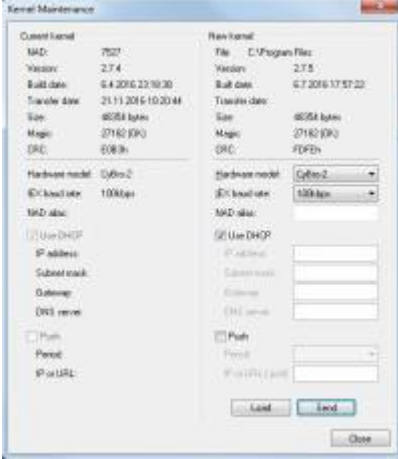 
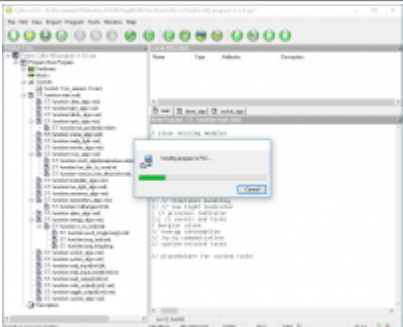 




 


# Firmware


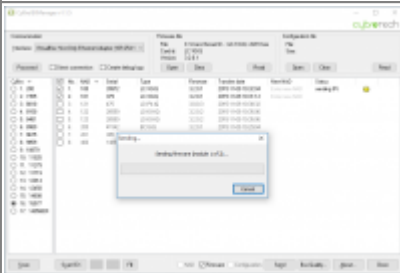
## HC-IQ FW update

Download and save CyPro IDE		<a href="#">CyPro</a> or <a href="#">CyPro.zip</a> (v2.8.0) or <a href="#">cypro-v3.0.7.exe</a> (v3.0.7 - Cybro-3 / MC version)
Run and install it		
Download and open project		<a href="#">hc-iq.cyp</a> (v1.2.9a) or <a href="#">hc-iq-v1214.cyp</a> (v1.2.14) or <a href="#">hc-iq-v603.cyp</a> (v6.0.3 - Cybro-3 / MC version)
Find Home Controller NAD (sticker on top of HC)		
Select Home Controller	right click on NAD	
Enter NAD		
If HC does not have the latest Kernel you have to send a new one.	Tools → Kernel maintenance...	
Send kernel to HC-IQ.	Select [Send] and then [Close]	

Send Program	Program → Send [F9]	
Start PLC program	Program → Start PLC [F11]	
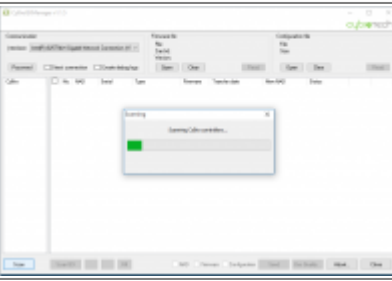
## HIQ-DC FW update

Download and unzip CybroIEXManager		<a href="#">CyBrolexManager</a>
Download and unzip Device Controller FWs		<a href="#">firmware.zip</a>
Start CybroIEXManager.exe		
Scan for Home controller	[Scan]	
Select Home Controller (NAD number - sticker on top of HC)		
Scan for connected IEX Device Controllers	[Scan IEX]	

<p>For each connected device type open HIQ-DC FW.</p> <p>There can be several hardware versions. Hardware version is marked on the device or on the PCB board. Check <a href="#">firmware compatibility</a>. Versions not listed there are not compatible and should not be used.</p>	<p>[Open]</p>	
<p>Send Firmware to HIQ-DC</p>	<p>[Send]</p>	

## HIQ applications

Windows:

 
[HIQ Configurator](#).

(Some antivirus programs or company firewalls does not allow the downloading of \*.exe files. You can download [file in .zip package](#) or you can disable the antivirus program.)

Apple:



Android:

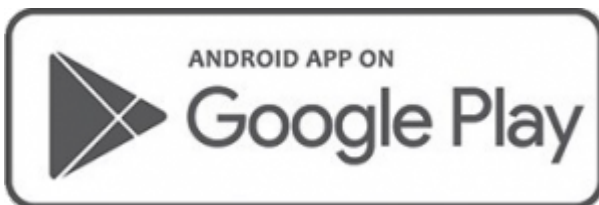

## [hiq\\_manual.pdf](#)

From:  
<https://wiki.hiq-universe.com/> -

Permanent link:  
[https://wiki.hiq-universe.com/doku.php?id=en:hiq\\_home:methods:commissioning:firmware&rev=1562753989](https://wiki.hiq-universe.com/doku.php?id=en:hiq_home:methods:commissioning:firmware&rev=1562753989)

Last update: **2019/07/10 10:19**

