
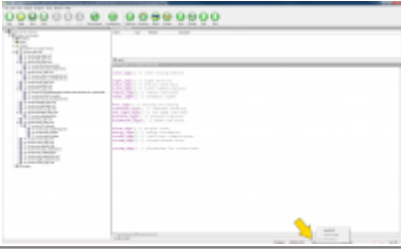
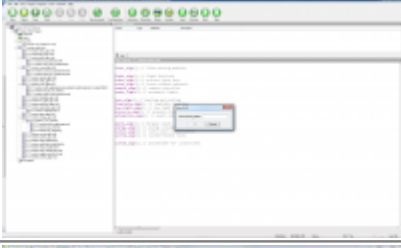

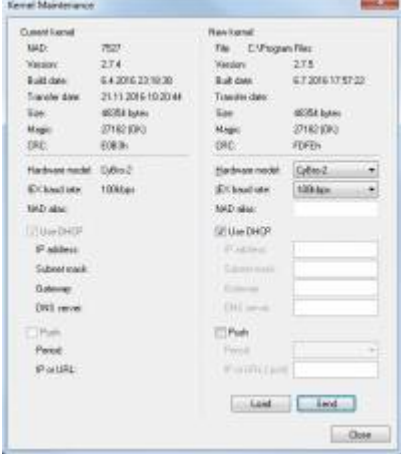
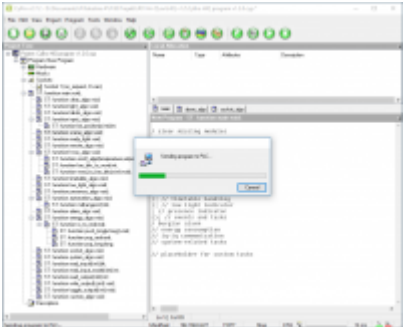




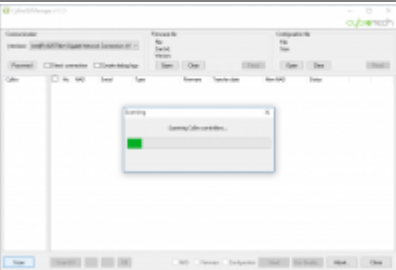


# Firmware


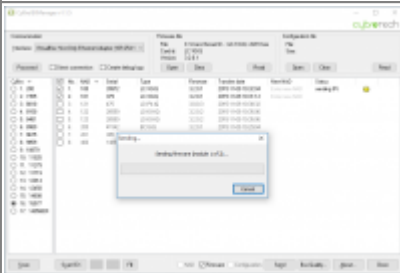
## HC-IQ FW update

|   |                                |  |
|---|--------------------------------|--|
| Download and save CyPro IDE                                       |                                | <a href="#">CyPro (v2.8.0 - HC-IQ)</a> or<br><a href="#">cypro-v3.0.7.exe</a> (v3.0.7 - Cybro-3 / MC version)            |
| Run and install it  |                                |  |
| Download and open project   |                                | <a href="#">hc-iq-v1216.cyp</a> (v1.2.16 - for HC-IQ) or<br><a href="#">hc-iq-v610.cyp</a> (v6.1.0 - for Cybro-3 and MC) |
| Find Home Controller NAD (sticker on top of HC)                   |                                |                                        |
| Select Home Controller  | right click on NAD             |                                       |
| Enter NAD   |                                |                                      |
| If HC does not have the latest Kernel you have to send a new one. | Tools → Kernel maintenance...  |                                      |
| Send kernel to HC-IQ.   | Select [Send] and then [Close] |                                      |

|                   |                           |  |
|-------------------|---------------------------|--|
| Send Program      | Program → Send [F9]       |  |
| Start PLC program | Program → Start PLC [F11] |  |

## HIQ-DC FW update

|  |            |  |
|--|------------|--|
| Download and unzip CybroIEXManager                         |            | <a href="#">CyBrolexManager</a>  |
| Download and unzip Device Controller FWs                   |            | <a href="#">firmware.zip</a>   |
| Start CybroIEXManager.exe                                  |            |  |
| Scan for Home controller                                   | [Scan]     |  |
| Select Home Controller (NAD number - sticker on top of HC) |            |  |
| Scan for connected IEX Device Controllers                  | [Scan IEX] |  |

|   |               |  |
|---|---------------|--|
| <p>For each connected device type open HIQ-DC FW.</p> <p>There can be several hardware versions. Hardware version is marked on the device or on the PCB board. Check <a href="#">firmware compatibility</a>. Versions not listed there are not compatible and should not be used.</p> | <p>[Open]</p> |  |
| <p>Send Firmware to HIQ-DC</p>  | <p>[Send]</p> |  |

### HIQ applications

Windows applications are in [download folder](#).

Apple:



Android:



[hiq\\_manual.pdf](#)

From:  
<https://wiki.hiq-universe.com/> -

Permanent link:  
[https://wiki.hiq-universe.com/doku.php?id=en:hiq\\_home:methods:commissioning:firmware&rev=1623148747](https://wiki.hiq-universe.com/doku.php?id=en:hiq_home:methods:commissioning:firmware&rev=1623148747)

Last update: **2021/06/08 10:39**

