

# HIQ Hotel GRMS and BMS software

HIQ Hotel BMS WEB based application which can be hosted on our server and offered as SaaS (software as a service) or on your own server. As it is WEB application there is no need for installation of any additional software on workstation. HIQ Hotel BMS is fully customized to hotel specific needs and budget.

## Typical BMS

**Overview**

Room	Booked	Room pr.	Bath pr.	HLR	DND	Fire alert	Temperature
I	In 01 h	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	R: C B set: 25.0 °C ai: 22.7 °C fi: 28.3 °C
							B: H 0 set: 20.0 °C ai: 24.4 °C fi: 22.1 °C
II	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	R: C B set: 27.0 °C ai: 25.7 °C fi: 24.4 °C
							B: H 0 set: 22.0 °C ai: 27.5 °C fi: 25.4 °C
III	In 01 d	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	S: OFF set: 12.0 °C ai: 29.9 °C
							R: C B set: 18.0 °C ai: 25.2 °C fi: 25.4 °C
IV	In 01 m	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	B: H 0 set: 18.0 °C ai: 29.3 °C fi: 24.6 °C
							R: C B set: 25.0 °C ai: 25.8 °C fi: 22.4 °C
V	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	B: H 0 set: 20.0 °C ai: 27.3 °C fi: 23.6 °C
							R: C B set: 25.5 °C ai: 24.8 °C fi: 23.8 °C
S	-	[Icon]	-	-	-	[Icon]	B: H 0 set: 22.0 °C ai: 25.5 °C fi: 24.3 °C
							R: C B set: 24.5 °C ai: 24.8 °C


Access

The screenshot shows the 'robotina' web interface for 'Hotel Theodorika - Access'. The main content area is titled 'Access' and contains a table of 'Guest access codes'. The table has columns for dates from 22.08 to 31.08 and columns for rooms I, II, III, IV, and V. Some cells contain numerical codes. To the right of the table are buttons for 'create code', 'delete code', 'extend code', and 'clear selection'. The left sidebar includes a 'User menu' with options like 'Server management', 'Users', 'Controllers', 'Templates', 'Media manager', 'Site content', 'Plants', 'Edit current page', and 'Log out'.


Room

The screenshot shows the 'robotina' web interface for 'Room I'. The main content area is divided into several sections: 'Room state' (Not locked, Presence), 'Time to next check in' (08:01 h 52 m), 'Room clean request', 'Do Not Disturb', 'Room presence', 'Bathroom presence', 'Service mode', 'Water heater' (44.4 °C - OFF), 'Refrigerator', 'Bathroom sockets', 'Room sockets', 'Tea kitchen sockets', 'Ventilation', 'Seams' (25.7 °C - OFF), 'Jacuzzi' (32.2 °C - ON), 'RCOB', 'Lights' (Terrace main, Terrace entrance, Terrace LED stripe, Room main, Room standing, Reading left, Reading right, Room LED stripe), and 'Fire alert' (Smoke sensor, Room ambient temperature abs., Room ambient temperature rise, Room floor temperature abs., Room floor temperature rise, Bath ambient temperature abs., Bath ambient temperature rise, Bath floor temperature abs., Bath floor temperature rise). Each section has a corresponding control icon or button. The left sidebar includes a 'User menu' with options like 'Server management', 'Users', 'Controllers', 'Templates', 'Media manager', 'Site content', 'Plants', 'Edit current page', and 'Log out'.

HVAC

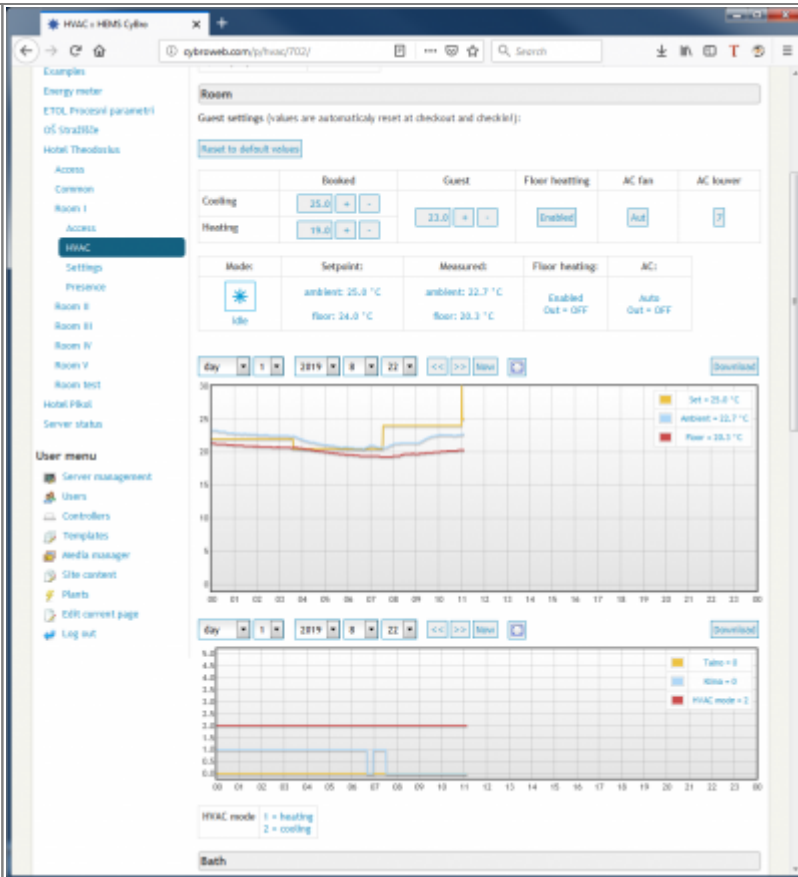

Settings

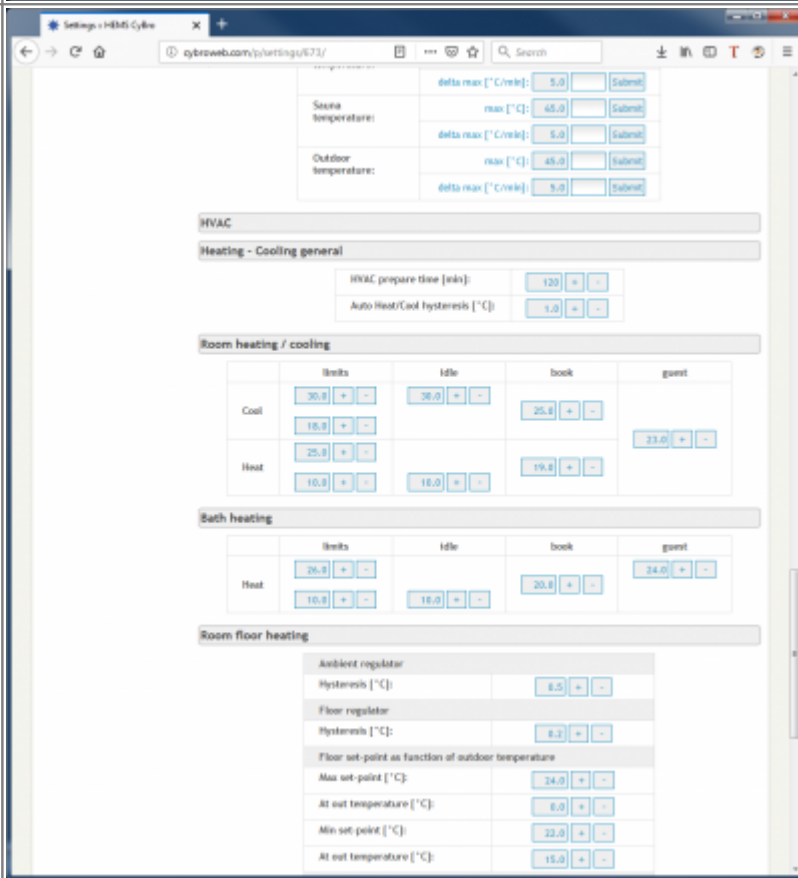

Presence



From: <https://wiki.hiq-universe.com/> -

Permanent link: [https://wiki.hiq-universe.com/doku.php?id=en:hotel:hiq\\_bms](https://wiki.hiq-universe.com/doku.php?id=en:hotel:hiq_bms)

Last update: **2020/11/20 11:24**

