

HIQ Hotel GRMS and BMS software

HIQ Hotel BMS WEB based application which can be hosted on our server and offered as SaaS (software as a service) or on your own server. As it is WEB application there is no need for installation of any additional software on workstation. HIQ Hotel BMS is fully customized to hotel specific needs and budget.

Typical BMS

Overview

Room	Booked	Room pr.	Bath pr.	HLR	DM	Fire alert	Temperature
I	In 01 h	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	R: C B set: 25.0 °C ai: 22.7 °C fi: 28.3 °C
							B: H 0 set: 20.0 °C ai: 24.4 °C fi: 22.1 °C
II	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	R: C B set: 27.0 °C ai: 25.7 °C fi: 24.4 °C
							B: H 0 set: 22.0 °C ai: 27.5 °C fi: 25.4 °C
III	In 01 d	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	S: OFF set: 12.0 °C ai: 29.9 °C
							R: C B set: 18.0 °C ai: 25.2 °C fi: 25.4 °C
IV	In 01 m	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	B: H 0 set: 18.0 °C ai: 29.3 °C fi: 24.6 °C
							R: C B set: 25.0 °C ai: 25.8 °C fi: 22.4 °C
V	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	[Icon]	B: H 0 set: 20.0 °C ai: 27.3 °C fi: 23.6 °C
							R: C B set: 25.5 °C ai: 24.8 °C fi: 23.8 °C
S	-	[Icon]	-	-	-	[Icon]	B: H 0 set: 22.0 °C ai: 25.5 °C fi: 24.3 °C
							R: C B set: 24.5 °C ai: 24.8 °C

Access

robotina
SaaS - Cloud services

Home - Hotel Theodorika - Access

Guest access codes:

	I	II	III	IV	V
22. 08.	2322	2525	2651	1435	2646
23. 08.	3214			4233	
24. 08.	2244		1136	5426	3132
25. 08.					
26. 08.					
27. 08.					
28. 08.					
29. 08.					
30. 08.					
31. 08.					
01. 09.					
02. 09.					
03. 09.					
04. 09.					
05. 09.					
06. 09.					
07. 09.					
08. 09.					
09. 09.					
10. 09.					
11. 09.					
12. 09.					
13. 09.					
14. 09.					
15. 09.					
16. 09.					
17. 09.					
18. 09.					
19. 09.					
20. 09.					
21. 09.					

create code
delete code
extend code
clear selection

Room

Room 1 - HEMS Cylbe

Room state: Not locked, Presence

Time to next check in: 08:01 h 52 m

Room clean request

Do Not Disturb

Room presence

Bathroom presence

Service mode

Water heater: 44.4 °C - OFF

Refrigerator

Bathroom sockets

Room sockets

Tea kitchen sockets

Ventilation

Seema: 25.7 °C - OFF

Jacuzzi: 32.2 °C - ON

RCB

Lights

Terrace main

Terrace entrance

Terrace LED stripe

Room main

Room standing

Reading left

Reading right

Room LED stripe

Fire alert

Smoke sensor: [off] [on] [reset]

Room ambient temperature abs.: 22.7 °C [reset]

Room ambient temperature rise: [reset]

Room floor temperature abs.: 28.3 °C [reset]

Room floor temperature rise: [reset]


Bath ambient temperature abs.: 24.4 °C [reset]

Bath ambient temperature rise: [reset]


Bath floor temperature abs.: 22.1 °C [reset]

Bath floor temperature rise: [reset]

HVAC

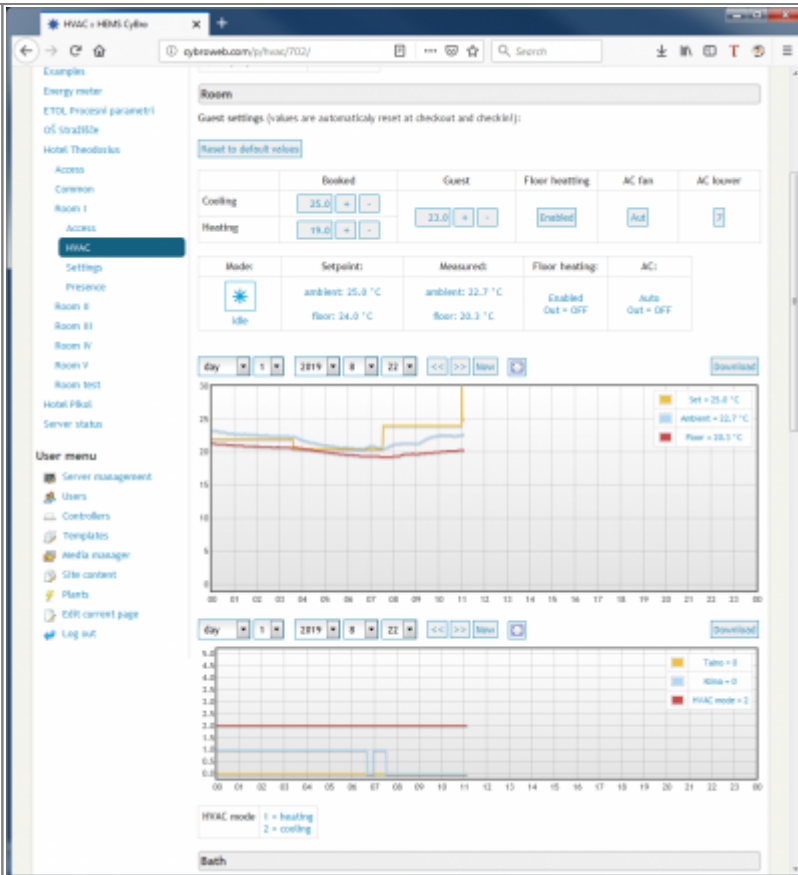

Settings

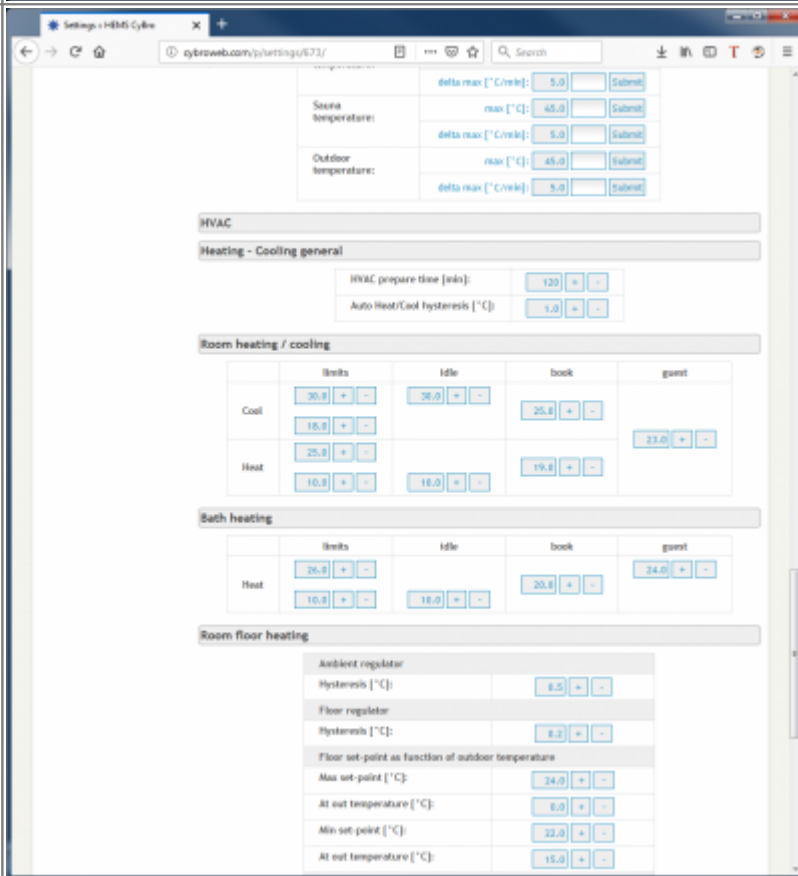

Presence



From:
<https://wiki.hiq-universe.com/> -

Permanent link:
https://wiki.hiq-universe.com/doku.php?id=en:hotel:hiq_bms&rev=1586341724

Last update: **2020/04/08 10:28**

