
2025/11/03 23:08 1/1 Power plant connection

Power plant connection

The power plants can be connected to the grid in two ways:

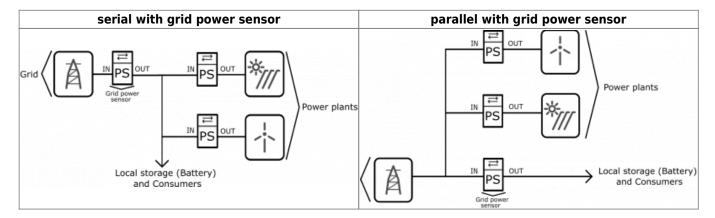

When configuring the power plant, select

- in: serial (internal) with grid power sensor
- ex: parallel (external) with grid power sensor

The power plants are configured as internal by default.

PV inverter

Obtaining relevant data from photovoltaic is possible by two ways:

- 1. adding power-sensor to measure produced electricity by PV (no connection to interver). How to add power sensor please see Power Sensor
- 2. connecting PV inverter by Modbus TCP to EVSE (only for SolarEdge inverters)

SolarEdge inverter over Modbus TCP



- **Connect** communication bus (to only one power-sensor)
- In HEMS Configurator power-sensor should appear as a "new device"
- Press and hold the push-button on the power-sensor until it appears -SEt- on display
- In HEMS Configurator click on the " add" button next to the source or consumer that the sensor is measuring
- Connect communication bus to the next power-sensor and repeat procedure

From:

http://wiki.hiq-universe.com/ -

Permanent link:

http://wiki.hiq-universe.com/doku.php?id=en:robotina_charger:commissioning:pv_inverter&rev=1670587259

Last update: 2022/12/09 12:00

