

Robotina Charger wiring

Network
Default connection to the LAN network:
<input type="checkbox"/>
Default connection via LTE 4G modem:
NOTE: All connected devices will have internet access via LTE modem which can result in high costs on your LTE account.
<input type="checkbox"/>
Optional LTE 4G modem connection:
<input type="checkbox"/>
Wireless power sensors
Single phase power-sensor PM1-E-D
<input type="checkbox"/>

Single phase power-sensor with current transformer [PM1-E-D-CT](#)



wireless connection of 3-phase power-sensor [PM3-E-D](#) to charger by wireless modbus-to-modbus bridge [WM-1](#)



wireless connection of 3-phase power-sensor with CT [PM3-E-D-CT](#) to charger by wireless modbus-to-modbus bridge [WM-1](#)



Charger and wireless power sensors.
One or more [WM-1](#) modules can be used. One or more power sensors can be connected to one [WM-1](#).



From:
<http://wiki.hiq-universe.com/> -

Permanent link:
http://wiki.hiq-universe.com/doku.php?id=en:robotina_charger:wiring&rev=1669993352

Last update: **2022/12/02 15:02**

