








Code reader status

	Code reader disabled
	No entry code required.
	Code reader idle
	Entry code required but reader not enabled.
	Code reader pending
	Entry code required and reader enabled.
	L1 access code read
	Entry allowed if other conditions for L1 users are met.
	L2 access code read
	Entry allowed if other conditions for L1 users are met.
	UL access code read
	Entry is allowed regardless of the status of other entry conditions.
	Unauthorized access code read
	Unauthorized code read, no entry allowed.

From:
<http://wiki.hiq-home.com/> -

Permanent link:
http://wiki.hiq-home.com/doku.php?id=en:sg3:configurator:code_status

Last update: **2020/11/27 11:17**

