








Code reader status

	Code reader disabled No entry code required.
	Code reader idle Entry code required but reader not enabled.
	Code reader pending Entry code required and reader enabled.
	L1 access code read Entry allowed if other conditions for L1 users are met.
	L2 access code read Entry allowed if other conditions for L1 users are met.
	UL access code read Entry is allowed regardless of the status of other entry conditions.
	Unauthorized access code read Unauthorized code read, no entry allowed.

From:
<https://wiki.hiq-home.com/> -

Permanent link:
https://wiki.hiq-home.com/doku.php?id=en:sg3:configurator:code_status

Last update: **2020/11/27 11:17**

