





# Count limits status

	<b>Count limits disabled</b>
	There are no occupancy restrictions
	<b>Occupancy under both limits</b>
	All entries are counted in the L1 quota (regardless of scanned code)
	<b>Occupancy under L2 and over L1 limit</b>
	Only users with code L2 are allowed to enter
	<b>Occupancy over both limits</b>
	Entry is not allowed

From:  
<http://wiki.hiq-universe.com/> -

Permanent link:  
[http://wiki.hiq-universe.com/doku.php?id=en:sg3:configurator:count\\_status&rev=1606475200](http://wiki.hiq-universe.com/doku.php?id=en:sg3:configurator:count_status&rev=1606475200)

Last update: 2020/11/27 11:06

