


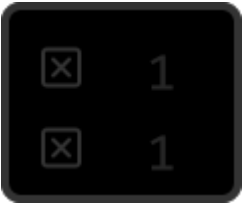


Count limits status

	Count limits disabled
	There are no occupancy restrictions
	Occupancy under both limits
	All entries are counted in the L1 quota (regardless of scanned code)
	Occupancy under L2 and over L1 limit
	Only users with code L2 are allowed to enter
	Occupancy over both limits
	Entry is not allowed

From:
<http://wiki.hiq-universe.com/> -

Permanent link:
http://wiki.hiq-universe.com/doku.php?id=en:sg3:configurator:count_status&rev=1606475222

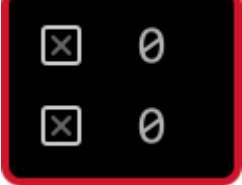Last update: **2020/11/27 11:07**

