


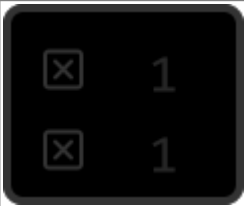


Count limits status

	<p>Count limits disabled</p>
	<p>There are no occupancy restrictions</p>
	<p>Occupancy under both limits</p>
	<p>All entries are counted in the L1 quota (regardless of scanned code)</p>
	<p>Occupancy under L2 and over L1 limit</p>
	<p>Only users with code L2 are allowed to enter</p>
	<p>Occupancy over both limits</p>
	<p>Entry is not allowed</p>

From: <http://wiki.hiq-universe.com/> -

Permanent link: http://wiki.hiq-universe.com/doku.php?id=en:sg3:configurator:count_status&rev=1606475222

Last update: 2020/11/27 11:07

