

Configurator

Overview

1	Page navigation
Overview page	
Access code management page	
Settings page	
UI settings page	
Events overview page	
2	Entry procedure steps status
count_status	
disinfect_status	
temperature_status	
code_status	
confirmation_status	
entry_status	
3	schematics
4	Occupation counts
Occupation count, click to correct the actual number of visitors.	
Occupation limits L1 / L2	
5	Command buttons
Gates Auto / Manual mode toggle	
Alarm reset button	
Confirmation button	



Access Code management

1	Edited code
Click to enter the code you want to edit.	
2	Code type
Click to select edited code type. Options are L1 (level 1), L2 (level 2) or UL (unlimited).	
3	Access point limits
Click to enter count limits for each access point.	
4	Code activation date
Set code activation date and time. Set all to 0 for the code that is active immediately.	
8	Code expiration date
Set code expiration date and time. Set all to 0 for a code that has no validity limit.	
6	Edit code commands
[search] = Find settings for "edit code".	
[save] = Saves the code being edited with all settings.	
[clear] = Clear all edit settings.	



1	Edited code
[delete] = Delete edit code from the list.	
7	Codes list
List of access codes on the controller. Clicking on the code picks up all the code values in the edit fields above.	

Settings

1	Entry conditions	✖
Count limits: set count limits for L1 and L2; 0=not limited		
Disinfection: select if hand disinfection is required		
Thermal scan: select if body temperature scan is required s		
Reader: select if code reader is required		
Confirmation: select if confirmation is required		
2	Entry detection settings	
Entry detection type: select entry detection type		
Entry time-out: max time between consecutive steps		
Confirmation time-out: max time allowed for confirmation		
Block time-out: time for hi temperature or wrong code alert		
After all time-outs entry procedure restarts.		
3	Code reader settings	
Access point ID: ID for built in access point. Used when S Gate is part of bigger Access control system		
Thermal scan timeout: set the time for which the system remembers the temperature scan for the code user		
Access master code: set the code for local codes management		
Send LAN code query: set to enable sending code queries to other access controllers on LAN		
Process LAN code query: set to process queries from other controllers on LAN		
4	Auxiliary input settings	
AUX input type: set auxiliary input function to presence sensor or to call button		
Presence / Call time-out: aux function timeout		
5	Gates settings	
Entry gate time-out: set entry gate signal timeout, 0=no entry gate		
Exit gate time-out: set exit gate signal timeout, 0=no exit gate		
6	Alarm settings	
Alarm duration: alarm active duration time		
Alarm beeper enabled: set to enable continuous beep during alarm		
Reset alarm on exit: set to reset alarm when exit is detected		
7	Hardware overview	
Control system overview		
Select [Autodetect] to find S Gate controller in LAN (when red Xes are displayed)		
8	Wireless devices management	
[]wireless management: set to enable management of wireless devices		

1	Entry conditions
first icon: wireless device paired status (x=none, ✓=paired)	
second icon: displaying wireless signal strength	
third icon: wireless device operating as repeater (click to enable).	
[-]: delete wireless device	
[+]: add wireless device	
9	Controller date and time settings
set S Gate controller date and time.	
10	Parameters management
[init parameters]: initialize all parameters to factory default values	
[save parameters]: save all parameters to permanent memory	
[read parameters]: read all parameters from permanent memory	

User interfaces settings

1	LED display texts settings	✖
Click to set the texts displayed on the LED display. Edit text alignment with spaces.		
1	GUI display texts settings	
Click to set the texts that appear on the graphical user interface. The text will be centered automatically.		

Events overview

1	Events list	✖
The last 20 event codes and data are displayed. Event #00 happened last.		
2	Events legend	
Legend for event code and data.		

From:
<http://wiki.hiq-universe.com/> -

Permanent link:
<http://wiki.hiq-universe.com/doku.php?id=en:sg3:configurator&rev=1606475049>

Last update: **2020/11/27 11:04**

