HIQ Configurator

HIQ Configurator is a tool for setting the HIQ system configuration parameters. This includes device settings, timetable, automation, alarm and more. Controller Settings can be saved in a file. Hardware configuration is automatically detected during the installation.

To check the application without the hardware, run HIQ Simulator (included in HIQ Configurator install directory), keep it running, and click Autodetect.

HIQ Configurator works in a local network, internet access is not supported.

Download HIQ Configurator v1.2.7.

(Some antivirus programs or company firewalls do not allow the downloading of *.exe files. You can download file in .zip package or you can disable the antivirus program.)

Lights + Blinds

Manual control of lights, dimmers, blinds and scenes.

Manual control		
On Off lights	Click on icon to toggle.	
Dimmable lights	Adjust brightness with slider then click on icon to toggle on/off.	
Blinds	Click on blind to set position.	
Scenes	Click on scene icon to set affected lights and blinds to values stored in scene memory.	
Settings		
On Off lights	Long-press to set auto off time in seconds; set to 0 to disable auto-off.	
Dimmable lights	No individual Settings available. Check smooth option to gruadually enable intensity change for all dimmable lights.	



wiki:syntax

Blinds	Long-press on upper / lower time to set rising / lowering time.
	Long-press on % to set intermediate position. Set to 0 for no intermediate position.
Scenes	Long-press on scene icon to memorize actual lights/blinds state to scene memory. Only affected lights and blinds will be memorized. For setting affected devices see "Scene editor".

RGB dimmer

RGB mode is used when red/green/blue/(white) LED stripe is connected to the dimmer. Instead of individual light, total brightness, saturation and hue are controlled.

4	

Sliders on top adjust brightness, saturation and hue of RGB lights. Check boxes on right side toggle RGB and White lamps

Color cycling button will start color cycling.

Colors buttons will set RGB lights to match button color.

Off button will turn RGB off.

Settings

White temperature mode check box enables white range simulation, from warm to cold white.

Cycle time sets color cycling speed (time for complete cycle in seconds).

×

Input setup

Set mode of operation for each Light controller (LC) input.

Default is to toggle the corresponding output on and off with each keypress.

Timer extend is used to extend the time when output is configured as timer. Typical usage is for a staircase light.

Direct mode turns output on when button is pressed, off when released.

Typical usage is for a door bell.

Scene button enables selected scene. Scene number is altered with a long press on scene number.

Timer extend mode extends timer with every press. Typical use is motion (PIR) sensor.

Timer extend/night only - the same as above, works only allow light conditions.

Motions sensor for ready light.

Inverse door (window) sensor – inverse function of "direct" (doorbell) button. Inverse door sensor/night only – the same as above, works only al low light conditions.

Door sensor for ready light. Input only – used for custom programming in Home controller.

Settings

Click on input icon to cycle between all options.

In scene mode corresponding scene has to be set.

IR remote

HIQ scenes can be set from an IR remote controller. Any Philips (RC5) compatible remote controller can be used. Receiver is any scene controller



or thermostat (SC-4T-IQ, SC-40-IQ, TH-1M-IQ, TH-1T-IQ and TH-3-IQ).

Settings

Press remote controller button until the code is recognized, then assign it to a scene.

Enable or disable IR receiver in each scene controller and/or thermostat.

Enable or disable beep when valid IR code is received.

Scene editor

A Scene is a user defined array, used to set a group of lights and blinds to a predefined state. Within a scene, each output can be on, off, or not affected. Dimmer and blinds can be set from 0 to 100% in 10% increments.

Settings

Click on matrix to toggle between allowed options. Hold and drag to set multiple fields.

If scene controller (SC-4x-IQ) is connected, click Read before and Write after editing.

Use Clear all to erase the whole matrix.

Ready light

Ready Light is a light automation system. Unlike common presence detectors, its design ensures almost perfect operation. The system is





based on two sensors, passive infrared (PIR) for presence, and magnetic reed switch for door open/close. System can be used with a single sensor (PIR or reed), but is also limited to common functionality.

Settings	
room enable	Enables Ready Light functionality.
only by night	Enables operation at low light conditions only.
light output	Set which light will be effected.
motion sensor	Set motion sensor (PIR) input.
door sensor	Set magnetic (reed) door sensor input.
short timeout	Set time from closing the door to the moment when lights will turn off.
long timeout	Set time from leaving the room to light off, without closing the door.

HVAC

Heating/cooling control.

Settings	
on/off	Toggle on/off mode. When OFF, secondary setpoint is used. When secondary setpoint is set to 0, output is off.
setpoint Setpoint for ON mode.	
fan limit	Toggle between preset fan modes.



HVAC setup

Heating/cooling setup.

Settings		
heating/cooling/off	Operation mode and energy source selection.	
delay	Actuator delay time in seconds.	
outdoor temperature	Enable and select which thermostat external temperature sensor is measuring outdoor temperature.	
wall temperature	Enable and select which thermostat external temperature sensor is measuring wall temperature.	
water temperature	Enable and select which thermostat external temperature sensor is measuring water temperature.	
auxiliary temperature	Enable and select which thermostat external temperature sensor is measuring auxiliary temperature.	
temperature source	Select thermostat regulation temperature source: internal, external (connected to thermostat) or remote (connected to fan-coil controller).	
display when off	Select what to display when thermostat is off. Available options are nothing, dashes or measured temperature.	
available fan options	Select available fan options: F1 (low speed), F2 (medium speed), F3 (high speed) and MAX (max fan speed for predefined time).	
write options to thermostat	Write thermostat options to device.	
read back	Read thermostat options from device.	

 


setpoint idle	Idle setpoint, used when thermostat is off. Set to 0 for disabling heating/cooling when thermostat is off.
setpoint lo limit	Lower limit for user setpoint setting.
setpoint hi limit	Higher limit for user setpoint setting.
max time	Timeout for fan max functionality.
temperature offset	Offset for temperature measurements.
hysteresis	Hysteresis for thermostat temperature regulation.
window switch	Enable window switch. When enabled opened window will turn heating/cooling off.
window switch	Enable window switch. When enabled opened window will turn heating/cooling off.
output active	Indicates if the output is currently active
demand enable	Enable heating/cooling demand. When enabled, output on Home controller will be switched on (QX6 for heating and QX5 for cooling.

Timetable

Timetable defines periods in which the heating/cooling system is active, when output (0-55) and/or scene is active. Tables are independent, and may be used to handle separate zones, e.g. living area or sleeping area. Manual override is possible at any time, timetable will catch on with the next transition.

	Settings
matrix	Click to toggle active/idle state. Hold and drag mouse to set multiple fields. Each rectangle represents a half hour.





THO TH4	Select which thermostat is affected.
set output	Select and specify which output is activated on idle to active transition and deactivated at active to idle transition.
set scene	Select and specify which scene is activated on idle to active transition (on) and at active to idle transition. (off)

Automation

Events are based on the HIQ Commander application, which must be installed on your phone. Some phones may not support all events.

Settings		
Select tasks and actions to be performed automatically and/or when the event occurs.		
presence indicator	аааааааааааааааааа	
presence descript	bbbbbbb	
low light indicator	Indication; Used for various automations.	
latitude / longitude	Set geographic location for sunrise / sunset calculation. Also correct time zone must be set in "system → setup → time zone"	
offset	Sunrise/sunset correction given in minutes, positive value moves sunrise later and sunset earlier.	
also use light sensor	Use lightness sensor for low light calculation.	
threshold	Lightness sensor threshold for day/night calculation.	

×

coming home	Task is triggered when we came home – in connection with presence indicator.
TH0 on TH4 on	Select which thermostat is toggled to ON state.
set scene	Set scene to be activated at coming home task.
only by night	If enabled, scene will be triggered at low light.
leaving home	Task is triggered when we leave - in connection with presence indicator.
TH0 off TH4 off	Select which thermostat is toggled to ON state.
set scene	Set scene to be activated at leaving home task.
only by night	If enabled, scene will be triggered at low light.
smart lights	aaaaaaaaaaaa.
set scene	Set scene to be activated at leaving home task.
set dimmer	Set scene to be activated at leaving home task.
transition time	If enabled, scene will be triggered at low light.
final brightness	If enabled, scene will be triggered at low light.
random lights	When nobody is at home set random scenes to discourage snooping.
scene number	Set which scenes will be randomly triggered.
comfort wake up	Task is triggered at a predefined time before smartphone alarm time (time is set on the smartphone).
TH0 on TH4 on	Select affected thermostats.
set scene	Set scene to be activated at comfort wake up task.
only by night	If enabled, scene will be triggered only at low light.
sunny wake up	HIQ lifts blind in your bedroom. Task is triggered at a predefined time before smartphone alarm time (time is set on the smartphone).
move gradually	Selected blind will move gradually.
blinds number	Set affected blind.
final position	Final blind position.

When active, temperature setpoint adjustment is valid for about an hour, then it returns to the predefined, optimal temperature.
Select affected thermostat and set optimal temperature. The remaing time is shown in minutes.
Temperature will follow your natural biological rhythm (chronotype).
Set morning, evening or both temperatures to increase/decrease.
Set temperature increase/decrease.
Actions will be triggered when smartphone is connected to a charger.
Select which thermostat is affected.
Set scene to be activated at connecting charger.
If enabled, scene will be triggered only at low light.
Actions will be triggered when smartphone is disconnected from a charger.
Select which thermostat is affected.
Set scene to be activated at disconnecting charger.
If enabled, scene will be triggered only at low light.
When you receive a call, selected light will turn on and off a couple of times, to get your attention when phone is away or silenced.
Set affected light output (0-55).
When you receive a text message, selected light will turn on and off a couple of times, to get your attention when phone is away or silenced.
Set affected light (0-55).

Alarm

Alarm is based on 4 zones, each with up to 3 sensors. Alarm states are:

- **OFF**: protection is off.
- **Arming**: protection is switching on, active timeout for leaving protected area.
- **Armed**: protection enabled.
- **Activating**: protection is on and movement detected timeout allows to disengage alarm.
- Alarm active: intrusion detected, siren output active.
- Expired: delay time expired, siren is turned off (default 120s).

Control		
zone0 zone3	Select affected zone.	
alarm on/off	Toggle alarm for selected zones. If "require 4-digit code" is enabled we have to enter the code first.	
Settings		
enable	Enable or disable sensor on selected input.	
instant	If enabled, alarm will be activated instantly, without "Activating" time. Use in places without presence.	
input	Input which triggers the alarm. Motion (PIR) sensors are recommended but any input can be used.	
arming time	Time from activating alarm to "Armed" state.	
delay time	Time from intrusion detected to "alarm active" state.	
active time	"Alarm active" time. When expired the siren will be switched off.	
alarm output	Output for siren or other indicator.	
alarm scene	"Alarm active" scene.	
auto arming by presence signal	Δ ΙΔΙΙΓΟΜΆΤΙς ARMING NV NΓΡΟΡΟΓΑ SIGNAL	



require 4-digit code	Change 4-digit arming/disarming code. Valid only in HIQ configurator.
state indicator	Alarm state indicator. Blinks when arming, on when armed. Outputs 0-39 can be used.
use blinking	Alarm state indicator blinks when "Arming" is activated and when alarm is deactivated.

Energy

Energy monitoring is the first step to efficient energy usage. Once knowing how much energy something is using, one can make a rational strategy for saving.

Overview		
total power	Current power.	
energy total	Used energy since energy counter installation (or reset).	
relative power	Toggle between preset fan modes.	
voltage	Current system voltage.	
energy in last 24 hours	Graph of used energy in last 24 hours.	
energy in last 24 hours	Graph of used energy in last 30 days.	
Power consumption	Power consumption in last hour.	
Settings		


×

Reset energy consumption, to measure the amount of electricity something is using: 1. Turn the output off. 2. Reset relative power. 3. Turn the output on. A few seconds later, measured relative power is displayed. If the reading is not stable, temporary turn off any load which may consume variable amount of power. Measured rating may be used to set the
nominal power on 'By output' page.

Energy by output

Overview of

Overview			
Power count	nt A number how many times the output is turned on.		
Working hours	orking hours Total number of hours the output spent in on state		
Nominal power	ver Output power configured by user.		
Current power	Output power at the current moment.		
Energy today	Total energy used from last midnight.		
Energy total	Energy total Total energy consumed by the specific output.		
Configuration			
output	Select target output with +/- button.		
Set nominal Set nominal power. It can be measured by resettable power meter or read from the label.			
Reset counter Power count, working hours and energy total can be reset.			
Toggle output	Toggle selected output.		

 



System

Heating/cooling control.

Settings		
on/off	Toggle on/off mode. When OFF, secondary setpoint is used. When secondary setpoint is set to 0, output is off.	
setpoint Setpoint for ON mode.		
fan limit	Toggle between preset fan modes.	

System setup

Heating/cooling setup.

Settings		
heating/cooling/off	Operation mode and energy source selection.	
fan coil/radiator/none Actuator selection.		
delay	Actuator delay time in seconds.	

From:

http://wiki.hiq-universe.com/ -

Permanent link:

http://wiki.hiq-universe.com/doku.php?id=wiki:syntax&rev=1480498607

Last update: **2016/11/30 09:36**



×



⁻ http://wiki.hiq-universe.com/