
Firmware update


CyBroBinLoader software


- Download latest CyBroBinLoader.exe from https://www.cybrotech.com/software-category/tools/
- Run CybroBinLoader.exe
- In case Windows OS is blocking execution, click on “more info” and “run anyway”

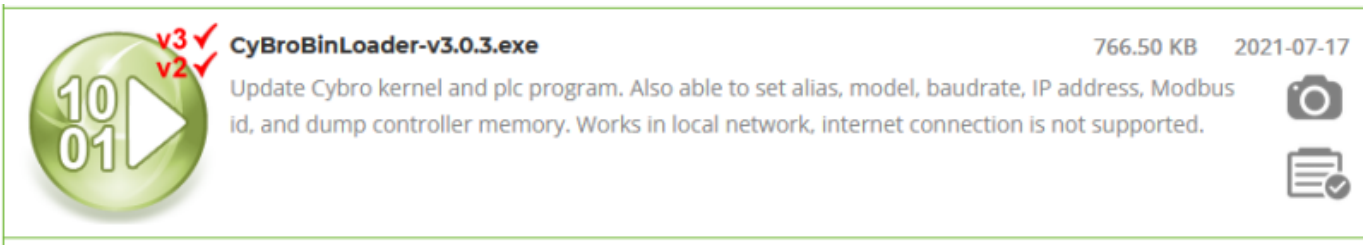

Firmware upload

- Download latest HEMS firmware from Download
- Select correct Cybro NAD (sticker on top or side of MC controller)
- Select firmware under PLC program
- Enable PLC program and Start PLC
- Click send
- ! PC must be on the same network as MC controller
- ! Do not interrupt durring update process
- ! HEMS configuration may be lost, use BACKUP before update and later RESTORE as described on Software

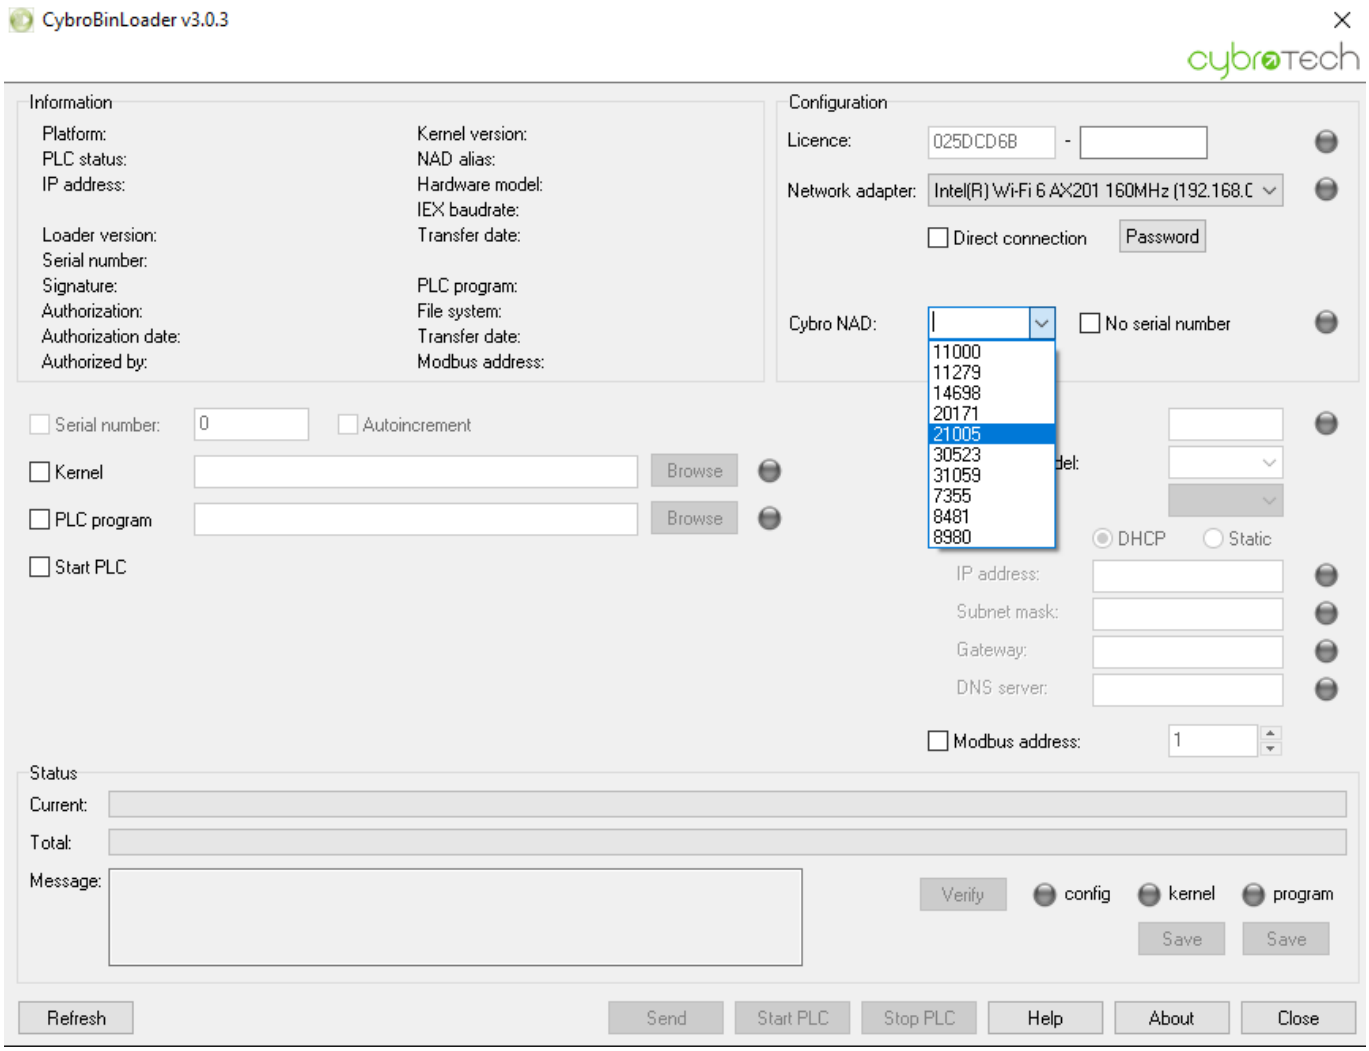
CybroBinLoader v3.0.3
cybrotech
Information
Platform:
PLC status:
IP address:
Loader version:
Serial number:
Signature:
Authorization:
Authorization date:
Authorized by:
Kernel version:
NAD alias:
Hardware model:
IEX baudrate:
Transfer date:
PLC program:
File system:
Transfer date:
Modbus address:
Configuration
Licence:
025DCD6B
Network adapter:
Intel(R) Wi-Fi 6 AX201 160MHz (192.168.0
Direct connection
Password
Cybro NAD:
No serial number
11000
11279
14698
20171
21005
30523
31059
7355
8481
8980
Serial number:
0
Autoincrement
Kernel
Browse
PLC program
Browse
Start PLC
DHCP
Static
IP address:
Subnet mask:
Gateway:
DNS server:
Modbus address:
1
Status
Current:
Total:
Message:
Verify
config
kernel
program
Save
Save
Refresh
Send
Start PLC
Stop PLC
Help
About
Close

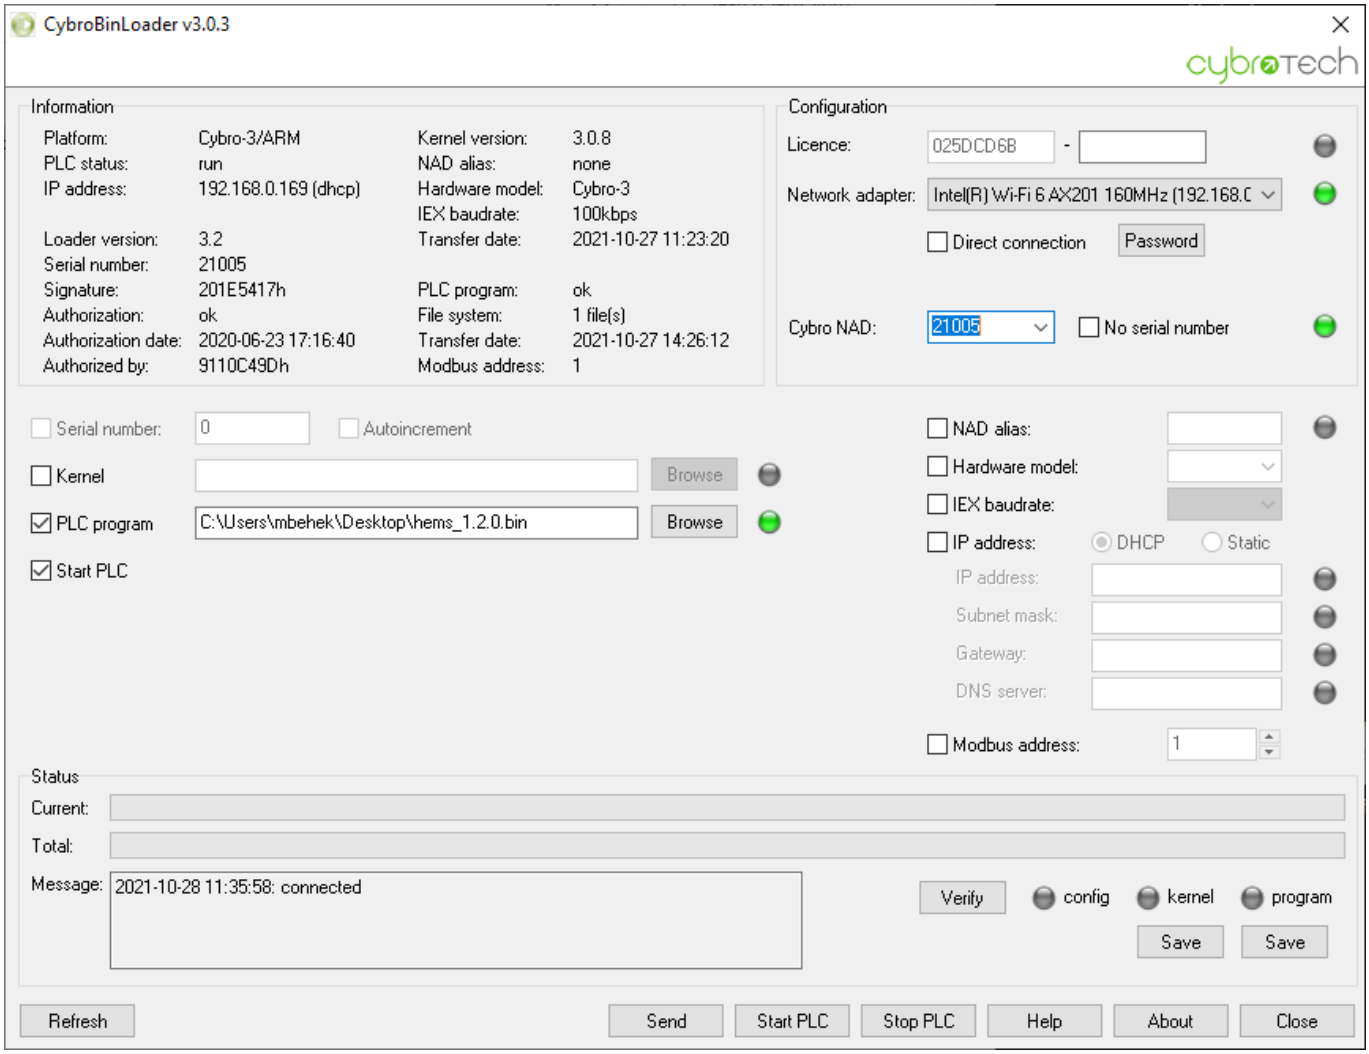

From:
https://wiki.hiq-universe.com/ -

Permanent link:
https://wiki.hiq-universe.com/doku.php?id=en:hems_v1_2_0:methods_resources:firmwareupdate&rev=1635427139

Last update: **2021/10/28 13:18**