
Power plant connection

The power plants can be connected to the grid in two ways:

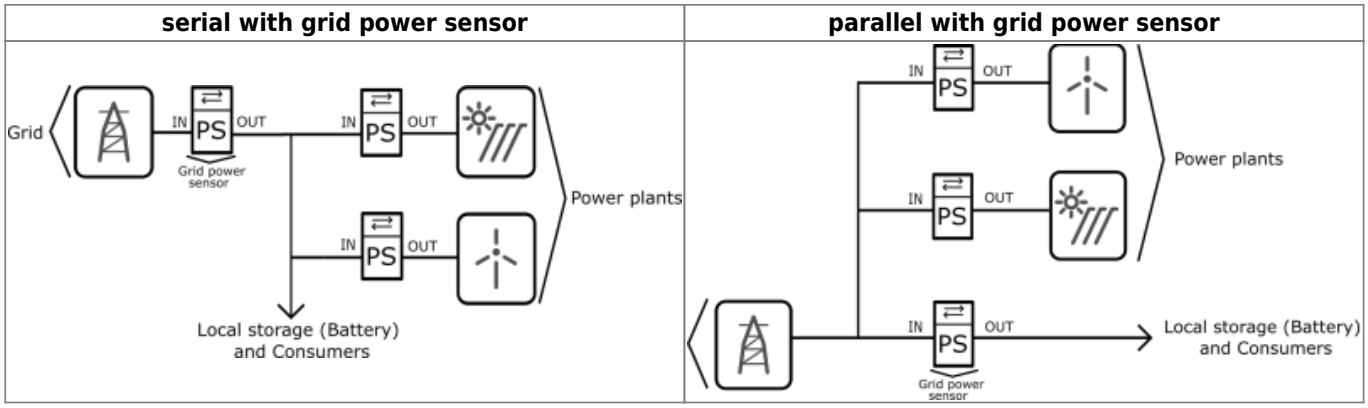

When configuring the power plant, select

- **in**: serial (**in**ternal) with grid power sensor
- **ex**: parallel (**ex**ternal) with grid power sensor

The power plants are configured as internal by default.

PV inverter

Obtaining relevant data from photovoltaic is possible by two ways:
1. adding power-sensor to measure produced electricity by PV (no connection to interver) - on how to add power sensor please see Power Sensor
2. connecting PV inverter by Modbus TCP to EVSE (only for SolarEdge inverters)

EVSE and PV inverter connection

To add inverter on HEMS configurator:

- on settings page inside source table, select SolarEdge inverter. Please see settings
- on io mux page define IP address for inverter. Please see io mux

To setup Modbus TCP on Inverter using SetApp:

- Select Site Communication menu
  - RS485-1 → Protocol → SunSpec (Non-SE Logger)
  - RS485-1 → Device ID, and enter the number 1.
  - Select Modbus TCP and set to Enable.
  - To modify the *TCP port, select Port, set the port number to 502.

*TCP port is 1502 by default.

From:
https://wiki.hiq-universe.com/ -

Permanent link:
https://wiki.hiq-universe.com/doku.php?id=en:robotina_charger:commissioning:pv_inverter&rev=1670594226

Last update: **2022/12/09 13:57**