# CONFIGURATION

# MAIN PAGE

On this menu, the user can overview system operations.

### ×

The menus can be changed on the right side of the window.

lc	ons color n	neaning					
×	Gray	This condition doesr	n't have to be met because it's disabled				
×	Grayed out	This condition is ena	abled, but it can't be met right now				
×	Yellow	This condition must	be met and is waiting for the person to do it				
×	Green	Everything is okay,	you're clear to enter				
×	Orange	From now on you ca	an enter only with L2 allowance				
×	Red	Something is wrong	, you must not enter				
St	Status overview						
×	Occupation status and limit count		It shows occupied status and remaining count to the limit of people				
×	Disinfector	status	It shows if person had applied a disinfector				
×	Allowance status		It shows if person has a fever and if he wears a facemask				
×	× Card reader		It shows if the use of entry card is needed and the user's level of access				
×	Confirmation status		It shows if the receptionist had left you in and the person's level o access				
×	Enter status	S	It shows if person should enter or exit				

### ×

This is the gate status overview.

#### Gate status overview It TOF sensor detects person, the entrance arrow light (right) turns on for the 1 Door sensors people coming in, or the exit arrow light (left) turns on for the people going out If both red and green light are turned on, the entrance conditions must be met (card, face sensor, disinfector, ...), if the green light is turned on you can enter, if Semaphore the red light is turn on you can't enter. If the semaphore beeper is turned on 2 status along with a red light, the person must exit the building immediately. Beeper can be disabled on the System setup menu or it can be set that it resets when the person exits the building It shows if gates are closed or open. Smart Gate system works with all kind of 3 Gate status gates: normal, revolving door, sliding door, ... It shows if the presence sensor has been triggered 4 Presence status

5 Thermo and mask camera status	It shows if person has a fever and if he wears a face mask. Two types of thermal scanner are supported. First one scans the face, checks if person is wearing a mask and measures the temperature. Doors are closed and if every condition is met, person can enter. Second scanner measures temperature of a person. Doors are opened and if it has a fever, the entrance is prevented. In the System setup menu allowance type can be set on permission mode for first instance, or it can be set on prevention mode, for second.					
6 Disinfector status	It shows if a person applied disinfector					
7 Code reader	It shows the status of access					
Configuration	Configuration					
Set count	Fix the count of total number of people counted in space, if it's found that the actual number is different from what the TOF sensor has counted					
Confirm L1	If the condition for L1 access are met, the button will become enabled					
Confirm L2	If the condition for L2 access are met, the button will become enabled					
Reset alarm	Resets alarm					
Gate auto/gate opened	Switches between gates opening automatically with security measures or opening manually. When they can be opened manually it usually means it's because of emergency and everyone must leave the building immediately					

### **ACCESS SETTINGS**

On this menu, the code and access status for each code can be edited.

		_
	_	
	-	
	æ	
_		

Configur	Configuration				
Edit code	Manually input new user's code, alternatively you can scan it with the card scanner				
Туре	Set user level of access, which are L1 for normal users, L2 for VIPs and UL unlimited access (employees)				
Code list	All the users are saved in controller. It can hold up to 100 codes. Click the code to enable editing it				
Search	Checks the code list for desired code, which is inputted in the edit code section. The code number and type are then returned				
Save	Saves the created edit code				
Clear	Clears the edit code and type				
Delete	Deletes the code from the code list				

## SYSTEM SETUP

When the system is connected and turned on, the technician sets these settings.

×

Configuration	
Limit 1	This is the limit for normal access, everyone can enter. After this limit is reached, only VIPs and employees can enter (no more L1 access)

Limit 2	This is the limit for VIP access, L2 and UL can enter. After this limit is reached, only employees can enter (UL access only)				
Counting type	Choose if the counting of people is with digital IO or communication				
Presence time-out	Set how long the presence sensor is active after detecting someone				
Entry gate time-ou	It Set how long the entry doors are open after the conditions are met. If the TOF sensor detects person entering, the timer is reset				
Exit gate time-out	Set how long the exit doors are open after the conditions are met. If the TOF sensor detects person exiting, the timer is rest				
Alarm duration	Sets duration time of the alarm				
Alarm beeper enabled	Enable or disable alarm beeper				
Reset alarm on ex	it Enable or disable the reset of alarm on exit				
allowance condi	hat have to be met if everything is enabled: disinfection and tion must be met and then just one of other two conditions at means either reader or confirmation condition				
Disinfection	Sets if disinfection is necessary for user's level of access, sets time-out that triggers after check				
Allowance	Sets if face mask and temperature check is necessary for user's level of access, sets time-out that triggers after check				
Reader	Sets if scanning card on the reader is necessary for user's level of access, sets time-out that triggers after check				
Confirmation	Sets if receptionist confirmation is necessary for user's level of access, sets time-out that triggers after check				
Allowance type	If set on permission, door opens when user is clear to enter after ok allowance check, if set on prevention, door closes when users fails allowance check				
Internet access					
Enable push to server	Enable connection to the cloud server (allow controller to send periodical push message to server) every 30 seconds				
Test	Send push message instantly				
Reset	Reset number of sent messages				
Push timer	Shows countdown after which the push message will be sent				
Messages	Number of all sent messages and number of successfully sent messages				
Roundtrip	Time it takes the message to get to server and the response to come back				
Master code	When the master code is scanned, red an green light will start flashing. f the master code is scanned, then normal cards are scanned and master code is scanned again, all the normal cards will be added to the code list (if they aren't already on it) and they will be granted L2 access. If master code is scanned and then scanned again, all the entries on code list will be deleted				
	f scanned code is not on the code list for that device, a query will be sent to other devices in the system. If it gets the response from other device, that the code is on it's list, access is granted				
Process LAN code query	Enable to process code query and send back answer				
LAN query	Set query timeout. If the device that sent query doesn't get answer in set time, it refuses access				

	It searches for other controllers in the network and opens a menu with found controllers. If the other controller is chosen, you manage this one				
Parameters con	figuration				
Init parameters	Set parameters to the ones saved in permanent memory				
	Save set configuration to the permanent memory				
Read parameters	Read parameters from the permanent memory and write them to work parameters				

### **DISPLAY SETTINGS**


×

Paramet	ters config	uration for alphanumeric display				
Line 1						
		Set text that will be displayed on first line when proximity detector detects someone				
Advertisi	ng 01-09	Set text that will be displayed when proximity detector isn't detecting anybody				
Advertisi	ng text time	Set timer at which the advertising text changes				
Line 2						
Counters		Displays number of people with L1 and with L2 access in the building				
Line 3						
Enter		Set the text that will be displayed when person is allowed to enter				
Disinfect		Set the text that will be displayed when person has to disinfect hands				
Camera		Set the text that will be displayed when person has to look at the camera				
Confirm		Set the text that will be displayed when waiting for confirmation t enter				
Code		Set the text that will be displayed when person has to scan the code				
Occupied		Set the text that will be displayed as long as the limit of people inside is reached				
Fever		Set the text that will be displayed if fever is detected				
Exit		Set the text that will be displayed if the person has to exit the building				
Paramet	ters config	uration for graphic display				
Caption						
Full	Set text that	at will be displayed if the place is full				
Level 2	Set text that will be displayed when the limit of people for L1 access is reac and only people with L2 access are allowed to enter					
Level 1	Set text that	at will be displayed if no limit of people is reached				
Alarm	Set text that	et text that will be displayed if alarm is triggered				
Warning Set text that		at will be displayed if warning is triggered				
Text						
Enter	Set the tex	t that will be displayed when person is allowed to enter				
Disinfect	Set the tex	t that will be displayed when person has to disinfect hands				

Camera	Set the text that will be displayed when person has to look at the camera
Confirm	Set the text that will be displayed when waiting for confirmation to enter
Code	Set the text that will be displayed when person has to scan the code
Occupied	Set the text that will be displayed as long as the limit of people inside is reached
Fever	Set the text that will be displayed if fever is detected
Exit	Set the text that will be displayed if the person has to exit the building

### **CONFIGURATION EXAMPLES FOR DIFFERENT USES**

-This configuration is useful when for example there's two entrances. One is for normal access, doors are open and everyone can enter without having to met any conditions. But the other is for VIPs only. Swiping L2 card or receptionist's confirmation is required to enter (e.g. stadium entrance for VIP lounges).

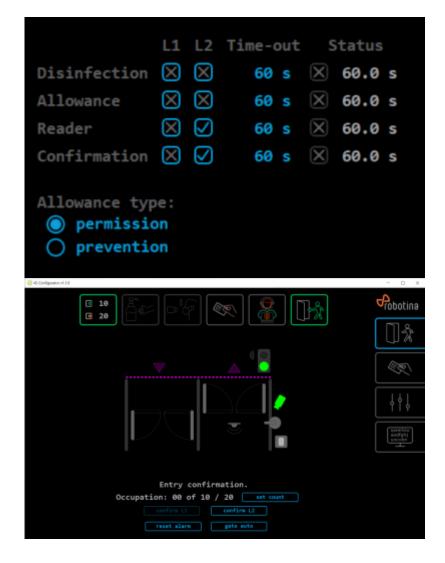



-This configuration is useful when for example you have one entrance for everyone, no code is required to enter, but all who enters have to apply disinfector and perform a face scan (e.g. when there's a danger to get infected or to infect others, like in a hospital).

	L1	L2	Time-o	ut	Sta	atus	
Disinfection	$\bigtriangledown$	$\bigtriangledown$	60	s	6	0.0	S
Allowance	$\bigtriangledown$	$\bigtriangledown$	60	s	6	0.0	S
Reader	$\boxtimes$	$\boxtimes$	60 9	s 🜔	6	0.0	S
Confirmation	$\boxtimes$	$\boxtimes$	60 :	s 🜔	6	0.0	S
Allowance type: <pre>     permission     prevention </pre>							

2025/07/06 15:37


7/13






-This configuration is useful when for example there's two entrances, one entrance for normal access, but people who enter have to apply disinfector and perform a face scan. The other entrance is for VIP's, they have to swipe the card or get receptionist's confirmation to enter (e.g. on a airport where there's a main entrance for everyone who have to go through security measures to get on a plane and another entrance for people with private planes).

Last update: 2020/06/29 08:47

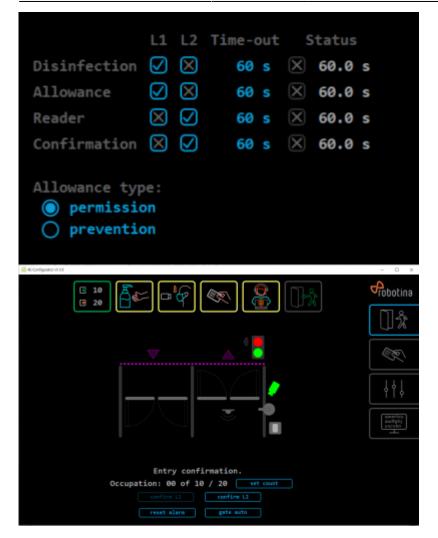



-This configuration is useful when for example there's just one entrance for everyone, but you are alone in the place where you're entering so you don't have to wear mask, but you can't be contagious so the people who enter behind you don't catch a disease (e.g. public toilet in a supermarket or sleeping pod in the airport).

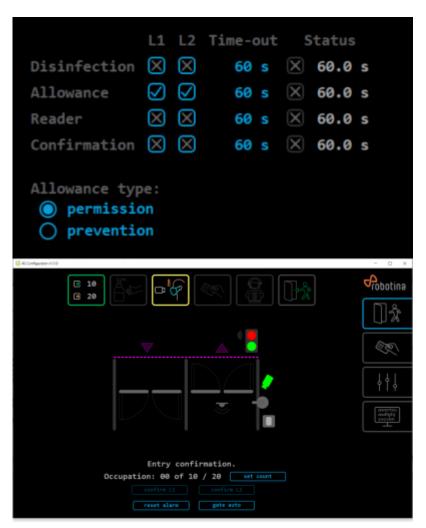

Last update: 2020/06/29 08:47




-This configuration is useful when for example there's two entrances with different level of security. For less secure entrance just a card is needed to enter, but for more secure entrance card can't be used in case it's stolen, so only receptionist can let you in (e.g. bank's vaults).

2025/07/06 15:37





-This configuration is useful when for example there's just one entrance that is always open because allowance type is set on prevention. Only condition for entering is that face scan has to be performed. If someone enters without scanning or the fever is detected, entrance closes (e.g school's entrance).

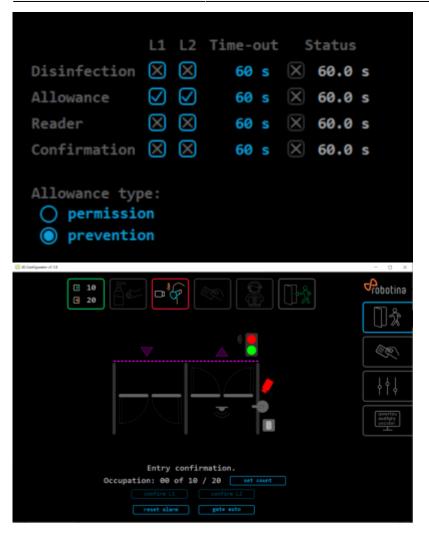



http://wiki.hiq-universe.com/

Printed on 2025/07/06 15:37

From: http://wiki.hiq-universe.com/ -

Permanent link: http://wiki.hiq-universe.com/doku.php?id=en:3s:configuration&rev=1593420438



Last update: 2020/06/29 08:47