


HIQ UNIVERSE

HIQ Universe is a cloud service that enables:

- An overview of current power consumption and
- An overview of the history of electrical power and energy consumption and production.

Access point: <https://my.hiq-universe.com>

HIQ Universe Log-in

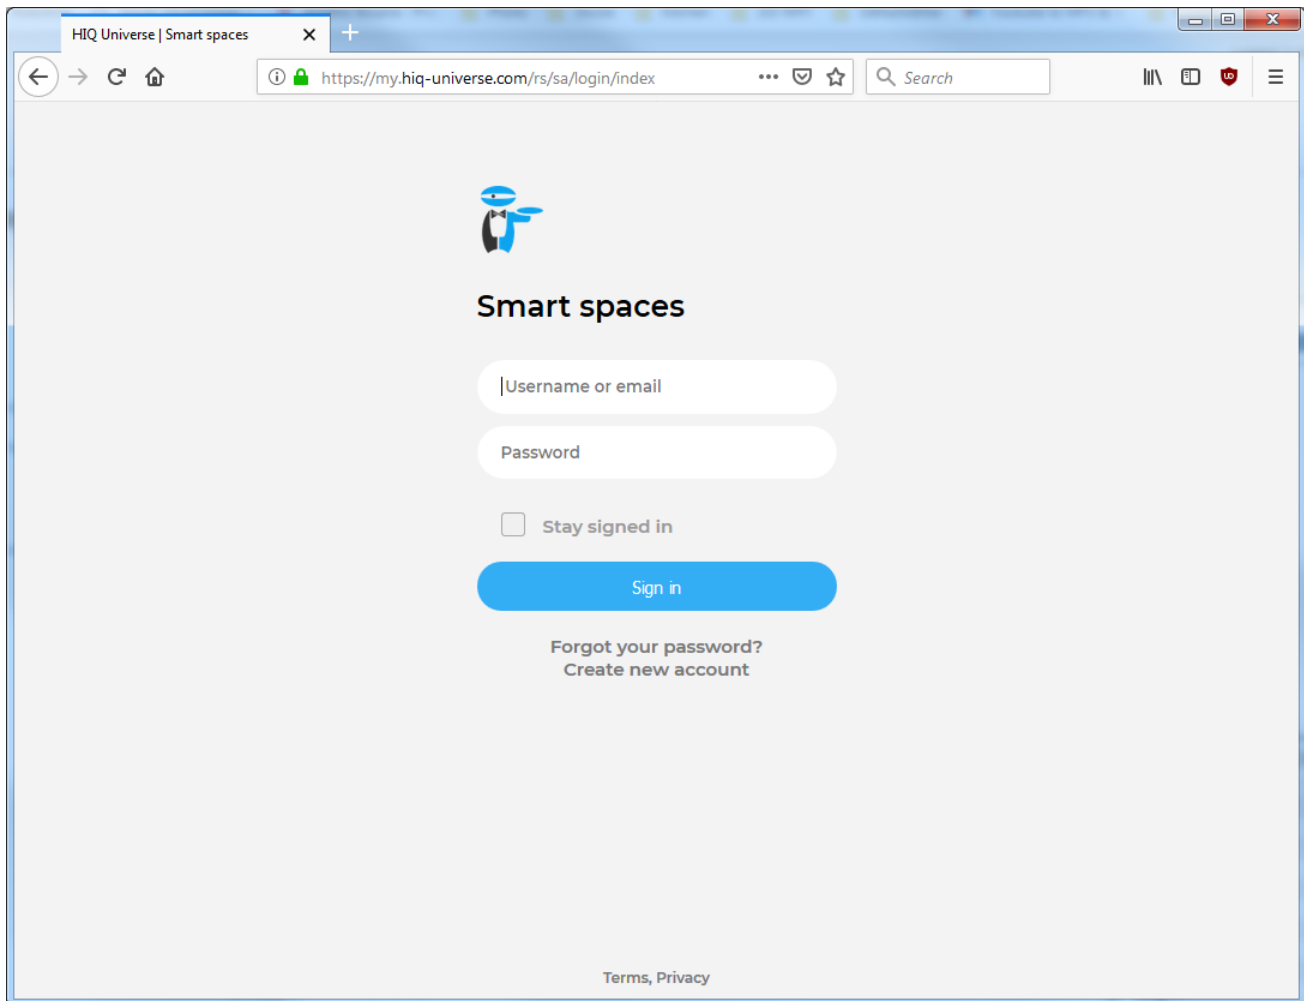


The screenshot shows a web browser window with the URL <https://my.hiq-universe.com/rs/sa/login/index>. The page features the HIQ Universe logo (a blue robot head) and the text "Smart spaces". Below the logo are two input fields: "Username or email" and "Password". There is a checkbox labeled "Stay signed in" and a blue "Sign in" button. At the bottom of the form, there are links for "Forgot your password?" and "Create new account". At the very bottom of the page, there is a link for "Terms, Privacy".

Log in with your username or email and password to see your [HIQ Universe subscription dashboard](#).

To reset forgotten password click on "[Forgot your password?](#)"

To create new account click on "[Create new account](#)".

Create HIQ Universe account

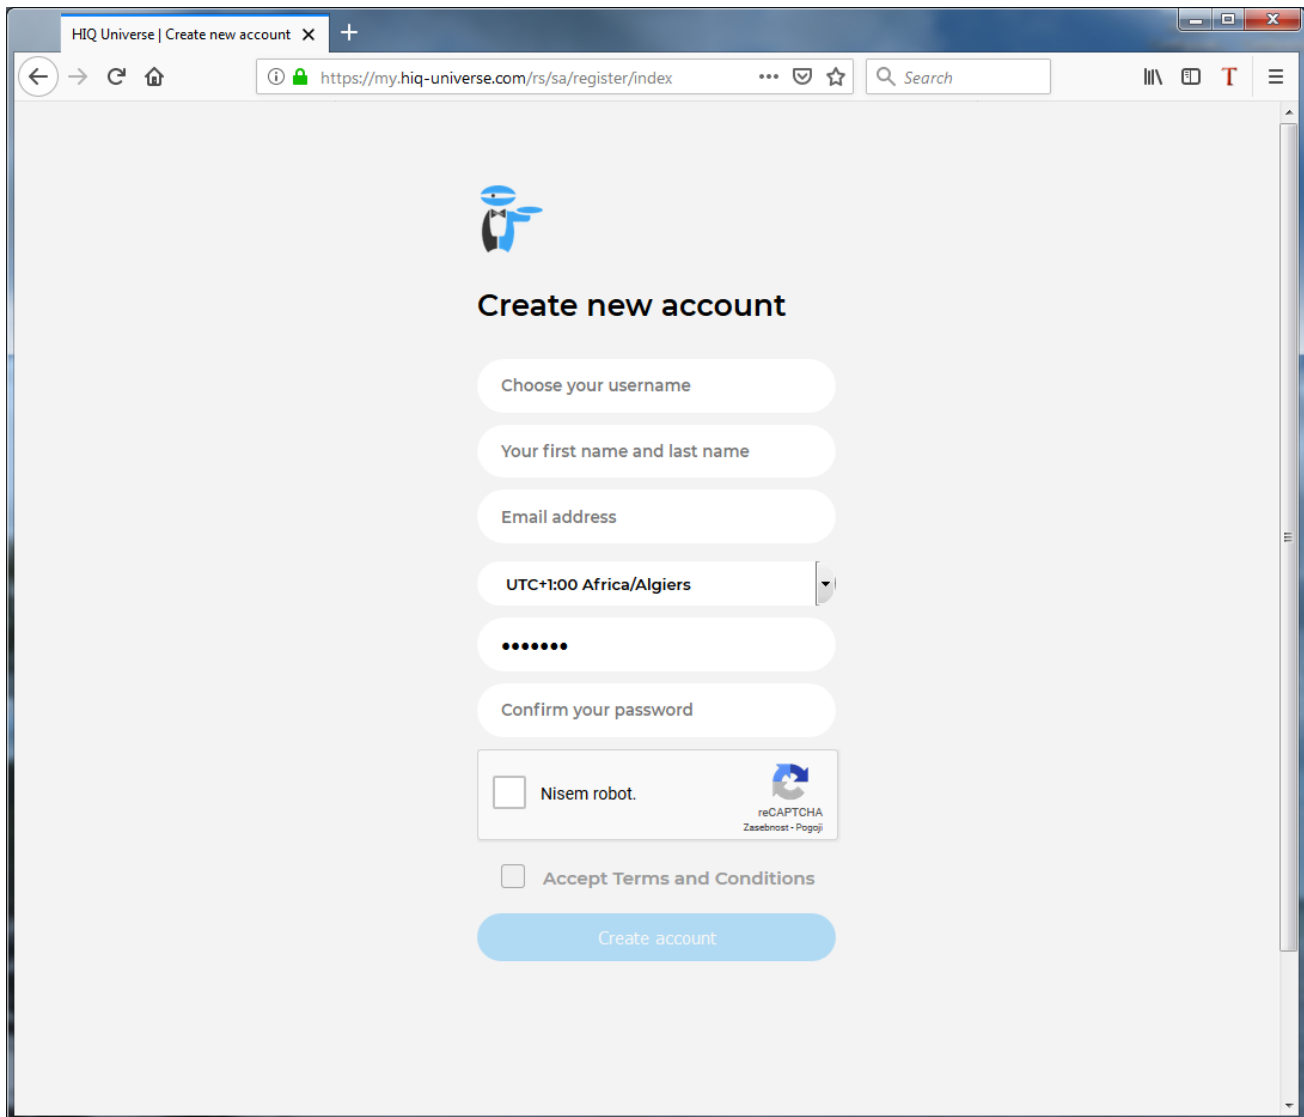

The screenshot shows a web browser window with the URL <https://my.hiq-universe.com/rs/sa/register/index>. The page features the HIQ Universe logo (a blue robot head) and the heading "Create new account". The registration form includes the following fields and elements:

- Choose your username
- Your first name and last name
- Email address
- Timezone dropdown menu (currently set to UTC+1:00 Africa/Algiers)
- Password field (masked with dots)
- Confirm your password
- Nisem robot. (reCAPTCHA Zasebnost - Pogoji)
- Accept Terms and Conditions
- Create account button

In the appropriate fields, enter:

- Username
- First and Last name
- E-mail address
- Timezone
- Password

Click on "I'm not a robot"


Accept Terms and Conditions.

Click on Create account.

A confirmation link will be sent to your email address.

Proceed to ["HIQ Universe Log-in"](#) screen.

Reset forgotten password

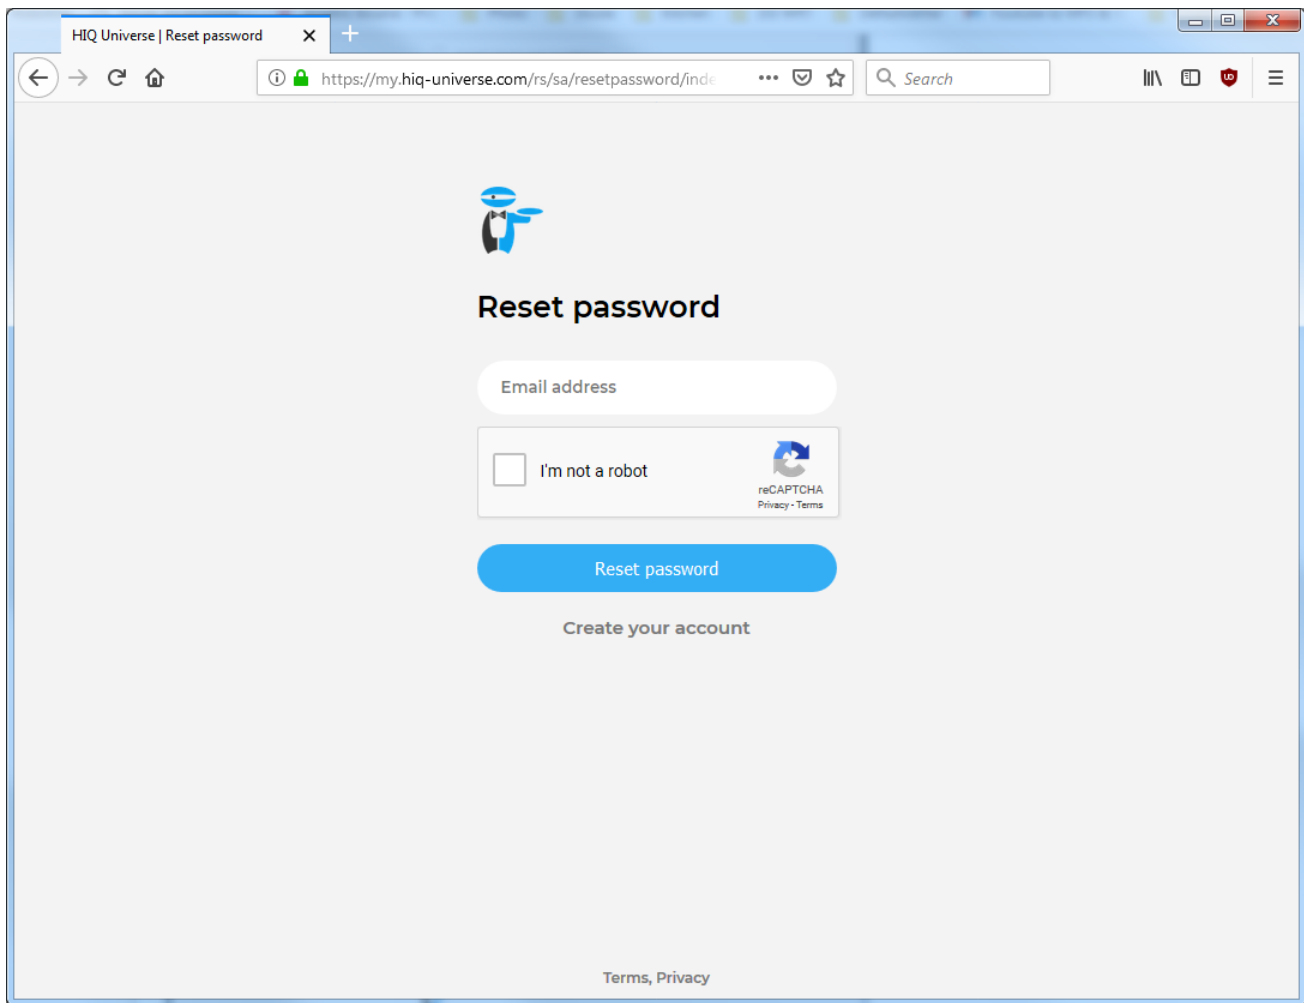


The screenshot shows a web browser window with the title "HIQ Universe | Reset password". The address bar displays "https://my.hiq-universe.com/rs/sa/resetpassword/index". The page content includes a blue robot icon, the heading "Reset password", an "Email address" input field, a reCAPTCHA "I'm not a robot" checkbox, a blue "Reset password" button, and a "Create your account" link. At the bottom, there are links for "Terms, Privacy".

In the appropriate field, enter email address.

Click on "I'm not a robot"

Click on "Reset password".

You will receive email with password reset link.

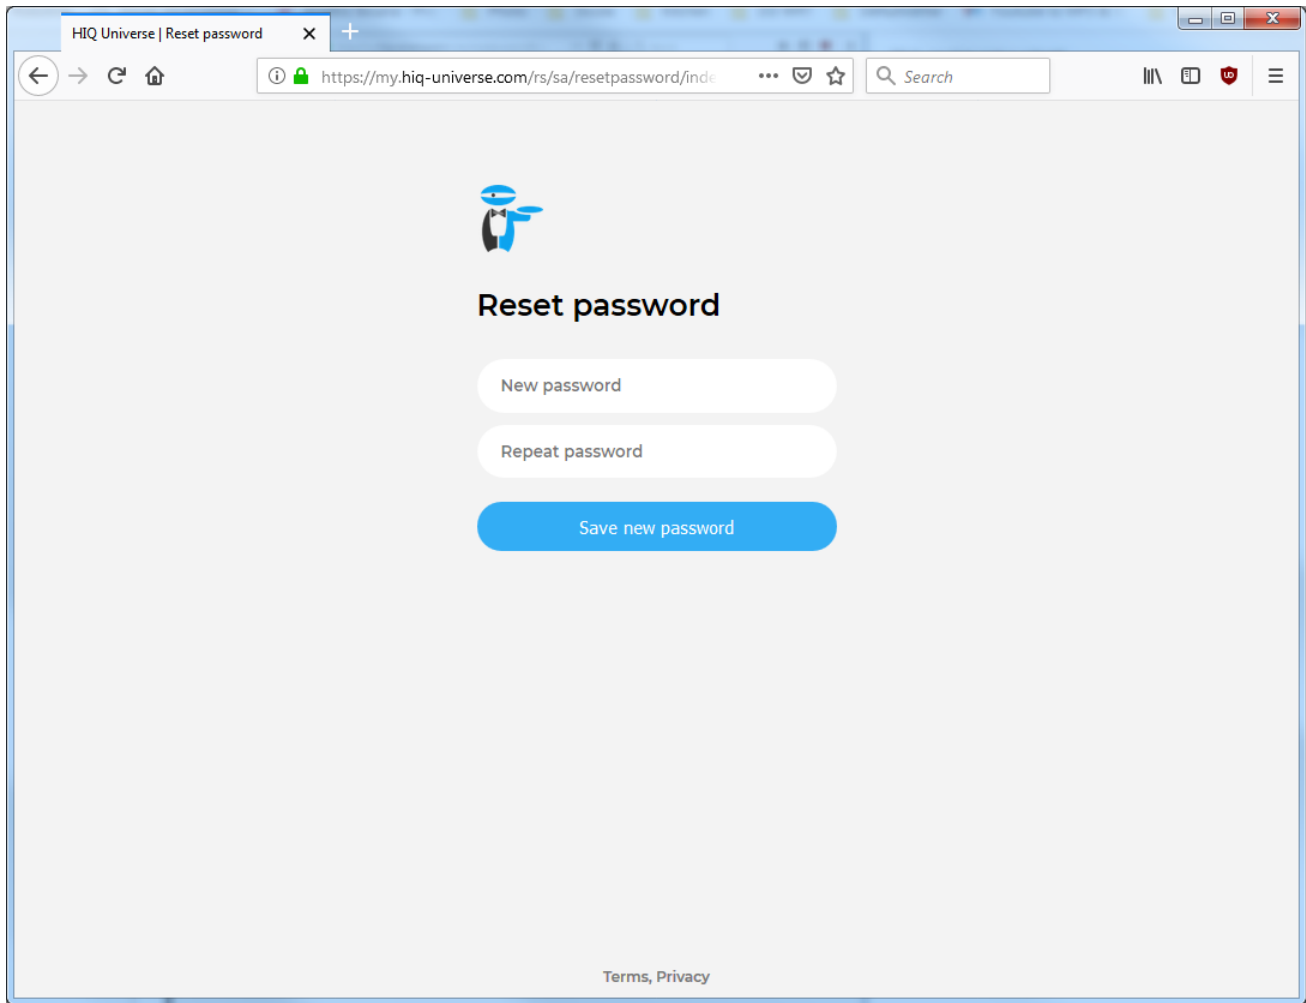

Enter new password and click on "Save new password".


Proceed to ["HIQ Universe Log-in"](#) screen.

Add HEMS controller



Enter HiQ universe activation code that you received from your installer.

HIQ Universe subscription dashboard

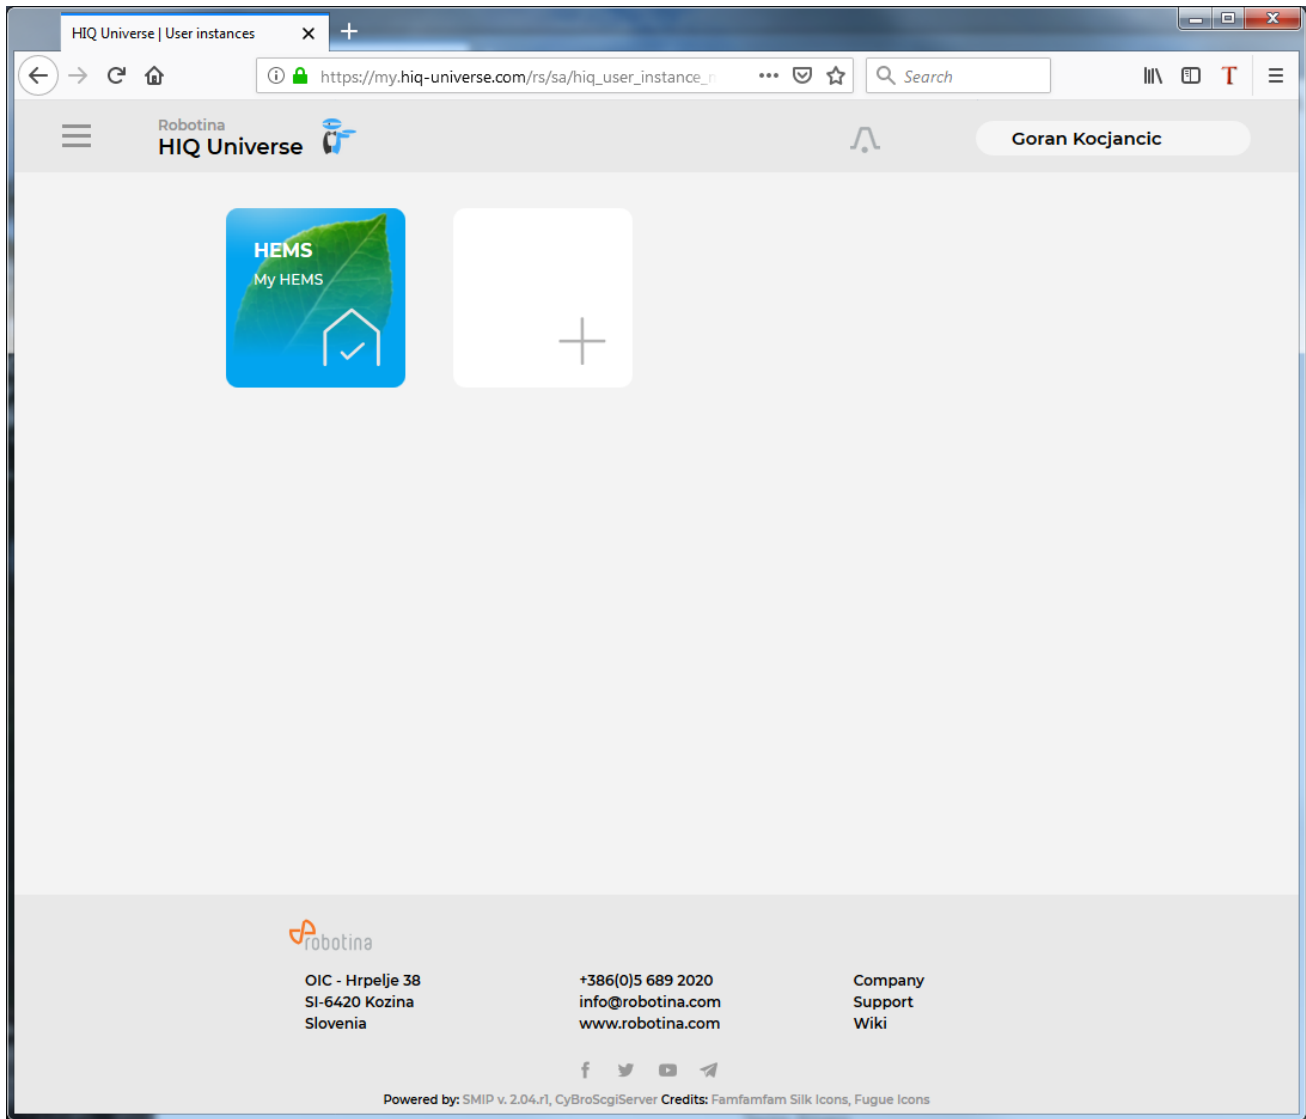

You will see tiles for all your subscribed HIQ Universe devices and services.

Go to [Main HEMS view](#) by clicking on HEMS tile or

add [new HEMS device](#) by clicking on blank tile with + sign.


["User profile set-up"](#) is invoked by clicking on user name on top right.

Main HEMS view



Main HEMS page consists of 3 sections:

- "Title and view selection row" at the top
- "Power flow chart" on left side
- "Power and energy time-plot" on right

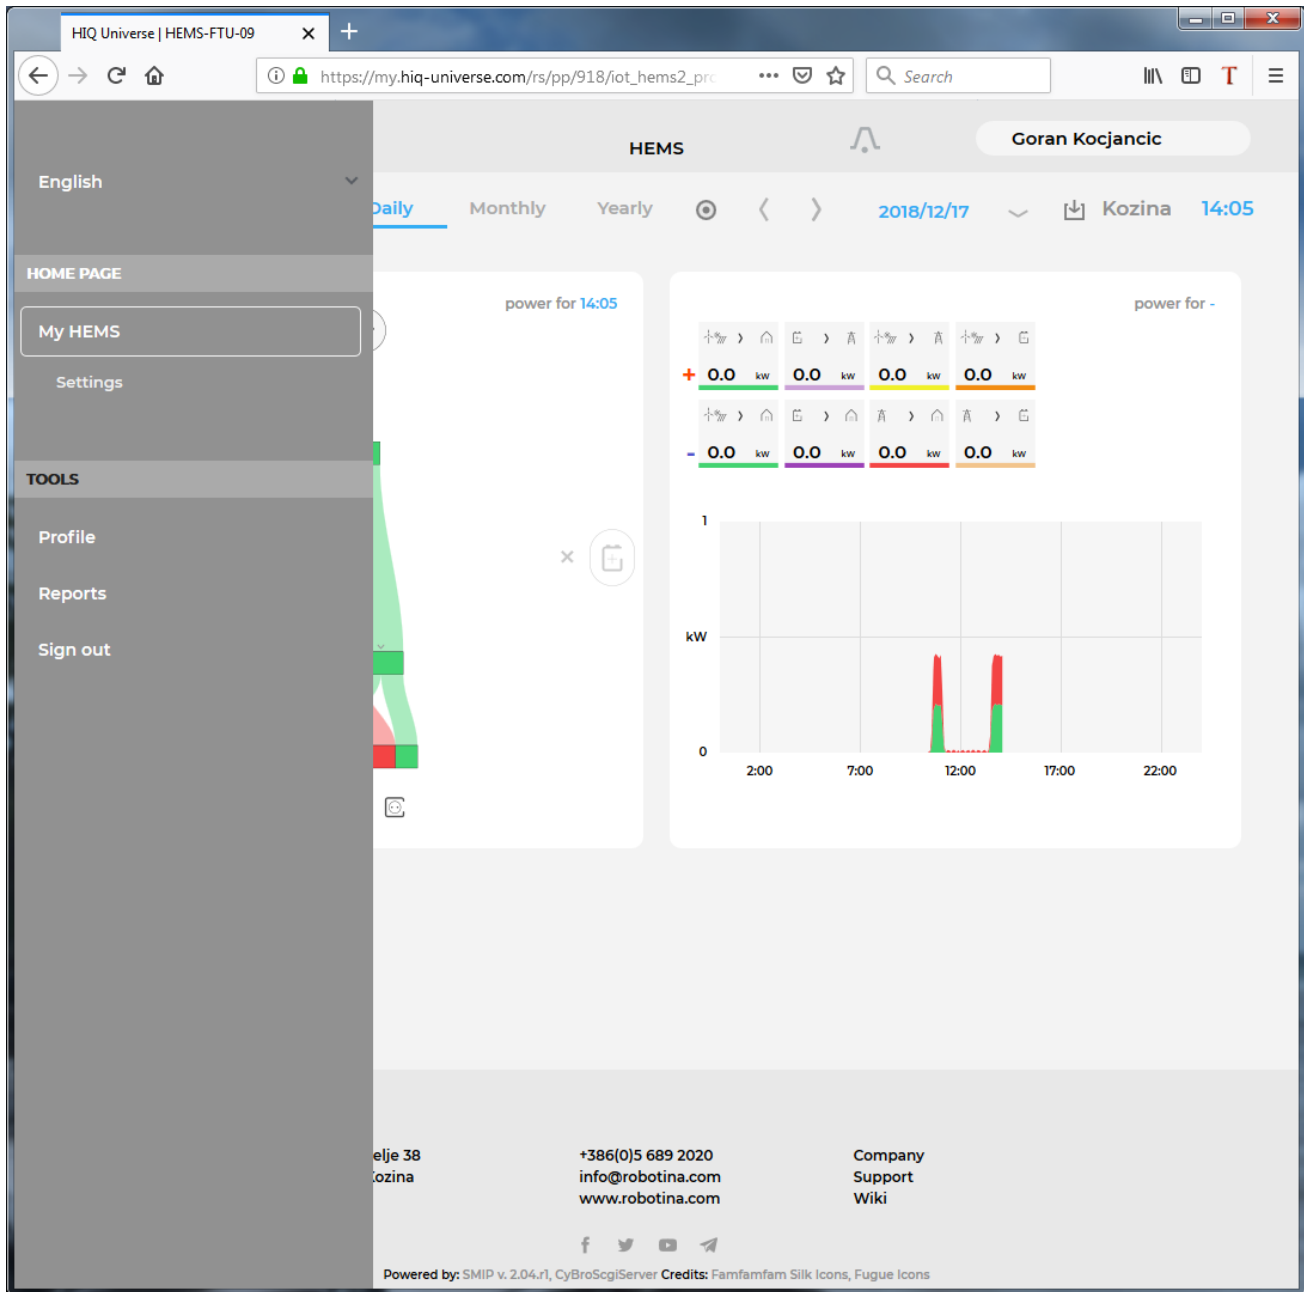

Side menu is activated by clicking menu icon (tree vertical lines at top-left). Menu items are dynamic created so can be different for each user. Typical menu items from top:

- Language selection
- Home page → section with all your subscribed HIQ Universe devices and services
 - MyHems → "Main HEMS view"
 - Settings → "HEMS settings"
- TOOLS → section with general site tools
 - Profile → "User profile set-up"
 - Sign out → Log off from HIQ Universe


Title and view selection row



From the left:

- HEMS name
- Lighting icon → time-plot displays energy or power
- Money icon → time-plot displays currency
- Daily → time-plot displays power
- Monthly → time-plot displays energy per day
- Yearly → time-plot displays energy par month
- Target icon → time-plot go to now
- < → time-plot goes to previous term
- > → time-plot goes to next term
- Date → Select term for time-plot
- Download icon → Download “csv” data for displayed time-plot period
- Location of HEMS installation
- Time at HEMS installation site.

Power flow chart

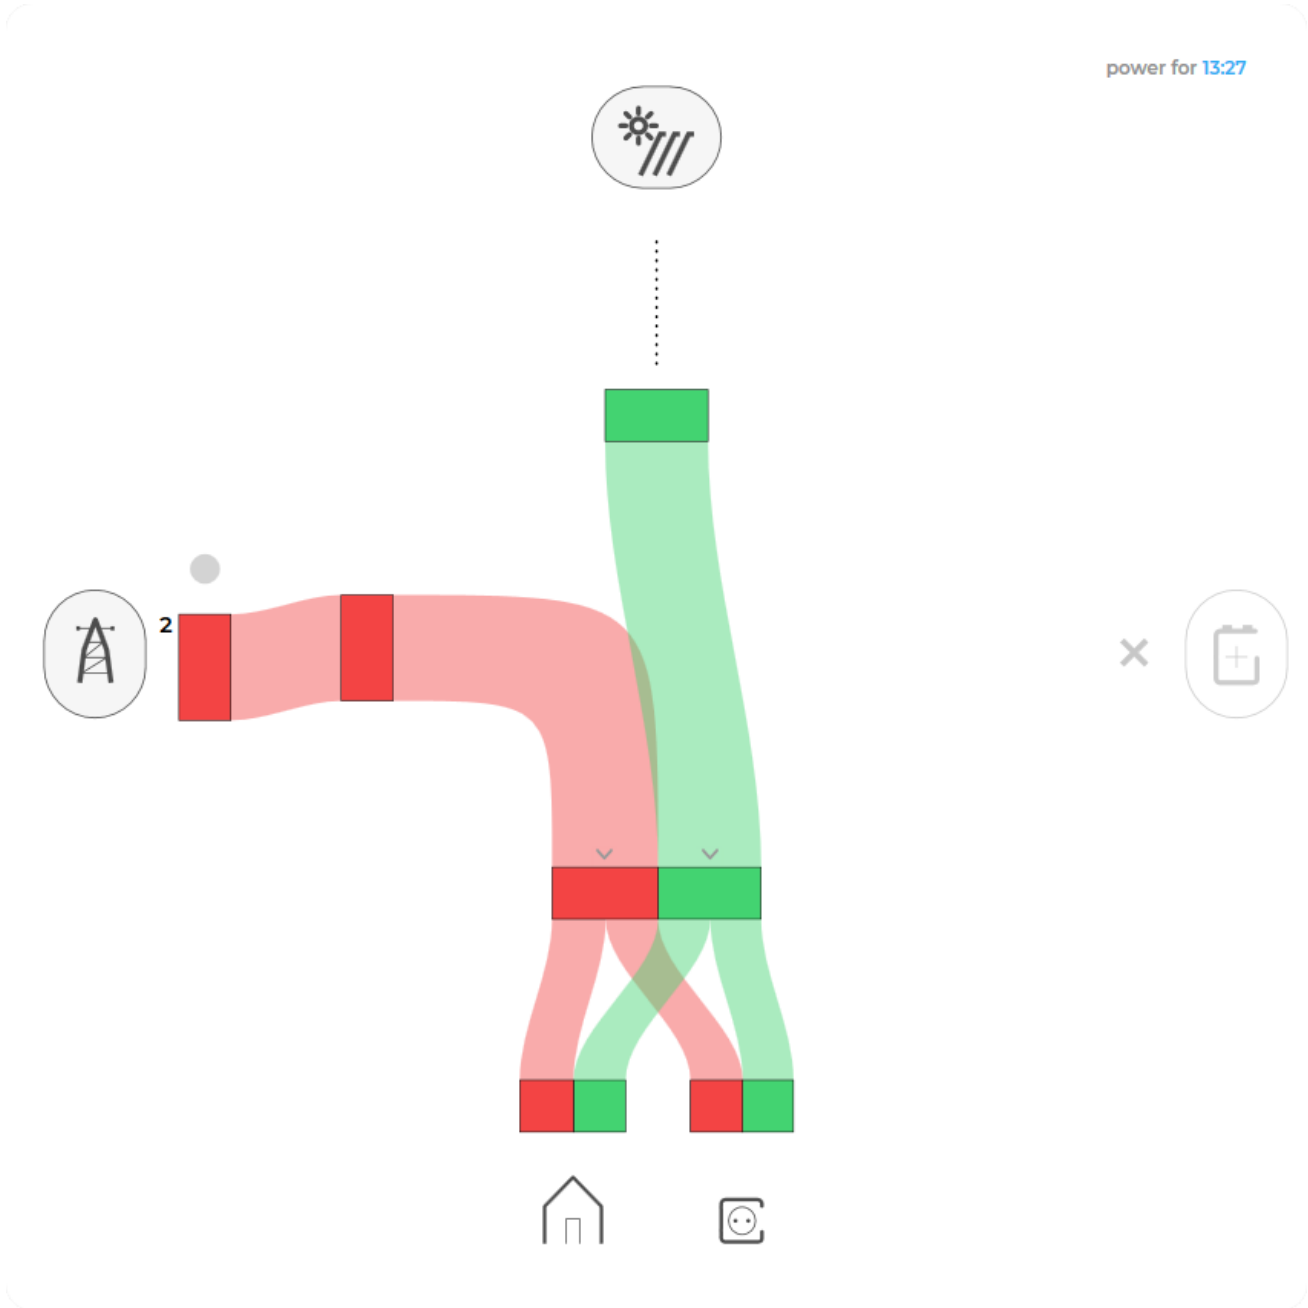

Displays actual power flow with:

- Power sources (Local PV, wind, co-generation plants) at top
- Grid (divided by tariffs) on left side
- Storage (battery) systems on right side and
- Consumers on bottom.

Unused items are soft greyed out with X. Items without actual power are displayed as dots.


Power and energy time-plot

power for 10:55



On bottom is time-plot for selected time period (in title row). By clicking on time plot a term for legend display is selected. Above there is power/energy legend.

User profile set-up

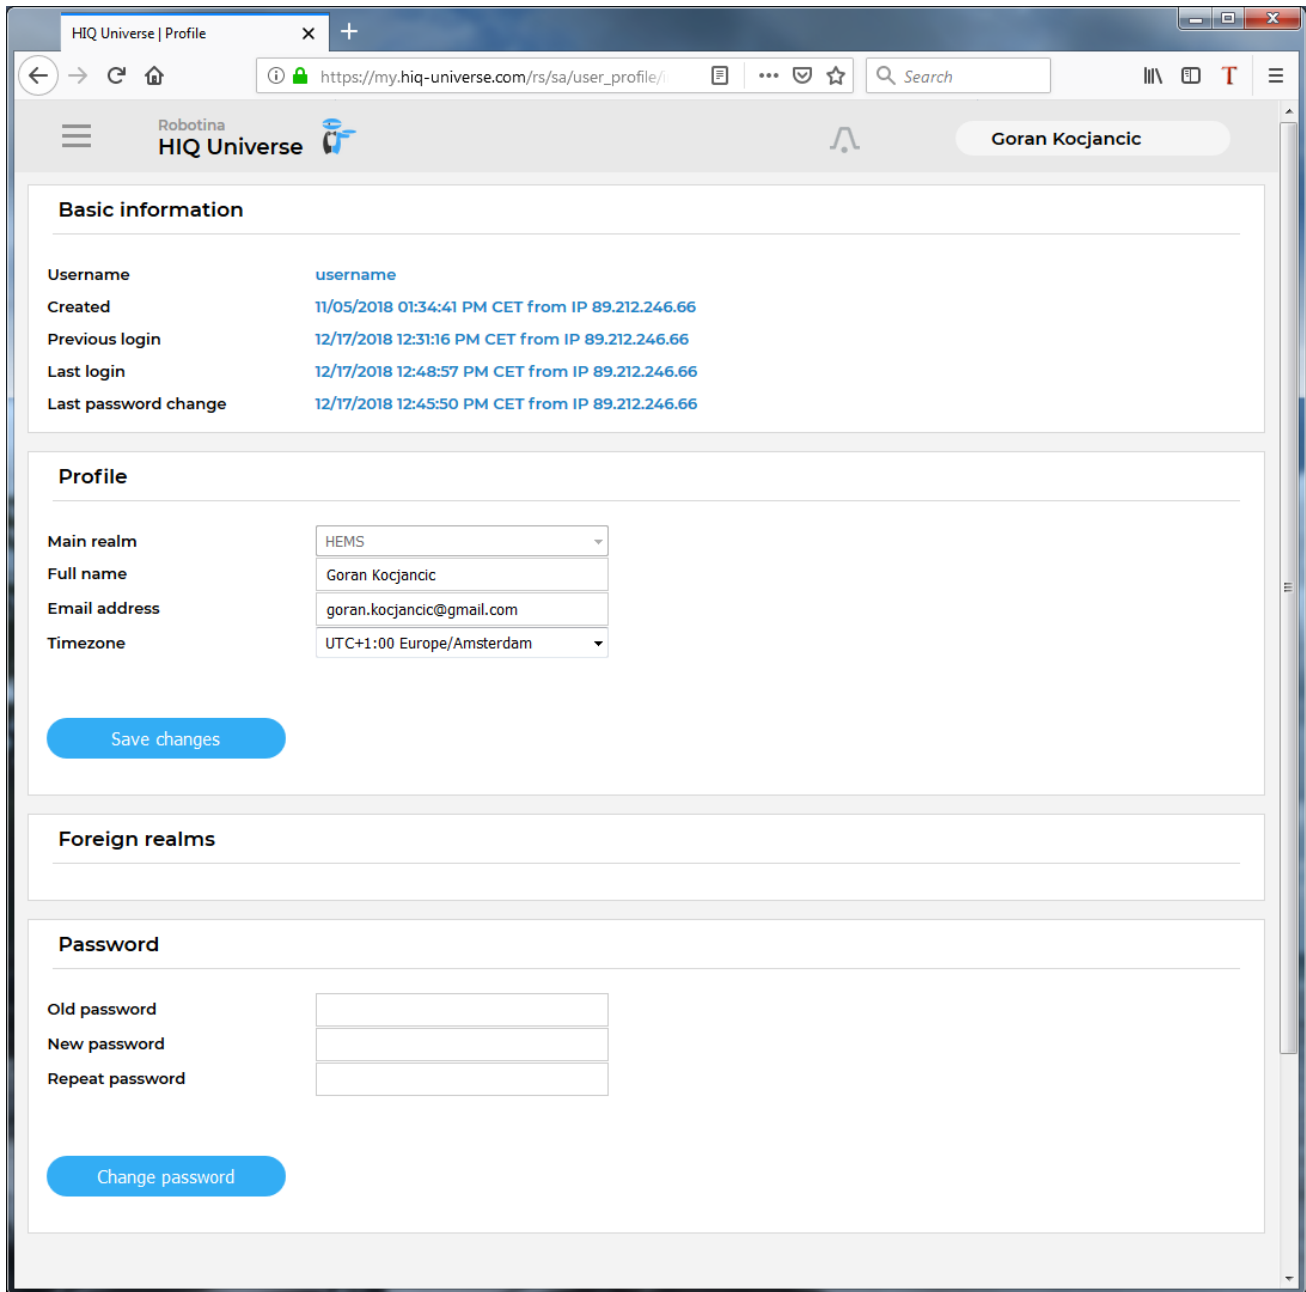

Basic information section:

- Username
- Created date and IP
- Previous and last login date and IP
- Last password change date and IP

Profile section:

- Main realm display
- Full name, email address and timezone edit fields

Foreign realms - devices and services where you have access to but you are not owner.

Password: fields for password changing.

HEMS settings



Sections:

- Settings:
 - Device name
 - Location name and coordinates
- Energy price: per tariff energy price
- Timeplots range: ranges for various timeplots
- Share your device: manage device sharing guest accounts

My Things and Smart-grid settings

My Things GUI could be accessed within the [HiQ Universe](#) platform by clicking the MyThings item within the main menu. Individual devices are presented as a group of cards, divided on four groups:

- Consumers
- Production
- Storage
- Sensors.

Consumers

Reflektor




State: **On**

Power: **288 W**

History

Span: **Day** | Date: **2020/09/23** | [Previous] [Next] [Refresh]

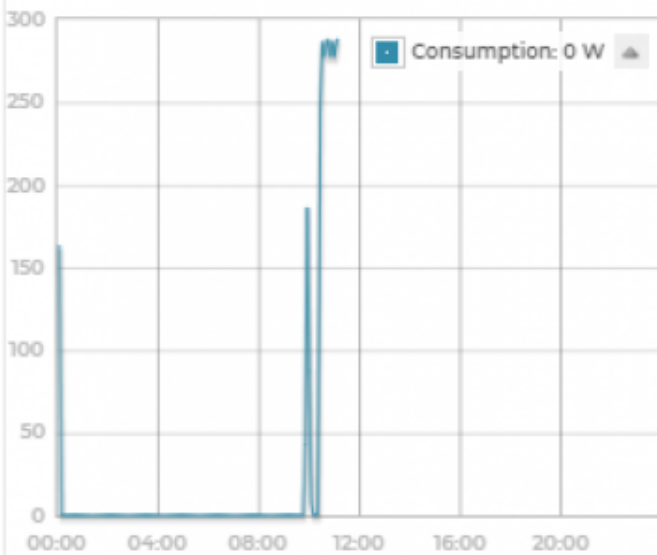

Settings

Manual override:

Smart grid

Cloud optimization:

Smart grid status: **Idle**

Enabled: from: : to: :

Max duration: min

Max request:

Suspend time: min

Consumers present devices, that consume electric energy. Within the group of Consumers, the first card present a general consumption of the object - a background consumption. The following items present real controllable devices, such as DHW Heater, Heat pump, wireless socket, etc. An example of a device is shown in the following image.

The form of a card of each consumer is composed of the general part, history and settings part.

General

General part contains:

Name of a device, which can be changed by user.

Icon (button) enables toggling the device operation state (Switch on / Switch off).

State label contain the information of device operation state (On / Off / Error).

Power label contain the information of device consumption power in watts.

History

History part shows historical consumption of a device. The temporal range can be selected as daily, weekly, monthly or yearly. Daily and weekly range shows power consumption in watts, while monthly and yearly range shows energy consumption in kilowatt-hours.

The interface enables time-frame selection and time-frame alignment to current time.

Settings

Manual override presents the time in minutes. When the user switches on the device, the device will automatically turn off after manual override minutes.

Example: manual override is set as 30 minutes. When the user switches on the device, it will switch off after 30 minutes.

Note: Manual override is disabled if it is set to 0 minutes.

If manual override is bigger than 0, the device will switch off automatically after specified number of minutes.

Smart grid settings

Cloud optimization enables or disables smart grid service.

Smart grid status label shows smart grid operation state with the following states:

- *Idle* - the device is not in activation
- *Executing* - the device is in activation

Enabled section specify the temporal range between **from** and **to** in the form of *hh:mm*, in which the device is allowed to be switched off from according to the smart-grid service. If **from** is larger than **to**, then temporal range is the opposite. If **from** and **to** are equal, then the smart-grid

service is enabled 24 hours a day.

Example: from 10:00 and to 14:00 enables the smart-grid service between 10:00 and 14:00, and disables in all other times.

Example: from 14:00 and to 10:00 disables the smart-grid service between 10:00 and 14:00, and enables in all other times.


Example: from 14:00 and to 14:00 enables smart-grid service is always enabled.

Max duration setting limits the duration of time, the smart-grid service switches off (activates) the device. After smart-grid service activates the device, the device will deactivate (switch back on) after max-duration minutes at the latest.

Max request setting limits the maximum daily activations from the smart-grid service.

Suspend time presents the time in minutes, which has to pass between two activations (between the stop of one activation and start of another).

Production

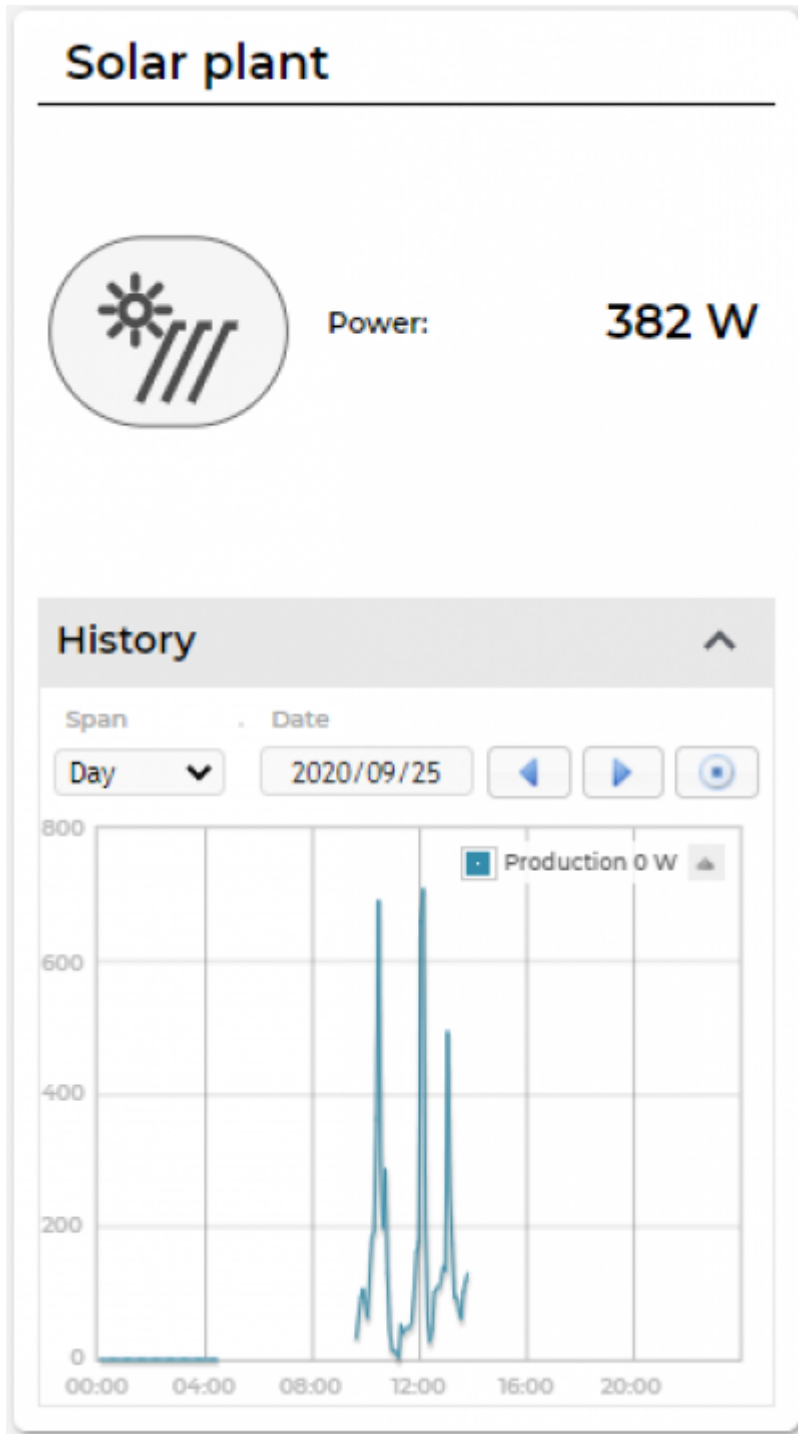

Producers present devices or systems that produce electrical energy. Example of such devices are solar power plant, wind power plant, diesel generator and others. An example on the following figure shows solar power plant.

General

General part contains:

Name of a plant, which can be changed by user.

Icon represent the type of producer.


Power label contain the information of device production power in watts.

History

History part shows historical production of a device. The temporal range can be selected as daily, weekly, monthly or yearly. Daily and weekly range shows power production in watts, while monthly and yearly range shows energy production in kilowatt-hours.

The interface enables time-frame selection and time-frame alignment to current time.

Storage

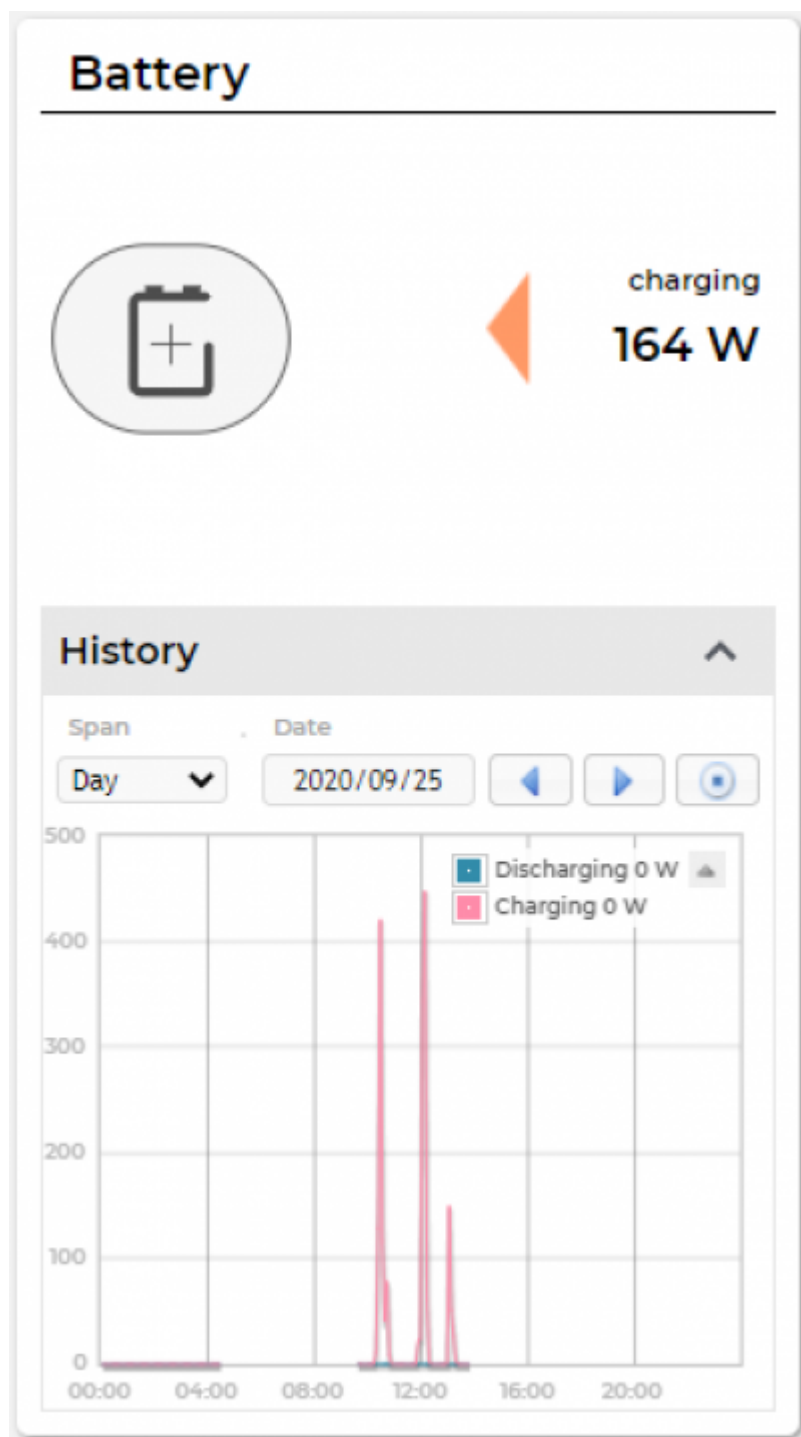

Storage present battery as shown in an example figure on the left.

General

General part contains:

Name of a battery, given by the user.

Icon representing the battery.


Power label contain the information of charging or discharging power in watts.

History

History part shows historical charging or discharging power of a device. The temporal range can be selected as daily, weekly, monthly or yearly. Daily and weekly range shows power charging or discharging in watts, while monthly and yearly range shows energy charged or discharged in kilowatt-hours.

The interface enables time-frame selection and time-frame alignment to current time.

Sensors

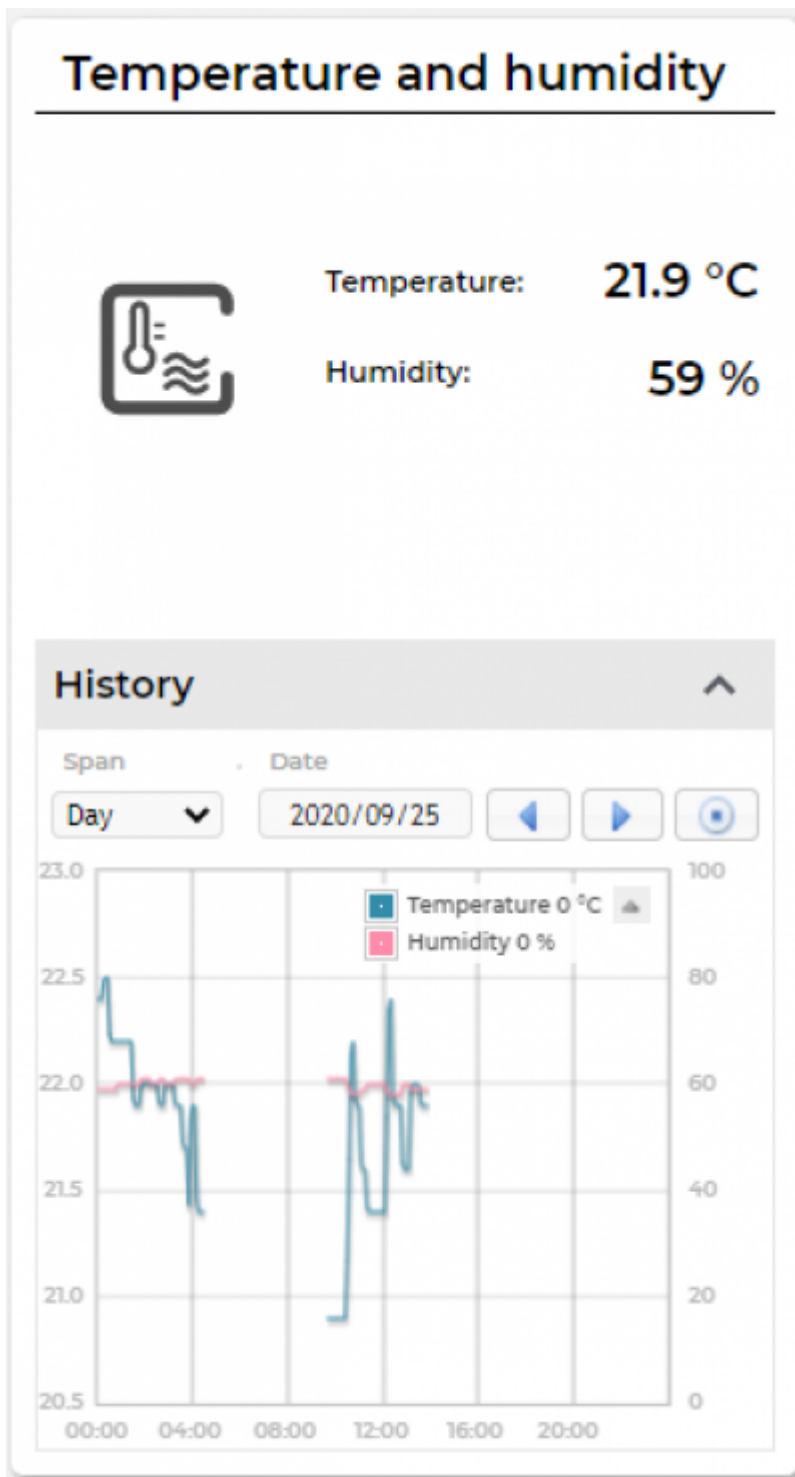

Sensors present devices or systems that measure various quantities, such as temperature, humidity. The left figure represent a combined temperature and humidity sensor.

General

General part contains:

Name of a sensor, which can be changed by user.

Icon represent the type of sensor.

Temperature label contain the information of temperature measurement in °C.

Humidity label contain the information of relative humidity in %.

History

History part shows historical sensor measurements. The temporal range can be selected as daily, weekly, monthly or yearly.

The interface enables time-frame selection and time-frame alignment to current time.

From:
<http://wiki.hiq-universe.com/> -

Permanent link:
http://wiki.hiq-universe.com/doku.php?id=en:hems_nedo_idrija:universe&rev=1601362881

Last update: **2020/09/29 07:01**

