# Wireless Modbus-to-Modbus bridge

#### Wireless Modbus-to-Modbus bridge




Model number:	WM-1
Frequency:	ISM 868MHz (EU)
Dimensions:	93x45x27 mm


### **Applications**

 Replacement for RS485 wiring solution with wireless. Optimal for long range Modbus RTU serial communications with half duplex configuration.

## Installation and mounting

- Carefully open WM-1 module and configure serial communication with jumpers. (Default configuration is 9600bps, 8N1 with normal timeout)
- Place WM-1 module at least 10cm from other objects. Installation is not recommended inside metal cabinets.
- Connect RS485 terminals to WM-1 RS485 terminals
  - A A
  - ∘ B B
  - ∘ C GND
- Connect to 230V power supply
- · Configure radio pairing

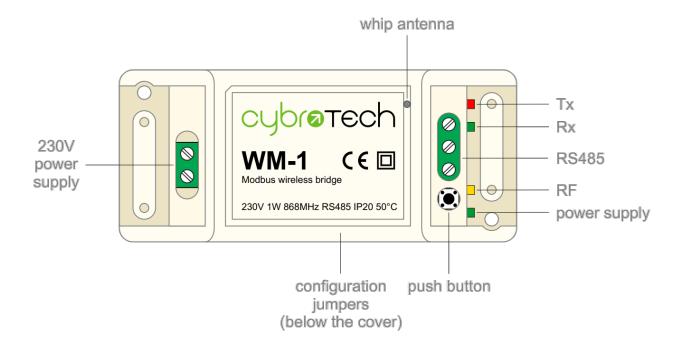

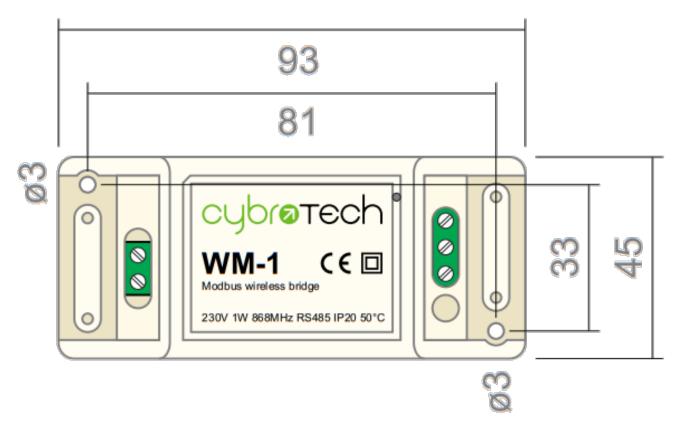

http://wiki.hiq-universe.com/ Printed on 2025/08/27 14:55

#### **Features**


- replacement for RS485 wiring
- Modbus RTU serial protocol
- wired/wireless combinations
- very long range, no hopping
- protected private connection
- multiple slaves per device
- multiple addressable groups

# **Technical specification**

Power supply:	230V, 50/60Hz, 1W	
Ingress protection:	IP20	
Operating temperature:	-2050°C	
Storage temperature:	-4085°C	
Relative humidity:	085% n/c	

# **Terminals and wiring**

To power sensor	В	RS485 bus
	C	
To power supply	L N	230V AC

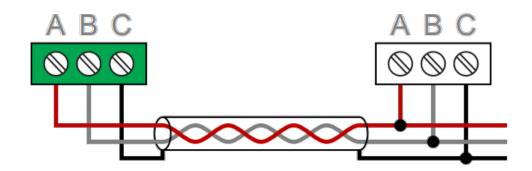

### **Serial configuration**

- Available baudrates 2400, 9600, 19200, 38400 bps
- Data bits and parity 8N1, 7E1, 8E1, 8N2
- Max 64 bytes per transmition
- Integrated 240 Ohm termination resistor




## **Radio configuration**

#### Create new secure group


- \* turn on all devices as the same time
- \* within 10 seconds, while RF LED is blinking, press and hold button on one of the devices
- \* after a second, the new address is randomly generated and sent to all devices. RF LED will blink 3 times to confirm the new address.

http://wiki.hiq-universe.com/ Printed on 2025/08/27 14:55

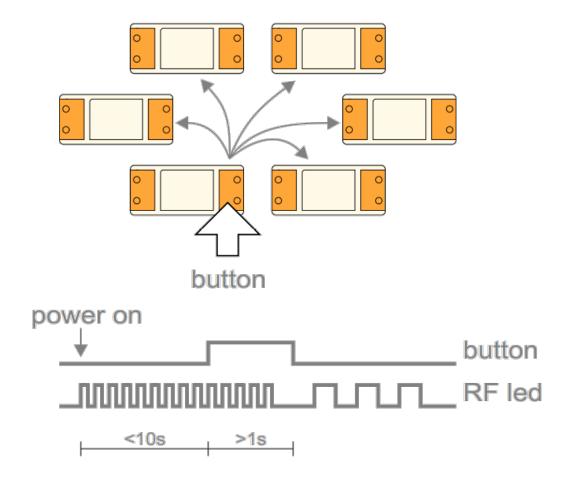

#### Add new device to the group


- \* turn on the device
- \* within 10 seconds, press and hold button on one of the existing devices
- \* after a second, the existing group address is sent to the new device. RF LED will blink 3 times to confirm the address is sent.

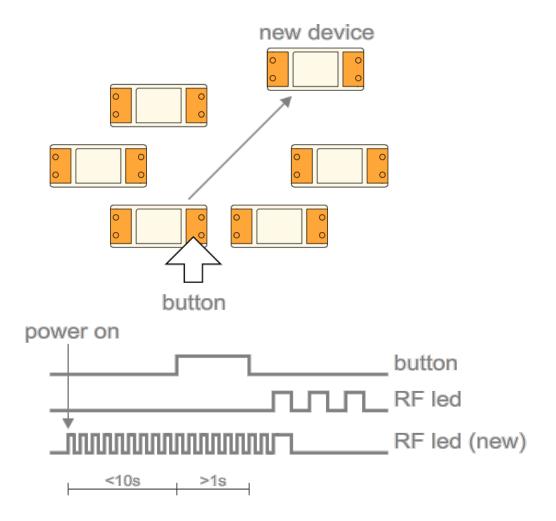

#### **Topology examples**


- \* Modbus master, connected to 12 slaves using a pair of WM-1 devices
- \* Modbus master, connected to 10 slaves, organized in two groups
- \* Modbus master, connected to 5 slaves, each one having local WM-1 device


http://wiki.hiq-universe.com/ Printed on 2025/08/27 14:55

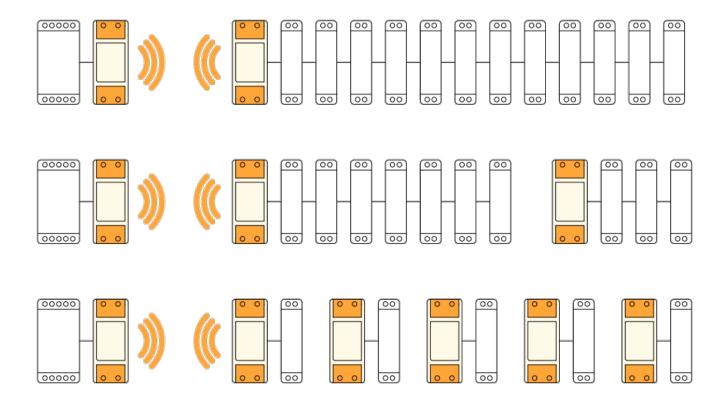

#### **Multiple groups**

- \* When the system has two or more separate Modbus lines, they should be configured as separate groups.
- \* Each group has a single master and one or more slaves.
- \* Groups can't talk to each other, but they share the same bandwidth.
- \* Two masters may start transmitting at the same time causing collisions.
- \* To reduce number of missed messages, keep the traffic low.

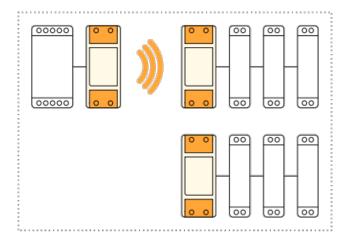

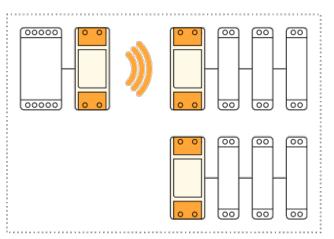

Last update: 2021/10/21 13:23

From:

http://wiki.hiq-universe.com/ -

Permanent link:

http://wiki.hiq-universe.com/doku.php?id=en:hiq\_hw:wm-1&rev=1634822

**596** 

Last update: 2021/10/21 13:23

