# Wireless Modbus-to-Modbus bridge

#### Wireless Modbus-to-Modbus bridge




Model number:	WM-1
Frequency:	ISM 868MHz (EU)
Dimensions:	93x45x27 mm

# **Applications**

• Replacement for RS485 wiring solution with wireless. Optimal for long range Modbus RTU serial communications with half duplex configuration.

### Installation and mounting

- Carefully open WM-1 module and configure serial communication with jumpers. (Default configuration is 9600bps, 8N1 with normal timeout)
- Place WM-1 module at least 10cm from other objects. Installation is not recommended inside metal cabinets.
- Connect RS485 terminals to WM-1 RS485 terminals
  - **A A**
  - **B B**
  - $\circ$  C GND
- Connect to 230V power supply
- Bind modules to wireless network

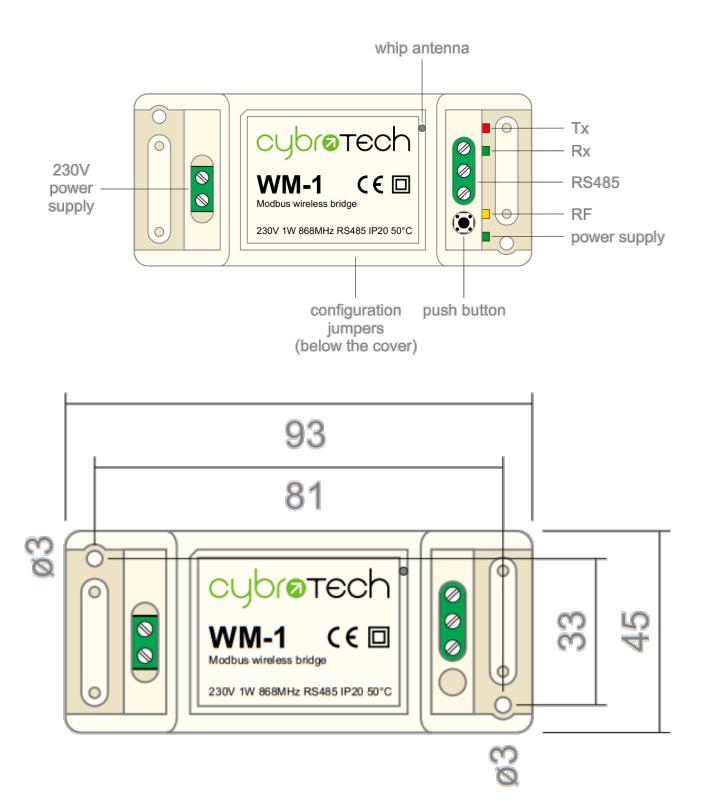

### Features


- replacement for RS485 wiring
- Modbus RTU serial protocol
- wired/wireless combinations
- very long range, no hopping
- protected private connection
- multiple slaves per device
- multiple addressable groups

# **Technical specification**

Power supply:	230V, 50/60Hz, 1W	
Ingress protection:	IP20	
Operating temperature:	-2050°C	
Storage temperature:	-4085°C	
Relative humidity:	085% n/c	


# **Terminals and wiring**

To power sensor		
		RS485 bus
	С	
To power supply	L	2301/ 00
	N	230V AC

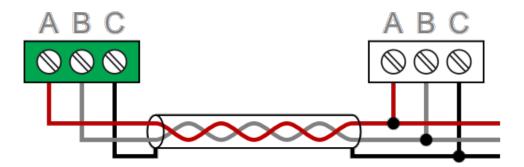

### Serial configuration and timeout

- Available baudrates 2400, 9600, 19200, 38400 bps
- Data bits and parity 8N1, 7E1, 8E1, 8N2
- Unax 64 bytes per transmition
- Integrated 240 Ohm termination resistor

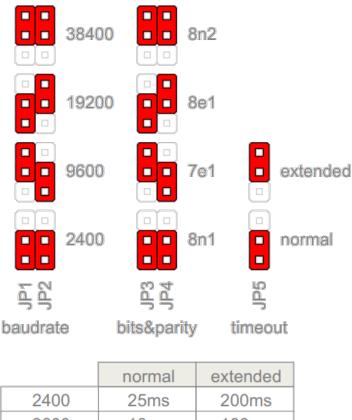


2400	25ms	200ms
9600	10ms	100ms
19200	5ms	100ms
38400	5ms	100ms

### **Wireless binding**


#### Create new secure group

```
* turn on all devices as the same time
* within 10 seconds, while RF LED is blinking, press and hold button on one
of the devices
* after a second, the new address is randomly generated and sent to all
devices. RF LED will blink 3 times to confirm the new address.
```

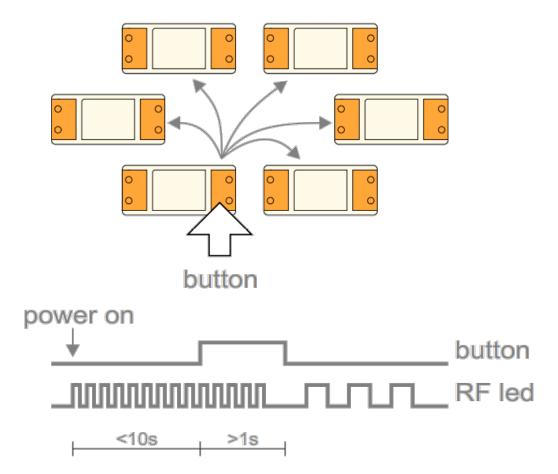

#### Add new device to the group


\* turn on the device
\* within 10 seconds, press and hold button on one of the existing devices
\* after a second, the existing group address is sent to the new device. RF
LED will blink 3 times to confirm the address is sent.

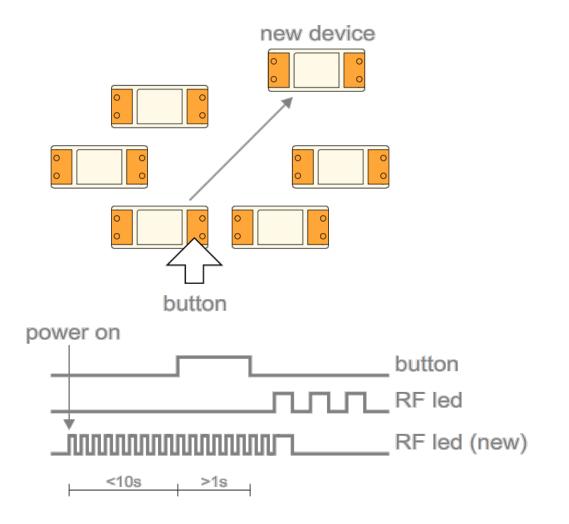

#### **Topology examples**

\* Modbus master, connected to 12 slaves using a pair of WM-1 devices


- \* Modbus master, connected to 10 slaves, organized in two groups
- \* Modbus master, connected to 5 slaves, each one having local WM-1 device

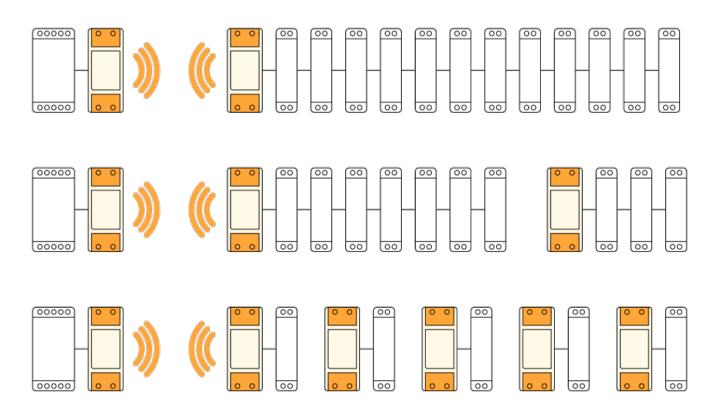

#### **Multiple groups**

\* When the system has two or more separate Modbus lines, they should be configured as separate groups.

- \* Each group has a single master and one or more slaves.
- \* Groups can't talk to each other, but they share the same bandwidth.
- \* Two masters may start transmitting at the same time causing collisions.
- \* To reduce number of missed messages, keep the traffic low.

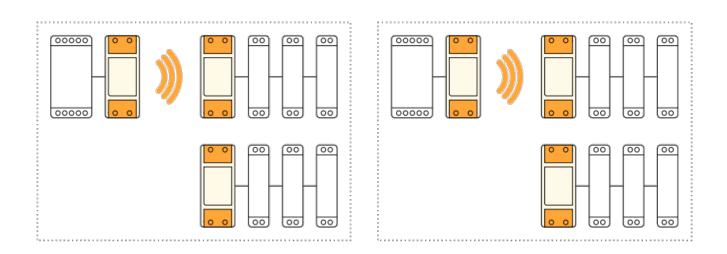

### **Connection check**


- Press button shortly
- RF LED will blink shortly on each connected device

• Serial interface is unaffected



#### **Factory reset**

- Hold button and turn the device ON
- RF led will blink twice. Group address is now reset to default.
- Other devices will not be affected.

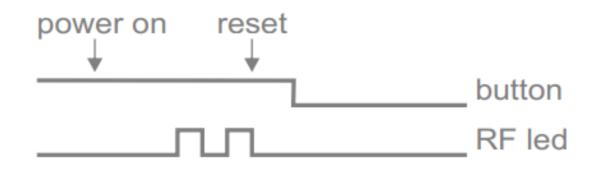

From: http://wiki.hiq-universe.com/ -

Permanent link: http://wiki.hiq-universe.com/doku.php?id=en:hiq\_hw:wm-1&rev=1669988841



Last update: 2022/12/02 13:47