2025/08/24 15:37 1/8 Wireless Modbus Relay

Wireless Modbus Relay

Wireless Modbus Relay




| Model number: | WR-1 |
|---------------|-----------------|
| Frequency: | ISM 868MHz (EU) |
| Dimensions: | 93x45x27 mm |


Applications

 Remote controlled relay. Act as modbus RTU slave. Optimal for long range, no hopping.

Installation and mounting

- Carefully open WR-1 module and configure serial communication with jumpers. (Default configuration is 9600bps, 8N1 with normal timeout)
- Place WR-1 module at least 10cm from other objects. Installation is not recommended inside metal cabinets.
- Connect RS485 terminals to WR-1 RS485 terminals
 - A A
 - ∘ B B
 - ∘ C GND
- Connect to 230V power supply
- Configure radio pairing

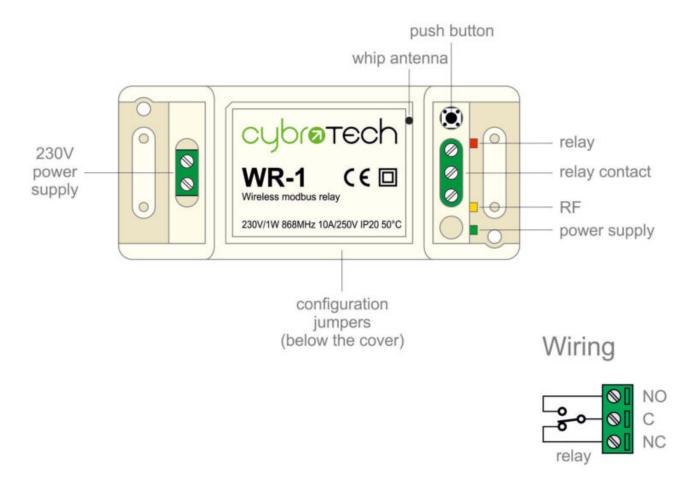

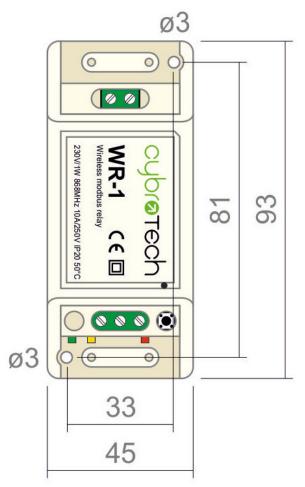

http://wiki.hiq-universe.com/ Printed on 2025/08/24 15:37

Features


- remote controlled relay
- act as modbus RTU slave
- very long range, no hopping
- up to 8 relays per network
- protected private connection
- multiple addressable groups

Technical specification

| Power supply: | 230V, 50/60Hz, 1W |
|------------------------|-------------------|
| Ingress protection: | IP20 |
| Operating temperature: | -2050°C |
| Storage temperature: | -4085°C |
| Relative humidity: | 085% n/c |

Terminals and wiring


| To power sensor | A B C | RS485 bus |
|-----------------|-------------|-----------|
| To power supply | L N | 230V AC |

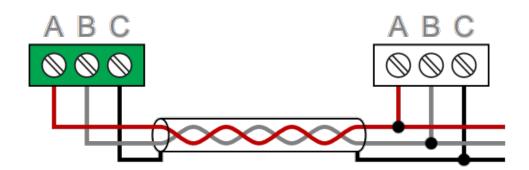

Last update: 2022/11/29 14:24

Serial configuration and timeout

- Available baudrates 2400, 9600, 19200, 38400 bps
- Data bits and parity 8N1, 7E1, 8E1, 8N2
- Max 64 bytes per transmition
- Integrated 240 Ohm termination resistor

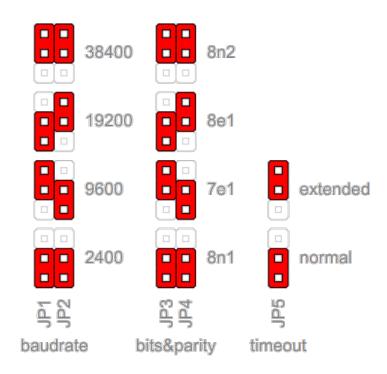

| | normal | extended |
|-------|--------|----------|
| 2400 | 25ms | 200ms |
| 9600 | 10ms | 100ms |
| 19200 | 5ms | 100ms |
| 38400 | 5ms | 100ms |


Radio pairing configuration

Create new secure group

- * turn on all devices as the same time
- * within 10 seconds, while RF LED is blinking, press and hold button on one of the devices
- * after a second, the new address is randomly generated and sent to all devices. RF LED will blink 3 times to confirm the new address.


http://wiki.hiq-universe.com/ Printed on 2025/08/24 15:37

2025/08/24 15:37 5/8 Wireless Modbus Relay

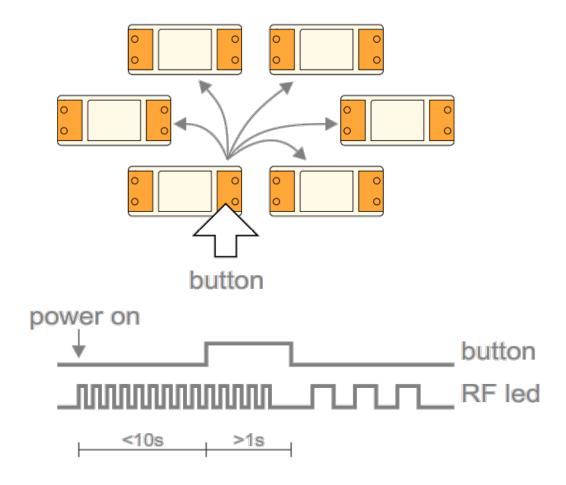


Add new device to the group

- * turn on the device
- * within 10 seconds, press and hold button on one of the existing devices
- * after a second, the existing group address is sent to the new device. RF LED will blink 3 times to confirm the address is sent.

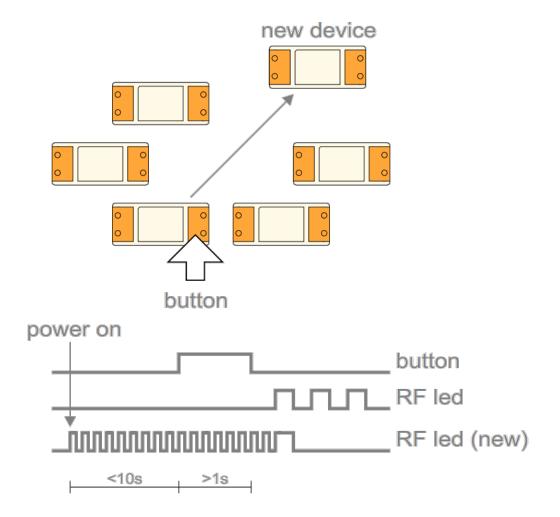

Examples

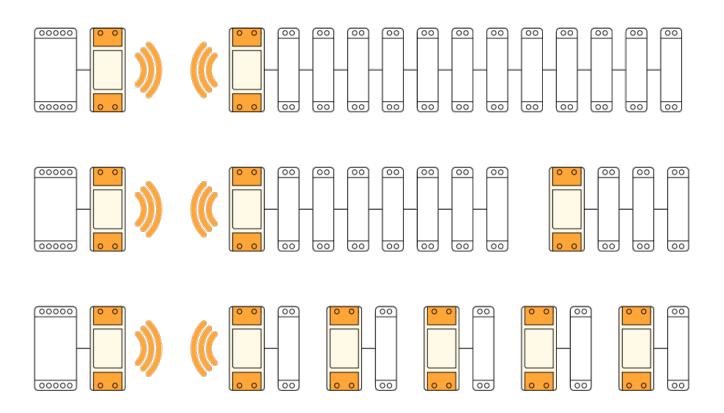



http://wiki.hiq-universe.com/ Printed on 2025/08/24 15:37

2025/08/24 15:37 7/8 Wireless Modbus Relay

Multiple groups

- * When the system has two or more separate Modbus lines, they should be configured as separate groups.
- * Each group has a single master and one or more slaves.
- * Groups can't talk to each other, but they share the same bandwidth.
- * Two masters may start transmitting at the same time causing collisions.
- * To reduce number of missed messages, keep the traffic low.

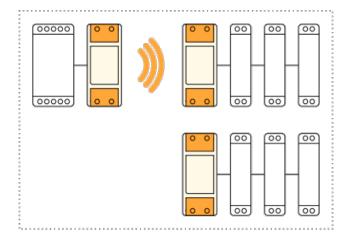

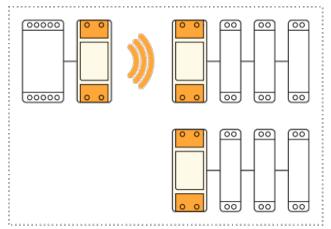


Connection check

- Press button shortly
- RF LED will blink shortly on each connected device
- Serial interface is unaffected



Factory reset

- · Hold button and turn the device ON
- RF led will blink twice. Group address is now reset to default.
- Other devices will not be affected.

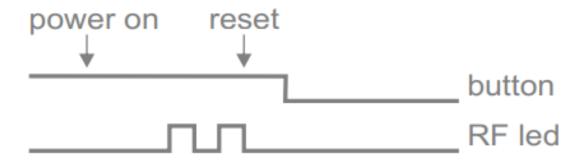

From:

http://wiki.hiq-universe.com/ -

Permanent link:

http://wiki.hiq-universe.com/doku.php?id=en:hiq_hw:wr-1&rev=1669731855

Last update: 2022/11/29 14:24

